



ENGINE DRIVEN GRASS COLLECTION SYSTEM

DESIGNED FOR:

Silver Eagle Series



2015-2017

MODEL #: 38621242 & 38621243

**Silver Eagle 2550KW, 2750EFI
2760KW, 2760EFI, 2772KW & 2772EFI**

OPERATOR'S MANUAL

ASSEMBLY • OPERATION • MAINTENANCE

MANUAL PART#: Q0509

GRASS COLLECTION SYSTEM

TABLE OF CONTENTS

SECTION	PAGE	SECTION	PAGE
Safety	2	2-10 Length of Hose Adjustment	15
Safety Alert Symbols	3	2-11 Upper Hose Installation	15
Warranty	4	2-12 Lower Hose To Blower Cone Installation	15
I INTRODUCTION AND DESCRIPTION	5	2-13 Lower Hose To Boot Installation	15
1-1 Introduction	5	2-14 Impeller Blade Removal/Replacement	16
1-2 Description	5	2-15 Weight Kit Installation	17
II INSTALLATION FOR USE	6	2-16 Throttle Kit Installation	18
2-1 Mower Preparation	6	Exploded Drawing Views and Parts Lists	19-20
2-2 Rear Frame Bracket Installation	7	III OPERATING INSTRUCTIONS	21
2-3 Engine Mount Arm Assembly Installation	8	3-1 General Safety	21
2-4 Blower Cone Installation	9	3-2 Operation & Tips On Mowing	21
2-5 Main Frame Assembly and Leg Installation	9-10	3-3 Disengagement Of The Blower	21
2-6 Box Handle Assembly Installation	10-12	3-4 Unloading The Collection System	21
2-7 Aluminum Grass Container Installation	12	IV MAINTENANCE	21
2-8 Dump Mechanism Adjustment	12	4-1 Maintenance Checklist	21-22
Aluminum Grass Container Exploded View	13	V PARTS AND SERVICE	22
2-9 Boot To Mower Deck Installation	14	5-1 Parts And Service Information	22
		Safety Decals	23
		Torque Specifications	24

Safety

1. Read the operator's manual carefully and familiarize yourself with the proper use of your attachment. Do not allow anyone who is not acquainted with the Safety Instructions to use your attachment.
2. Know the controls and how to stop quickly. **READ THE OPERATOR'S MANUAL!**
3. Do not allow children to operate the vehicle. Do not allow adults to operate it without proper instruction.
4. Be especially watchful of children and pets darting into the area while operating.
5. Keep your eyes and mind on your unit while mowing or operating your attachment. Don't let others distract you.
6. Do not attempt to operate your unit or mower when not in the driver's seat.
7. Always stop unit when emptying the container.
8. Stop unit, shut off deck attachment, set parking brake, shut off mower engine and remove spark plug wire before removing clogs, removing or replacing hose, boot, blower cone, or performing any maintenance.
9. Mow across the face of slopes (not steeper than 10 degrees); never up and down the face.
10. It is recommended that the container be kept only half full when negotiating any slopes. Start mowing on slopes when the container is empty.
11. Inspect your lawn and remove any foreign objects before mowing. Never deliberately run the mower across any foreign object.
12. Wear ear protection if the noise level is offensive.
13. Wear eye protection to prevent debris from damaging your eyes.

SAFETY


WARNING! NEVER operate the mower unless the discharge guard and either the deflector assembly or the vacuum collector adapter are fastened securely in place.

WARNING! Do not work around the mower deck boot or the blower area until you are certain that the mower blades and the blower impeller have stopped rotating.

WARNING! To avoid serious injury, perform maintenance on the vacuum collector; **ONLY AFTER STOPPING THE MOWER'S ENGINE AND WAITING FOR ALL MOVING PARTS TO COME TO A COMPLETE STOP.** Set the parking brake. Always remove the ignition key before beginning maintenance.

WARNING! For your own personal safety, **ALWAYS** mow **ACROSS** the face of slopes and **NEVER UP and DOWN** the face. **NEVER** attempt to mow excessively steep slopes, and use caution when turning on any slope.

Safety Alert Symbol

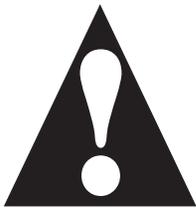

This Safety Alert Symbol means: **“ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!”**

This symbol is used to call attention to safety precautions that should be followed by the operator to avoid accidents. When you see this symbol, carefully read the message that follows and heed its advice. Failure to comply with safety precautions could result in death or serious bodily injury.

Safety Signs

The signal words **DANGER**, **WARNING**, and **CAUTION** are used on the equipment safety signs. These words are intended to alert the viewer to the existence and the degree of hazard seriousness.



White letters on **RED**

This signal word indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.



Black letters on **ORANGE**

This signal word indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

It may also be used to alert against unsafe practices.



Black letters on **YELLOW**

This signal word indicates a potentially hazardous situation exist which, if not avoided, could result in minor injury or property damage.

It may also be used to alert against unsafe practices.

PECO LIMITED WARRANTY FOR NEW PRODUCTS

A. WHAT IS UNDER WARRANTY?

PECO extends the following warranties to the original purchaser of each new PECO consumer product subject to the following limitations.

- 1. PRODUCT WARRANTY:** Any part of any consumer product, which is defective in material or workmanship as delivered to the purchaser will be repaired or replaced, as PECO elects, without charge for parts or labor, if the defect appears within 12 months from the date of delivery of the product to the original purchaser.
ALL DEFECTIVE PARTS MUST BE RETURNED TO PECO FOR INSPECTION TO DETERMINE VALIDITY OF WARRANTY CLAIMS. Freight and mailing will be borne by the customer.
- 2. PARTS REPLACED DURING WARRANTY:** Any new PECO part which is furnished in performance of this warranty and is defective in material or workmanship as delivered to the purchaser will be repaired or replaced, as PECO elects, without charge if the defect appears within 90 days from the date of installation of such part or before the expiration of the original warranty period, whichever is later.

B. SECURING WARRANTY ADJUSTMENTS.

Call PECO for Return Authorization. Damaged or broken parts other than engines or batteries, must be returned to New PECO, Inc. 10 Walden Dr., Arden, NC 28704 before any warranty adjustment can be authorized. At the time of requesting warranty adjustment, the purchaser must present evidence of the date of delivery of the product. The purchaser shall pay any charge for the product to and from Arden, NC.

C. ITEMS NOT COVERED BY PECO WARRANTY.

Engines and batteries attached to PECO products are covered under a separate warranty by the respective manufacturer.

D. UNAPPROVED ALTERATION OR MODIFICATION.

All obligations of New PECO, Inc. under this warranty shall be terminated if products are altered or modified in ways not approved by New PECO, Inc.

E. ACCIDENTS AND NORMAL MAINTENANCE.

The warranty covers only defective material and workmanship. It does not cover depreciation or damage caused by normal wear, accident, improper use or abuse of products. The cost of normal maintenance and normal replacement of service items such as belts, cutting blades, hoses, etc., which are not defective shall be paid for by the purchaser.

F. NO REPRESENTATIONS ADDITIONAL WARRANTIES, DISCLAIMER.

Neither New PECO, Inc. nor any company affiliated with it makes any warranties, representations or promises as to the quality of performance of its products other than those set forth herein. Except as described above, New PECO, Inc. makes no other warranties **AND SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY.**

G. ANY MACHINE USED FOR RENTAL PURPOSES ARE GUARANTEED FOR 45 DAYS FROM DATE OF ORIGINAL SALE ONLY.

H. REMEDIED EXCLUSIVE.

The only remedies the purchaser has in connection with the breach or performance of any warranty on New PECO, Inc. consumer products are set forth above. In no event will PECO be liable for special incidental or consequential damages.

1. NO SERVICE CENTER WARRANTY.

The selling Service Center makes no warranty on his own on any item warranted by New PECO, Inc. unless he delivers to purchaser a separate written warranty certificate specifically warranting the item. The dealer has no authority to make any representation or promise on behalf of PECO or to modify the terms of this warranty in any way.

Section I - INTRODUCTION AND DESCRIPTION

1-1 Introduction

We are pleased to have you as a PECO customer. Your collection system has been designed to give you a low maintenance, simple, and effective way to collect the grass clippings from your mower. This manual is provided to give you the necessary instructions to properly mount and operate the collection system on your mower. Please read this manual thoroughly. Understand what each control is for and how to use it. Observe all safety decal precautions on the machine and noted throughout the manual.

NOTE: all references made to right, left, front, rear, top or bottom are as viewed from the normal operator's position on the mower.

1-2 Description


The grass collection system is designed for turf maintenance where there is a need to collect the grass clippings as the mower cuts the turf. It is also used for picking up leaves and in pre-season and post-season clean-up. The engine/blower/blade assembly is mounted on the right side of the unit. The blower draws grass clippings from the discharge area of the cutter deck back to the 12 cubic foot aluminum box at the rear portion of the mower frame. The operator can engage the blower by starting the external engine. Once the container is full of clippings, the operator can easily push and raise the lift handle, releasing the container's rear door and the container will pivot towards the ground.



2-1 Mower Preparation

Remove the rear bumper and bumper hardware from mower. Next, remove the top two 3/8"-16 x 2-1/2" HHCS and lock-nuts from the lower section of the ROPS. Set aside or discard as you will no longer need these parts. Refer to Figure 2-1a.

Figure 2-1a

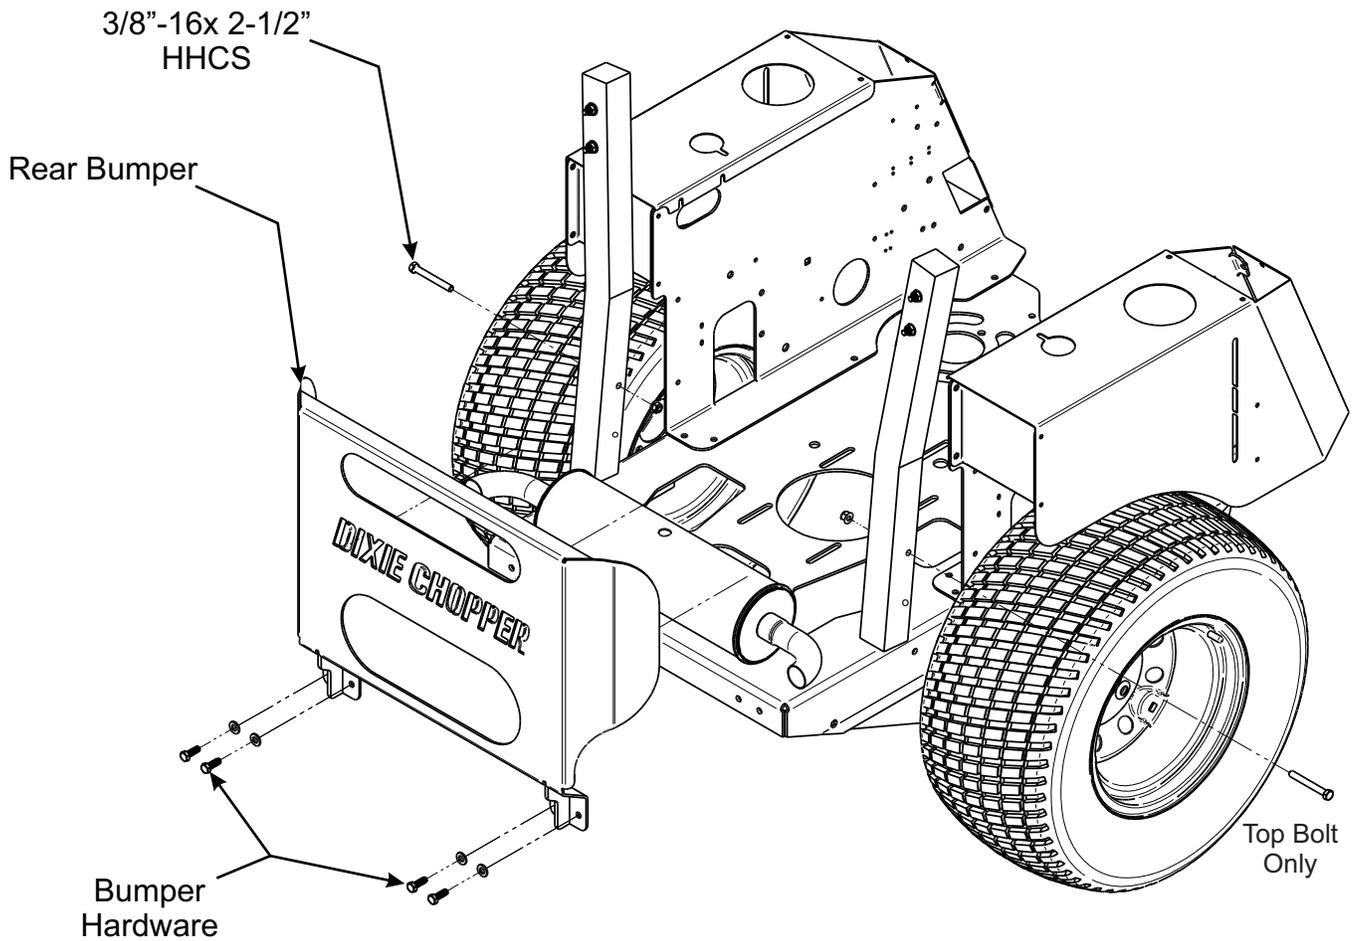

2-2 Rear Frame Bracket Installation

Position the Left Frame Bracket P#(B0792) against the rear of the chassis and attach with (2) P#(K1192) 3/8"-16 x 1-1/4" HHCS, (2) P#(K0047) 3/8" Flat washers, (2) P#(K2038) 3/8" Ny-Flange Locknuts, (1) P#(K1234) 1/2"-13 x 2" HHCS, (1) P#(K0055) 1/2" Flat Washer and (1) P#(K2012) 1/2"-13 Ny-Flange Locknut and repeat on the Right Frame Bracket P#(B0791).

Next, attach Rear Frame Bracket P#(B0773) to the Left and Right Frame Brackets using (2) P#(K1154) 5/16"-18 x 1" HHCS, (2) P#(K0042) 5/16" Flat Washers and (2) P#(K2516) 5/16" Ny-Flange Locknuts. Refer to figure 2-2b

Figure 2-2a


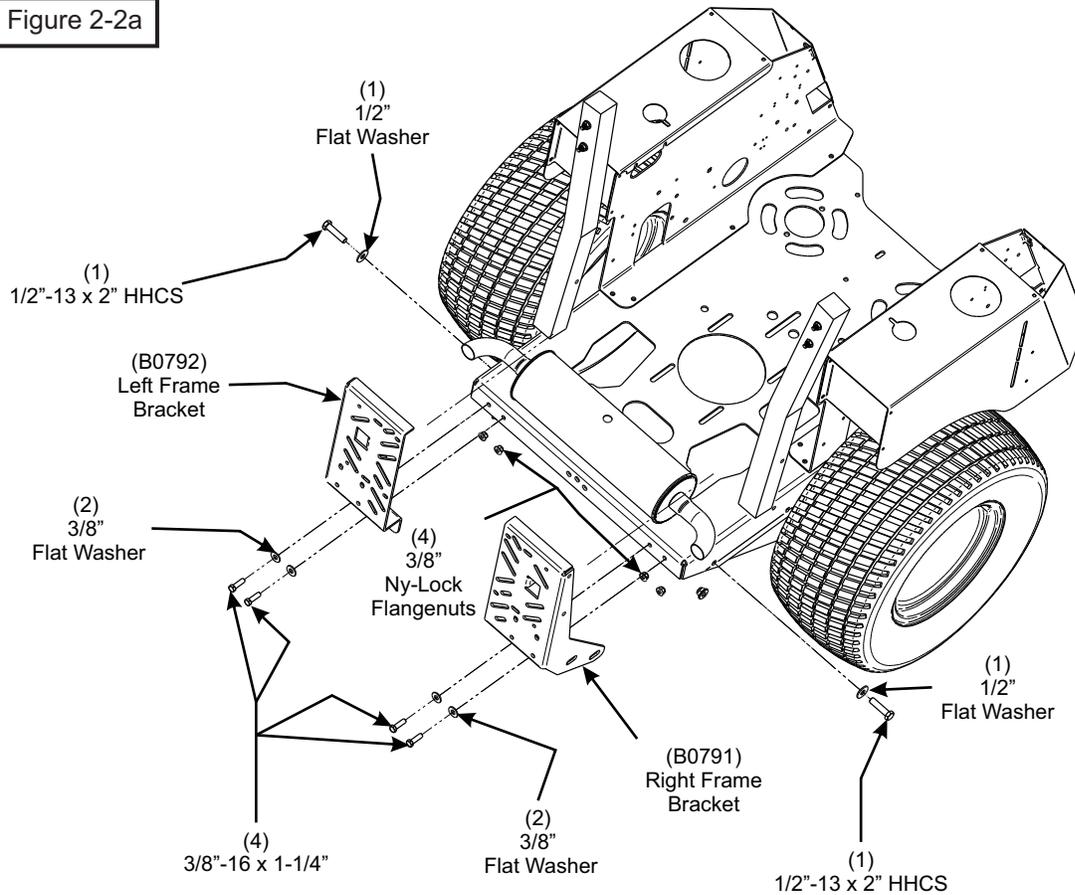


Figure 2-2b

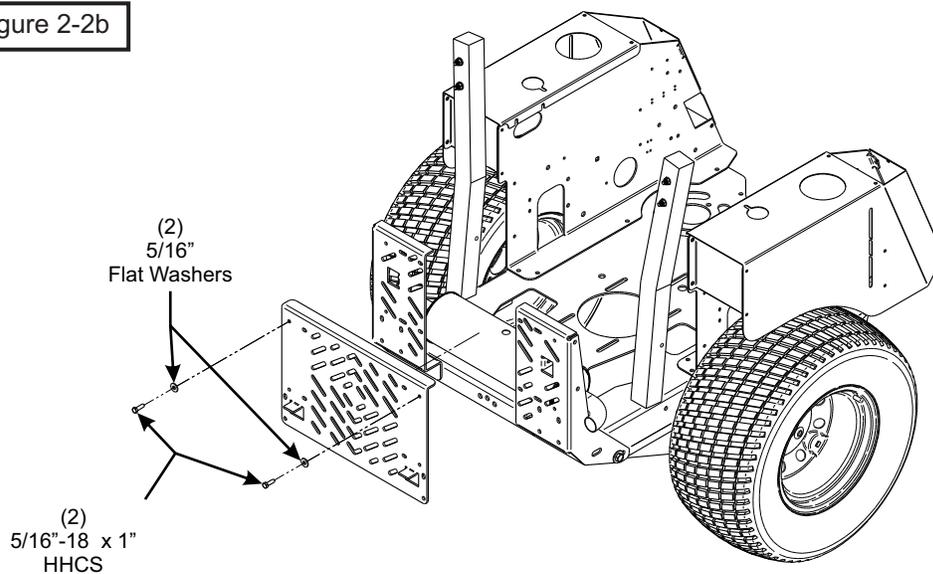

2-3 Engine Mount Arm Assembly and Engine/Blower/Blade/Assembly Installation

Secure the Outer Engine Mount Tube P#(B1117) to the Rear Frame Bracket, with holes oriented vertically, using (2) 3/8-16 x 2-1/8" x 3-3/8" U-Bolts P#(K1460) and (4) 3/8"-16 Ny-Flange Locknuts P#(K2038) as shown in figure 2-3a.

Next, insert the Engine Mount Arm Assembly P#(A0277) into the Outer Engine Mount Tube and secure using (1) Detent Pin P#(J0248). Refer to figure 2-3b.

Position the Engine/Blower/Blade Assembly P#(A639) on top of the Engine Mount Arm Assembly and secure using (4) 5/16"-18 x 1-1/2" HHCS P#(K1157) and (4) 5/16"-18 Ny-Flange Locknuts P#(K2516). Refer to figure 2-3b.

Figure 2-3a


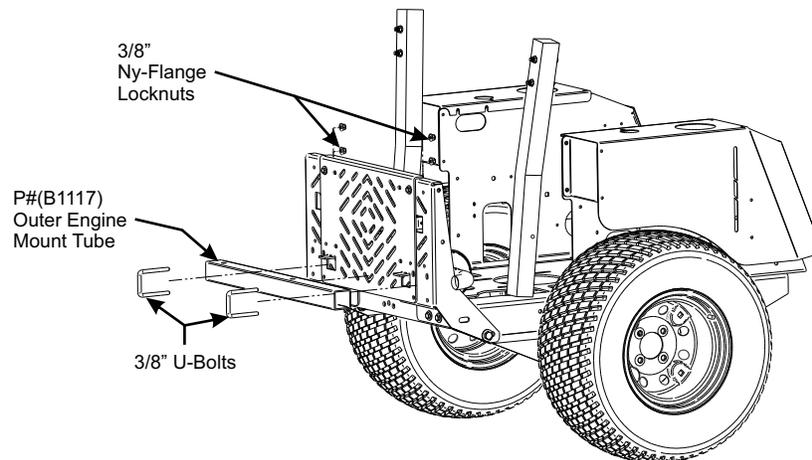



Figure 2-3b

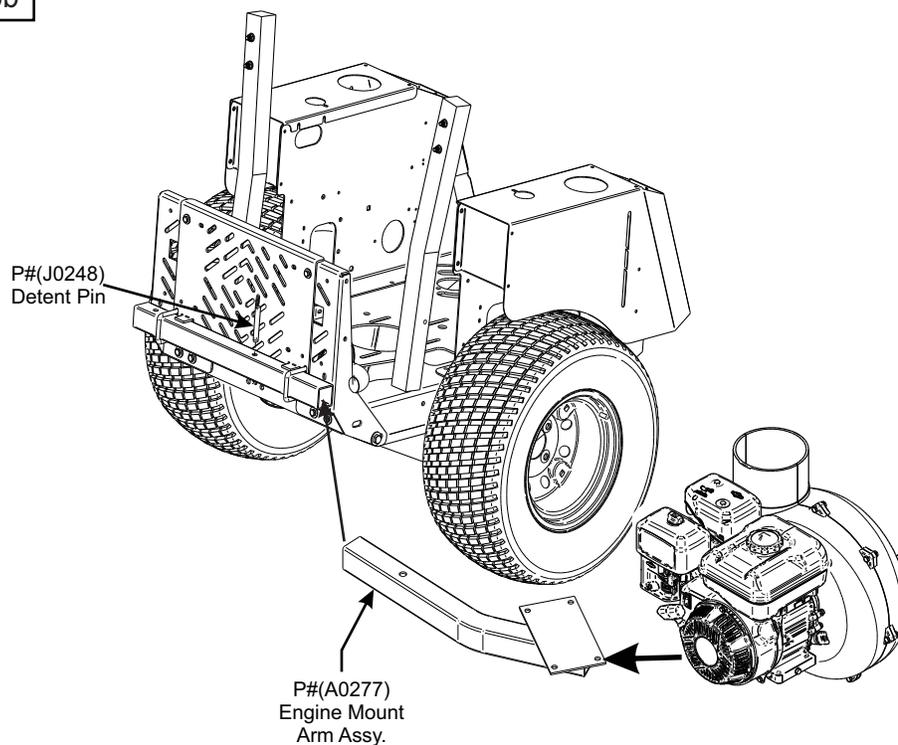

2-4 Blower Cone Installation

Thread (1) 5/16"-18 jam nut P#(K0120) onto the end of each (2) 5/16"-18 x 2-1/2" HHCS P#(K0125). Now partially thread the bolts into each of the two tabs located on the blower housing. Place Blower Cone P#(E6009) so the two tabs line up with the bolts then tighten completely. See Figure 2-4.


Figure 2-4

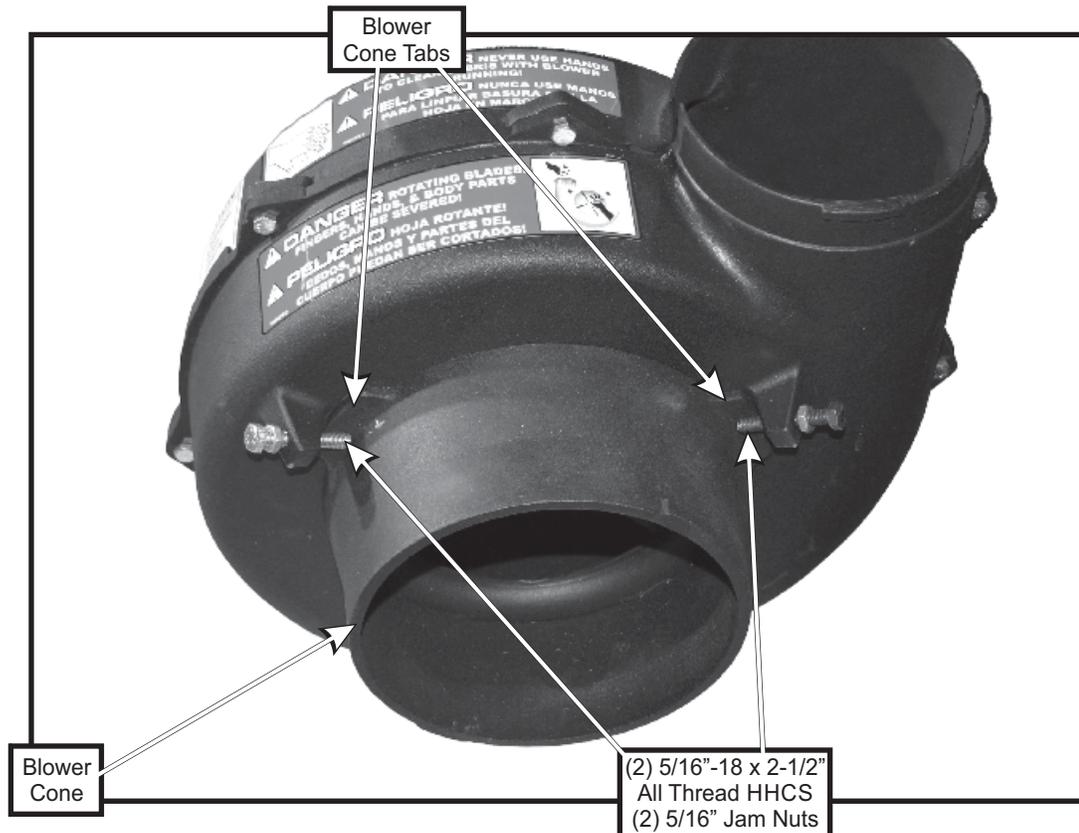

2-5 Main Frame and Main Frame Leg Assembly Installation



Install the Main Frame Legs P#s(B0978 & B0979) by attaching to the ROPS using (1) 3/8"-16 x 2-3/4" HHCS P#(K1021) and (1) 3/8"-16 Ny-Flange Locknut P#(K2038) per side. Secure the back section to each side of the Rear Frame Brackets using (2) 3/8"-16 x 1" HHCS P#(K1191) and (2) 3/8"-16 Ny-Flange Locknuts P#(K2038). Refer to Figure 2-5a.

Figure 2-5a

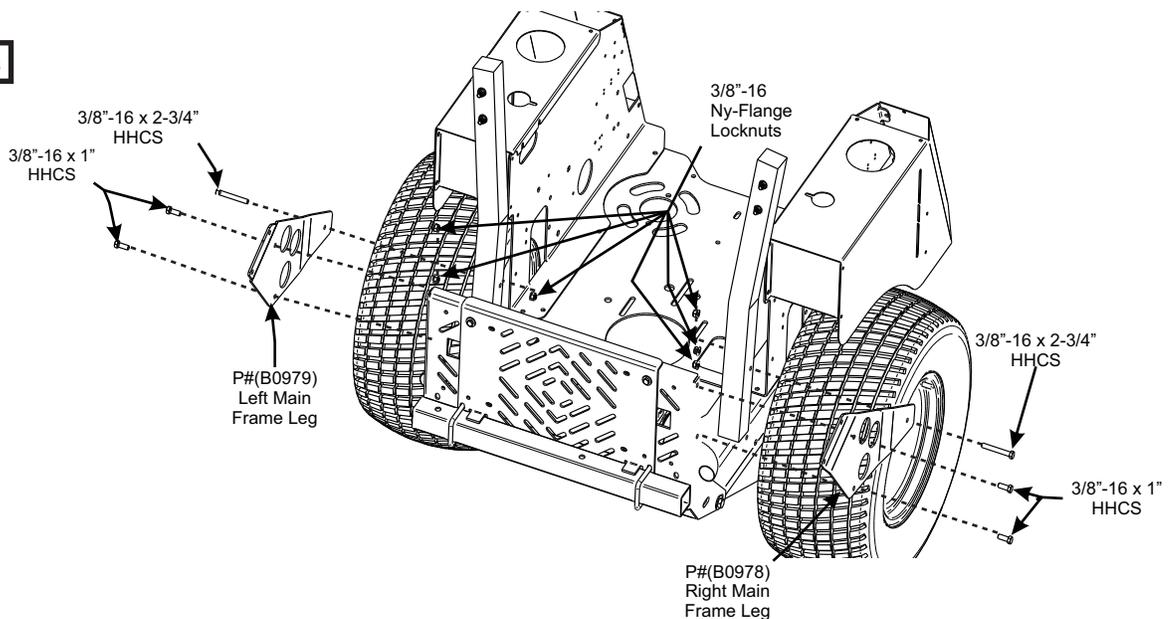

Attach the Main Frame Assembly P#(A1195) to the Top of the Frame Legs as shown using (4) 3/8"-16 x 1" HHCS P#(K1191) and (4) 3/8"-16 Ny-Flange Locknuts P#(K2038). Refer to Figure 2-5b


Figure 2-5b

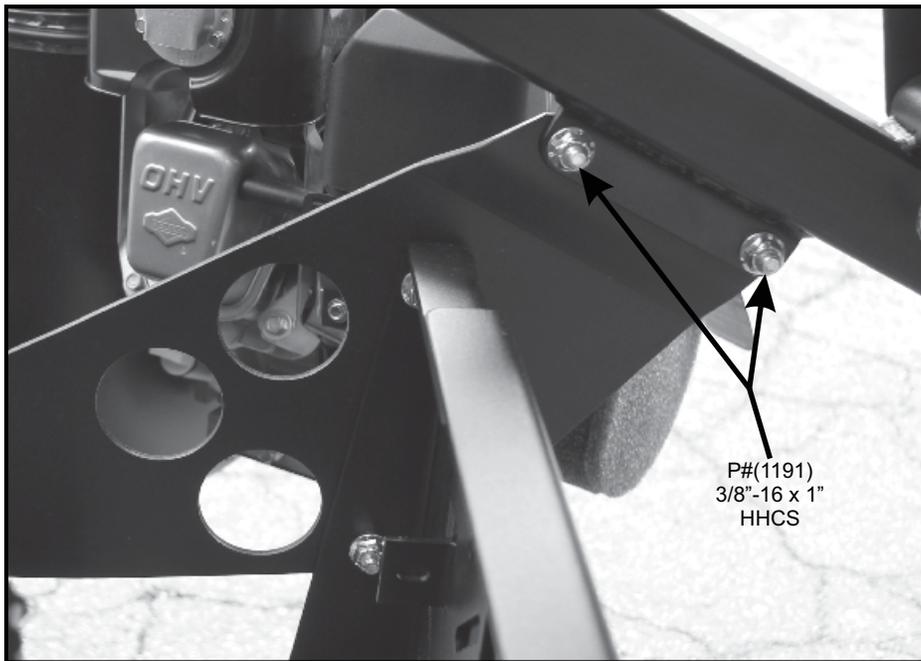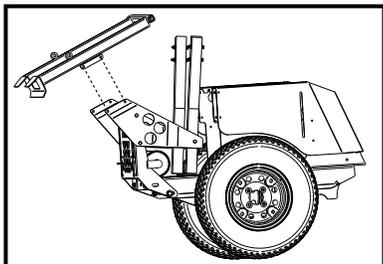

2-6 Box Handle Assembly Installation

NOTE: Before continuing the lift handle installation, have someone assist you in turning the grass container upside down. Insert (1) 3/8"-16 x 2" HHCS P#(K1208) into the Box Handle Assy. P#(A0897), and secure with (1) 3/8"-16 flange nut P#(K1215). Thread the flange nut onto the bolt upside down, as shown in Figure 2-6a.

Figure 2-6a

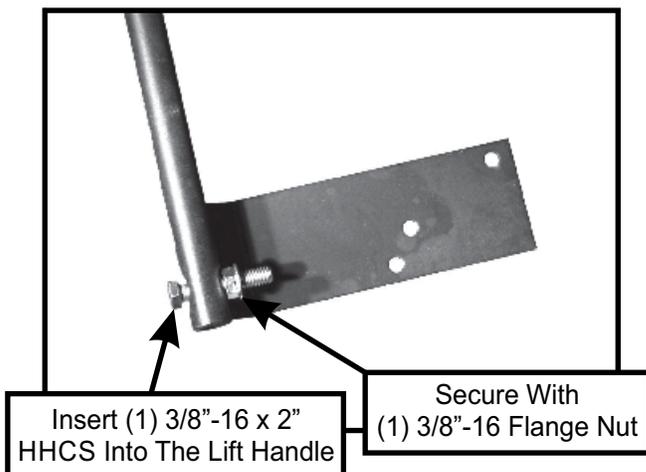

Slide the lift handle through the slot on the handle mount bracket. Insert the lift handle into the box frame as shown in Figure 2-6b, and secure using (1) 3/8"-16 flange nut P#(K1215) on the inside of the container as shown in Figure 2-6c.

Figure 2-6b



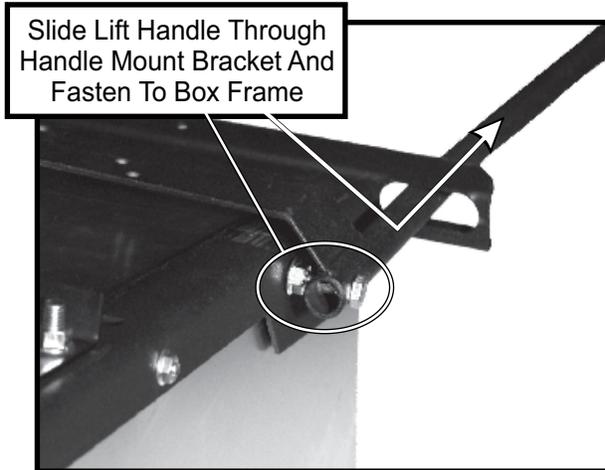


Figure 2-6c

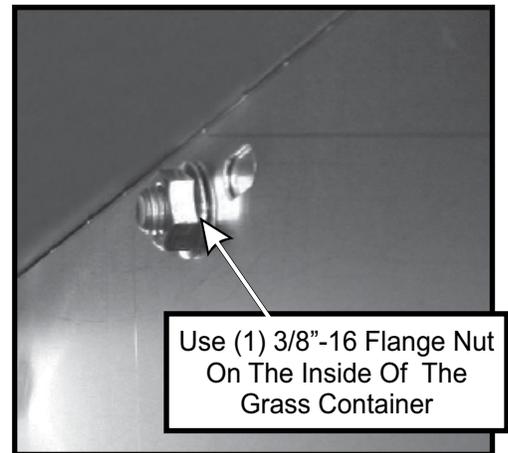

Fasten the Ball Joint P#(K1442) to the end of the Latch Rod P#(A0620). Tighten the Ball Joint to approximately half way down the threads on the Latch Rod. Attach the Ball Joint to the Latch Hook as shown in Figure 2-6d, using (1) 5/16"-24 Hex Nut P#(K1444) and (1) 5/16" Lock Washer P#(K0043).

Figure 2-6d

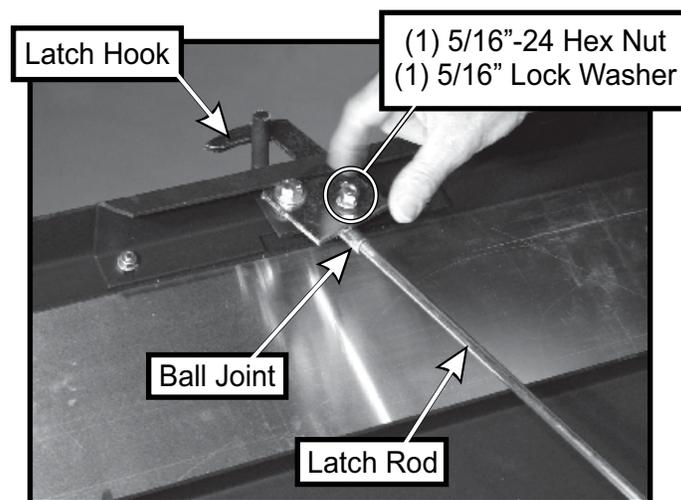

Attach the other end of the Latch Rod to the Lift Handle, as shown in Figure 2-6e. Attach one end of the Spring P#(J0176) to the Lift Handle and the other end of the Spring to the Handle Mount Bracket as shown in Figure 2-6f. Adjust the Ball Joint up or down on the Latch Rod threads until the Latch Hook closes completely. After adjusting the Latch Hook, secure the Latch Rod to the Lift Handle using (1) Cotter Pin P#(K0094).

Figure 2-6e


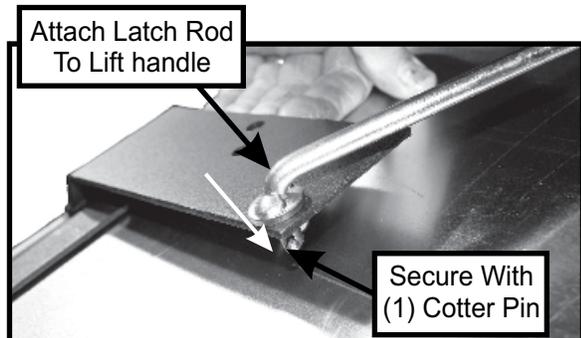


Figure 2-6f

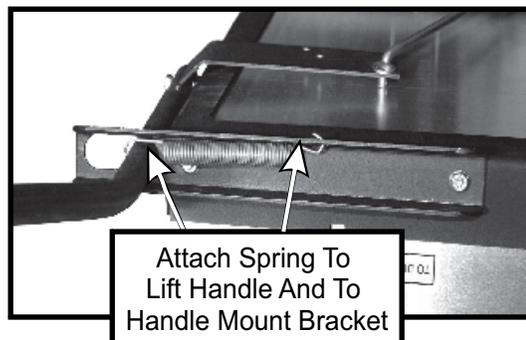

2-7 Aluminum Grass Container Installation

NOTE: It is recommended that someone assist in mounting the container. Lower the container onto the frame while inserting the Pivot Pins P#(K0172) through the holes. Insert the pins from the outside to the inside. Secure with (1) 5/8" Washer P#(K0058) and (1) 5/32" x 2-5/8" Hair Pin Clip P#(K0088) per pivot pin (Figure 2-7). Reattach the bottom ends of the door opening linkages to the main frame by using (1) Rue-Ring cotter pin P#(K1437) per side. To test the functionality of the dump mechanism, pull the lift handle away from the unit, and lift upward. The door of the container should open and the box should pivot clockwise towards the ground.

Figure 2-7


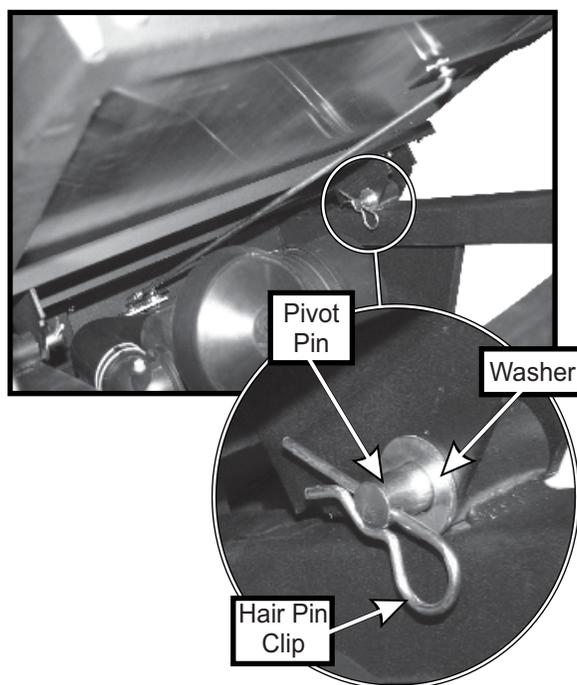



Figure 2-8

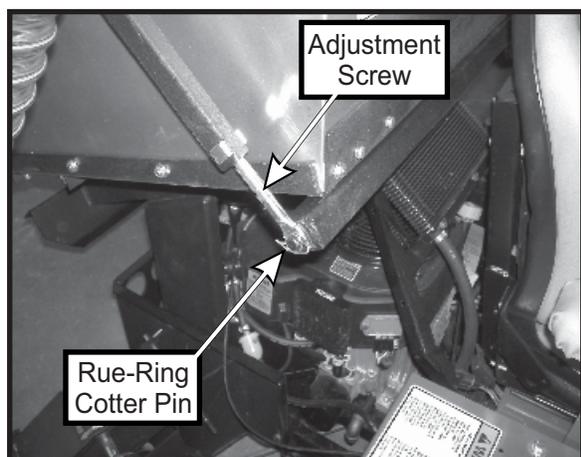

2-8 Dump Mechanism Adjustment

The linkage may be adjusted in two places, at the Adjusting Screw P#(K1435) and the latch assembly items. See page 14 for visual clarification. To change the door closure tightness, screw the adjusting screw (Figure 2-8) in or out. To adjust the latch, change the length of the latch rod by screwing the latch adjusting ball joint in or out. The latch hook pivot should be in the middle of the slot in the latch hook pivot plate. Slide the pivot back or forth and then re-tighten.

**ALUMINUM GRASS
CONTAINER ASSEMBLY
EXPLODED VIEW**

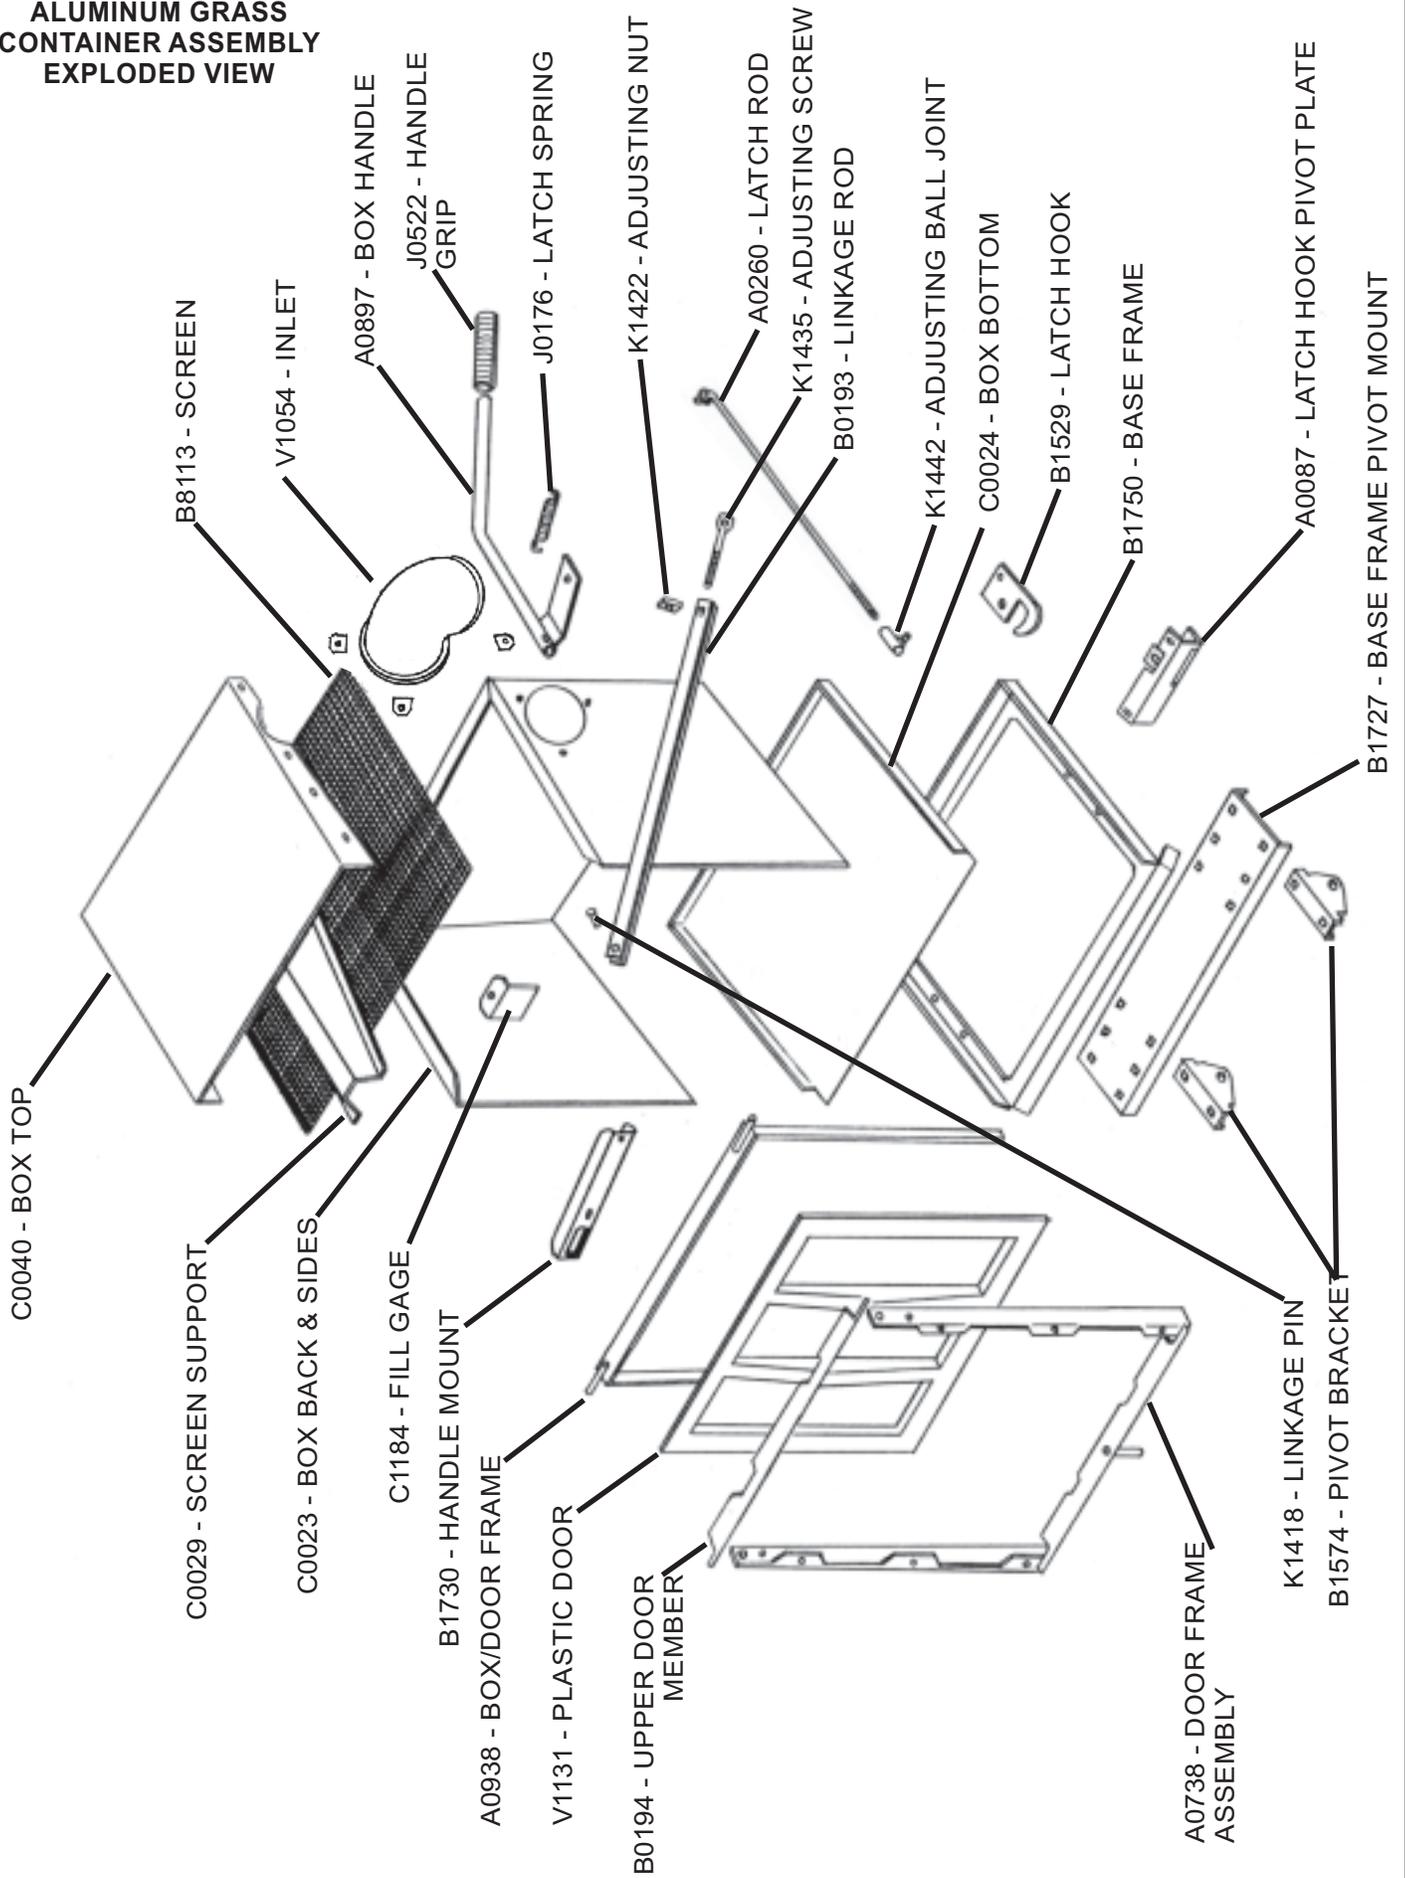


2-9 Boot To Mower Deck Installation

NOTE: Remove all grass deflector and/or mulching hardware from the mower deck before proceeding.

Position the Boot Plate P#(B0775) onto the top of the Aluminum Boot P#(E0023) as shown in Figure 2-9a. Secure the Boot Plate to the boot using (2) 3/8"-16 x 1" Carriage Bolts P#(K1182) and (2) 3/8"-16 Ny-Flange Locknuts P#(K2038). Insert the bolts from the inside of the boot so that the locks nuts are on top of the Boot Plate. This will prevent grass clipping from collecting on the bolt threads. Position the Deck Mount Plate onto the top of the mower deck as shown in Figure 2-9a. Secure the deck mount plate to the mower deck using (2) 3/8"-16 x 1" carriage bolts P#(K1182) and (2) 3/8"-16 Ny-Flange Locknuts P#(K2038). Insert the bolts from the underside of the mower deck.

NOTE: Do not tighten hardware until boot has been installed to mower deck.


Figure 2-9a

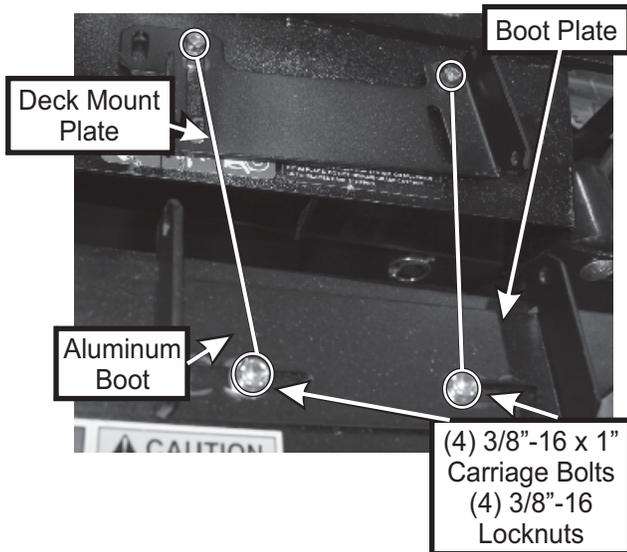

Silver Eagle Boot Plate Mounting Locations


Refer to Figure 2-9b for boot plate mounting locations.

Figure 2-9b

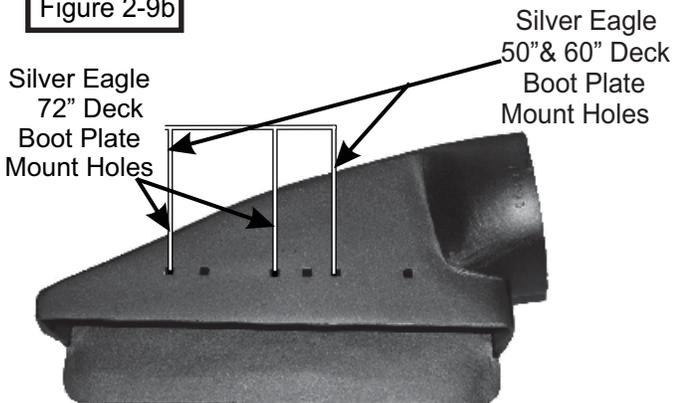

Silver Eagle Deck Plate Mounting Locations


Refer to Figure 2-9c for Silver Eagle deck plate mounting locations.

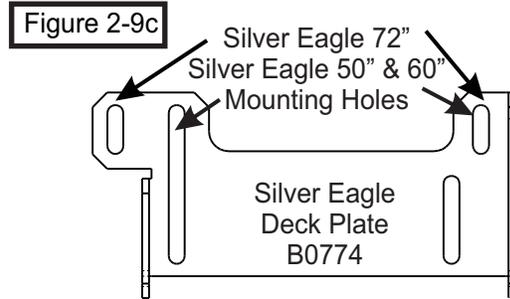

Align the holes in the Boot Plate with the holes in the Deck Mount Plate. Insert the Boot Rod P#(B0333) into the mounting holes and secure with (1) Hair Pin Clip P#(K0099). Refer to Figure 2-9d.


With all the carriage bolts still finger tight, use the slots in the deck mount plate and the boot plate to position the boot so that the front inside corner of the boot is flush to the front outside edge of the mower deck. Also check for clearance between the mowers blade and the bottom edge of the boot. Once the boot is positioned correctly, tighten all the hardware.

Figure 2-9d

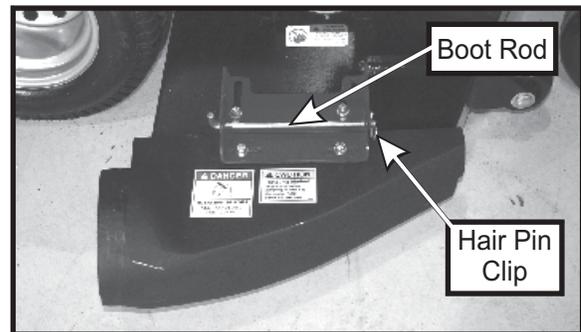

On 72" decks position and secure the Discharge Mount Plate P#(B0793) and on 60" decks Discharge Mount Plate P#(B0985) to the mower deck using (1) 3/8"-16 x 1" Carriage Bolt P#(K1182) and (1) 3/8"-16 Ny-Flange Locknut P#(K2038) as shown in Figure 2-9e.

Figure 2-9e

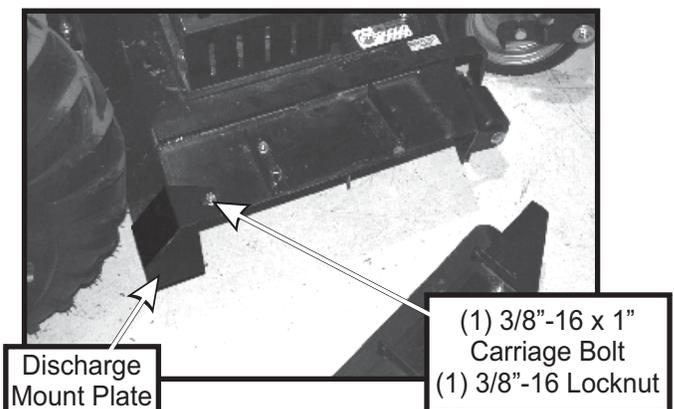

2-10 Length Of Hose Adjustment

The hoses in steps 2-11 and 2-12 must be cut to fit your machine. Follow steps 2-11 and 2-12. do not cut the hoses until you have tried to fit them on your machine. Remember that the hoses have to be long enough to adjust for the blower assembly's movement as well as allow for enough clamping surface between the inlet, blower assembly, and the deck boot.

2-11 Upper Hose Installation

Slide a Spirofil Hose Clamp P#(J0060) onto both ends of the 6" upper hose (Figure 2-11). Then slide one end of the 6" hose onto the plastic inlet P#(V1054) on the right side of the aluminum box assembly. Make sure there is about a two-inch overlap between the hose end and plastic inlet. Secure the hose ring with the locking pin. Proceed to slide the opposite end of the 6" hose onto the outlet of the blower assembly. See (Figure 2-11) for details. Make sure both ends of the hose are clearly attached to the inlet and the blower assembly inlet. Tighten the hose clamps.


2-12 Lower Hose To Blower Cone Installation

Slide a Spirofil Hose Clamp P#(J0080) over both ends of the lower hose. Then proceed to slide the lower hose onto the blower cone. Tighten the hose clamp. The assembly should look like Figure 2-11.

2-13 Lower Hose To Boot Installation

Take the unattached end of the lower hose and slide it over the circular end of the boot. Use the lower hose clamp to secure the hose to the boot (Figure 2-11). Tip: Before securing clamp rotate hose counter-clockwise (away from yourself) approximately 1" to aid in retaining boot to mower deck.

Figure 2-11

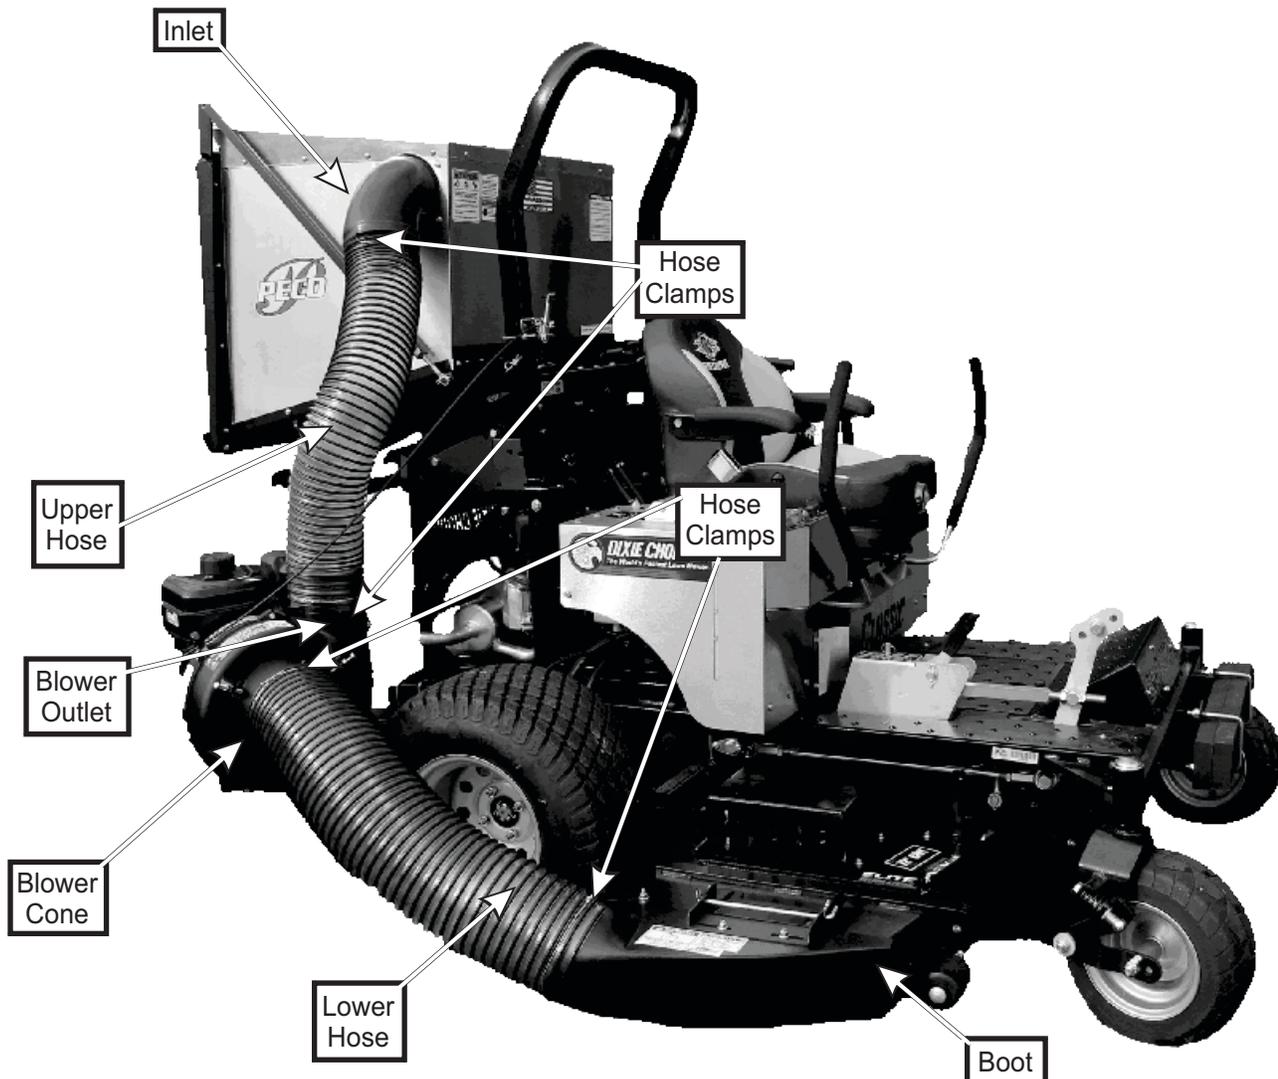

2-14 Impeller Blade Removal/Replacement

To gain impeller blade (#1) access, first remove the blower cone (#2) from the blower housing, located on the PTO assembly P#(A1821), by removing two blower cone bolts and nuts (#3). Next, remove the blower housing front (#4) by removing seven bolts and nuts (#5) around the outer housing edge. Refer to Figure 2-14.


To Remove: First, remove one 3/8"-16 x 1-1/2" HHCS P#(K1211) (#6), one taper-lock bushing washer P#(K0278) (#7) and one spacer bushing P#(S3242) (#8) from the taper-lock bushing (#9). See Figure 2-14. Next, remove two 1/4"-20 x 1" HHCS (#10) and place them into the threaded holes (#11) of the taper-lock bushing P#(S4302). Last, gradually thread each bolt evenly into the taper-lock bushing, forcing the blade to break-away from the taper-lock bushing.

Tips on removing impeller blade;

- 1 - Try carefully hitting the base of the impeller blade (#1), between each vein (#12), with a rubber mallet to loosen the taper-lock bushing hold.
- 2 - Spray break-free lubricant into the surrounding areas of the taper-lock bushing (#9) and repeat Tip 1.

To Replace: First, place the impeller blade (#1) over the drive shaft (#13). Next, slide the taper-lock bushing (#9) on to the drive shaft and into the impeller blade, aligning the **non-threaded** holes (#14) of the taper-lock bushing to the threaded holes of the impeller blade. Then, fasten by using two 1/4"-20 x 1" HHCS (#10), one spacer bushing (#8) one taper lock bushing washer (#7), and one 3/8"-16 x 1-1/2" HHCS (#6). Torque all bolts to the specifications located in the chart towards the back of this manual. Last, rotate the impeller blade to ensure that the blade is clear of contact on all sides of the blower housing.

Figure 2-14

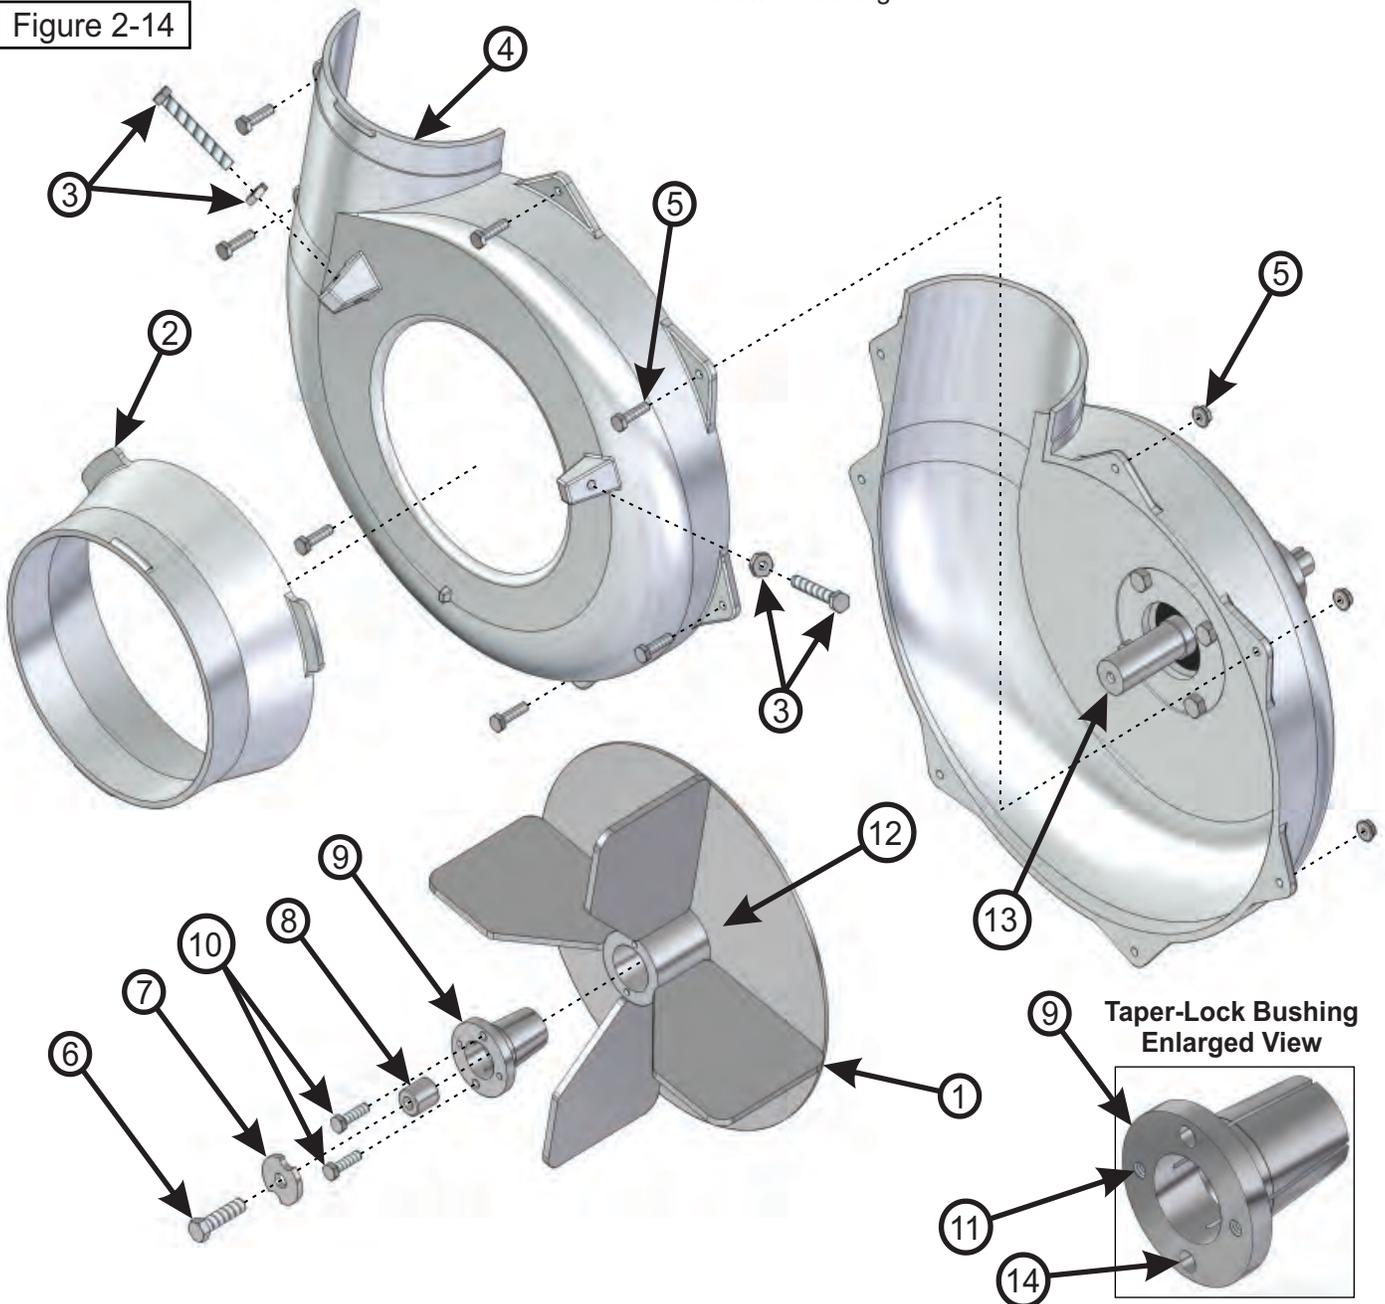


2-15 Weight Kit Installation

NOTE: It is recommended that someone assist you in the weight kit installation procedure.

Attach the left weight bracket P#(B0962) and right weight bracket P#(B0963) to the front frame of the mower. Insert each weight bracket onto the frame tube. Secure each weight bracket using (1) 3/8"-16 x 2-1/4" x 1-3/4" U-Bolt P#(K1436) and (2) 3/8"-16 Ny-Flange Locknuts P#(K2038). Leave the hardware finger tight so the position of the weight brackets can be adjusted left or right if necessary. Refer to Figure 2-15.

Using two people, lift the weight bars P#(B2220) into position. Secure the weight bars to the left and right weight brackets using (2) 1/2"-13 x 4-1/4" u-bolts P#(K0331) and (4) 1/2"-13 Ny-Flange locknuts P#(K2012). **NOTE:** Before tightening the u-bolts, make sure the weight bars are centered between the weight brackets.

Figure 2-15

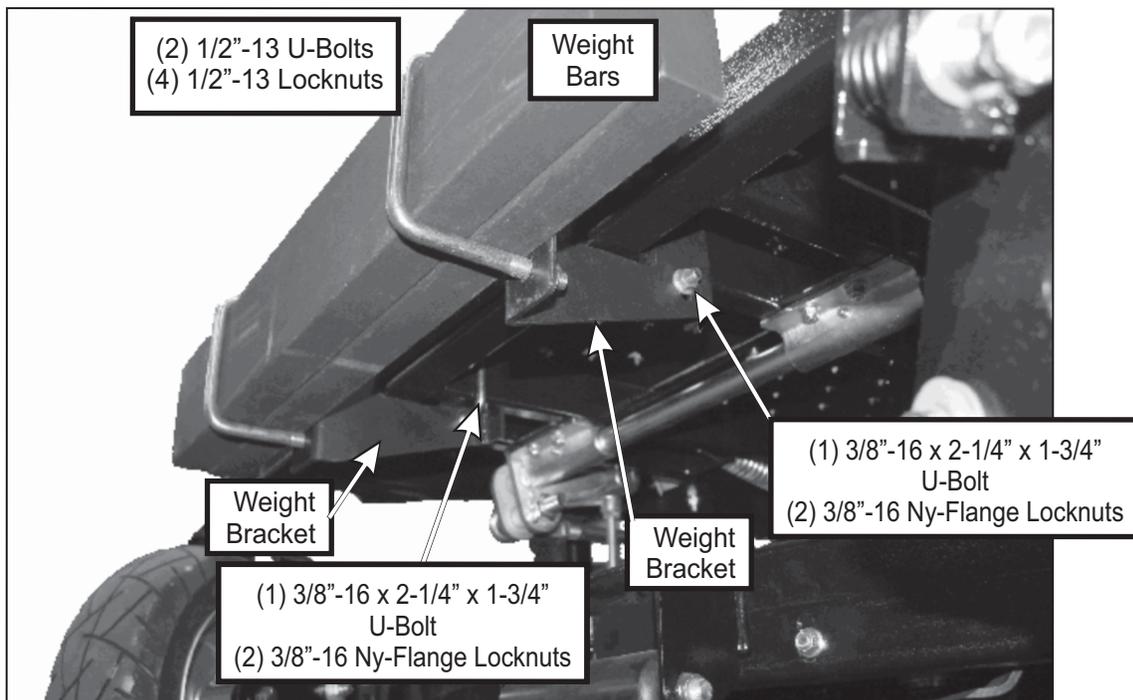

2-16 Throttle Installation

To install the throttle kit assembly to the ROPS (roll over protection system), place the 3/8" U-Bolt P#(K0136) onto the ROPS with the threads facing the front of the mower. Next slide on the throttle mount plate assembly P#(A0666) with the rivets also facing toward the front of the mower. Tighten the throttle mount plate assembly securely to the ROPS using (2) 3/8" 16 Ny-Flange Locknuts P#(K2038) (Figure 2-16a). With the throttle cable facing toward the engine/blower/blade assembly, place the throttle base plate over the rivets, Slide the throttle cable kit to the right, moving the smaller end of the slot over the rivets. When positioned correctly, the throttle spring plate will snap into place (Figure 2-16b & c).

To remove the throttle cable kit, lift the throttle spring plate and slide the throttle kit to the left.

To fasten the throttle cable end to the engine, place the throttle control lever into the "slow" position. Rotate the engine throttle lever to the "slow" position. Remove screw on the engine next to the "fast" position. Attach the throttle cable sleeve clamp, oriented with bent tab up and facing the engine, using the 10-32 x 3/4" HHFS provided in the engine hardware. Insert "Z" bend into the hole on the throttle lever. Clamp the throttle cable sleeve to the engine and tighten (Figure 2-16d). Rotate the throttle control lever into the "fast" position to check for proper installation.

NOTE: Cable sleeve may need to be cut, depending on the engine type. The hole for the throttle cable may be covered by the rubber sleeve.

Figure 2-16a

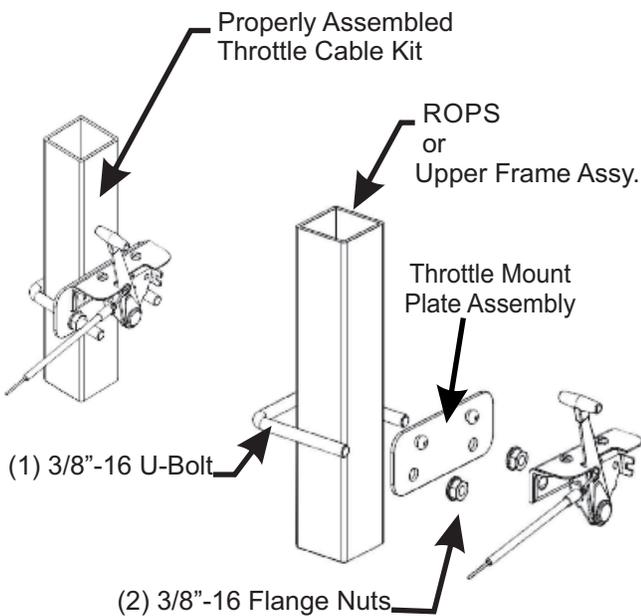


Figure 2-16c

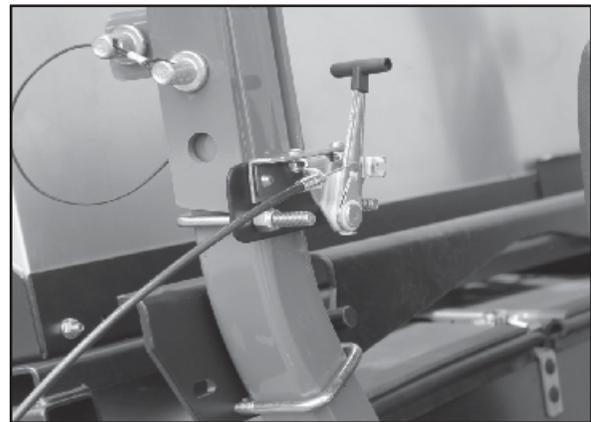


Figure 2-16d


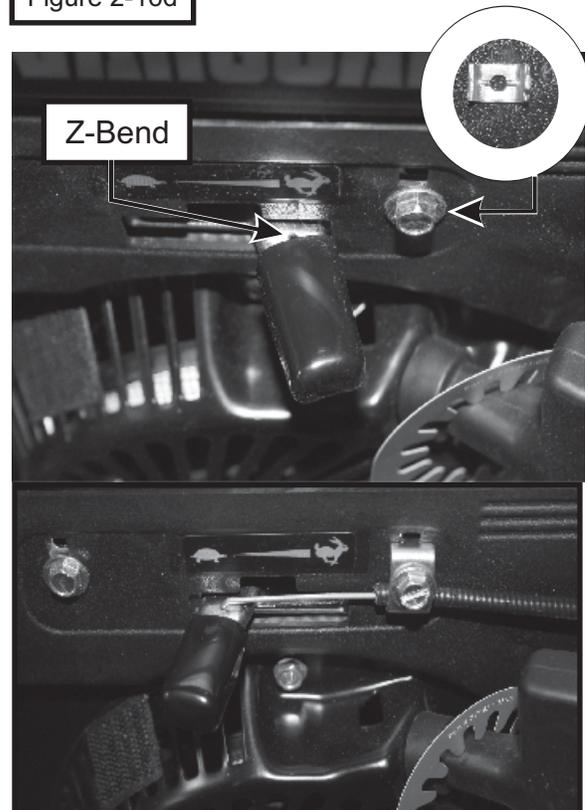


Figure 2-16b



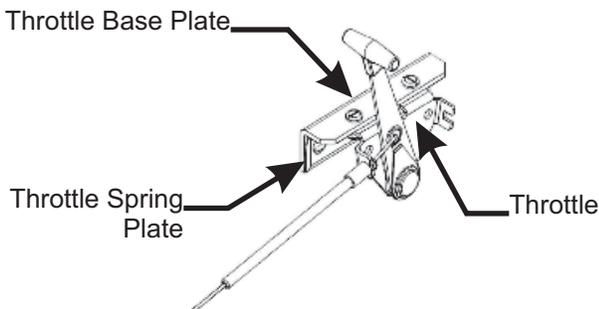

Unit Model #: 38621242

Mower: Dixie Chopper

Owner's Manual: Q0509

Mower Type: Silver Eagle 2550KW, 2750EFI,

Engine Type: Fits All Engine Models

2760KW & 2760EFI

Vac Type: 12 Cu. Ft. Pro 12 DFS


Deck Size: 50" & 60"

Drive Type: Briggs & Stratton 6.5HP Vanguard

Revision #: Initial Release 8/4/2016

Fits Year(s): 2015 - 2017

A2091 Vac Kit

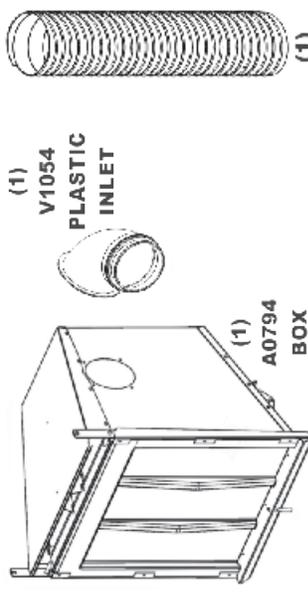

(1) V1054
PLASTIC
INLET

(1) A0794
BOX
ASSEMBLY


(1) B0978
RT. MAIN
FRAME
LEG



(1) B0979
LT. MAIN
FRAME
LEG



(2) B2526
DOOR
LINKAGE

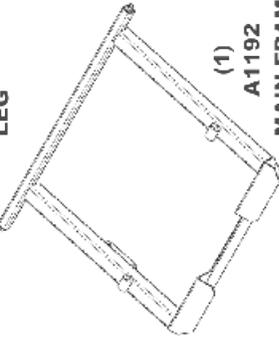

(1) A1192
MAIN FRAME
ASSY

(1) HB0677
HARDWARE
BAG




(2) J0060
HOSE
CLAMPS



(1) A0897
BOX HANDLE
ASSY.



A2090 Mount Kit

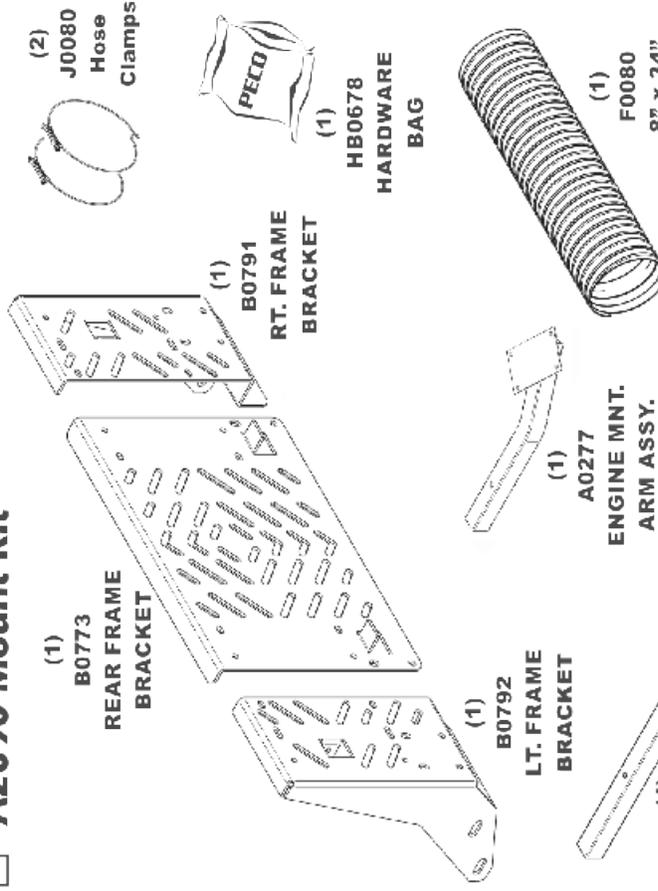

(1) B0773
REAR FRAME
BRACKET



(1) B0791
RT. FRAME
BRACKET



(1) B0792
LT. FRAME
BRACKET



(1) B1117
OUTER ENG.
MNT. TUBE



(1) A0277
ENGINE MNT.
ARM ASSY.



(1) F0060
6" X 42"
UPPER
HOSE



(2) J0080
Hose
Clamps



(1) HB0678
HARDWARE
BAG



(1) F0080
8" X 34"
LOWER HOSE



(1) A0666
THROTTLE
MNT. PL.
ASSY.




(1) A0060
70" THROTTLE



(1) HB0249
HARDWARE
BAG



A1880 Boot Kit

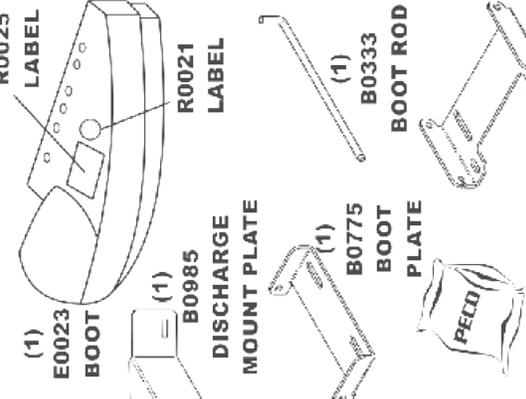

(1) E0023
BOOT



(1) B0985
DISCHARGE
MOUNT PLATE



(1) B0775
BOOT
PLATE



(1) B0333
BOOT ROD



(1) HB0492
HARDWARE
BAG



(1) B0774
DECK
PLATE




(1) B0383R
RT. WEIGHT
BRACKET



(1) B0383L
LT. WEIGHT
BRACKET

A1879 Weight Kit

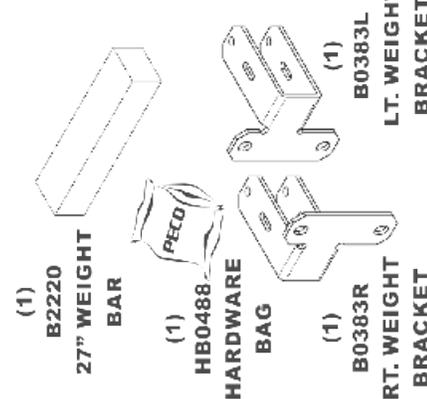

(1) B2220
27" WEIGHT
BAR



(1) HB0488
HARDWARE
BAG




(1) B0383R
RT. WEIGHT
BRACKET



(1) B0383L
LT. WEIGHT
BRACKET

A0619 Throttle Kit

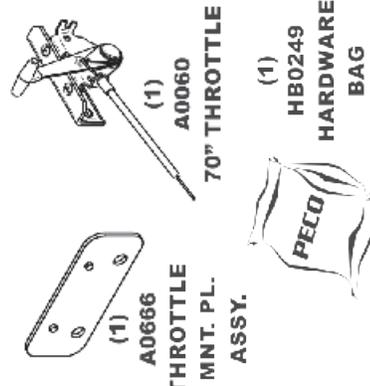

(1) A0666
THROTTLE
MNT. PL.
ASSY.



(1) A0060
70" THROTTLE



(1) HB0249
HARDWARE
BAG



(1) A639
ENGINE/
BLOWER/
BLADE ASSY.



(1) E6009
8" BLOWER
CONE



(1) A639
ENGINE/
BLOWER/
BLADE ASSY.





Unit Model #: 38621243

Mower: Dixie Chopper

Owner's Manual: Q0509

Mower Type: Silver Eagle 2772KW, 2772EFI,

Engine Type: Fits All Engine Models

Vac Type: 12 Cu. Ft. Pro 12 DFS


Drive Type: Briggs & Stratton 6.5HP Vanguard

Deck Size: 72"


Revision #: Initial Release 8/4/2016

Fits Year(s): 2015 - 2017


A2091 Vac Kit

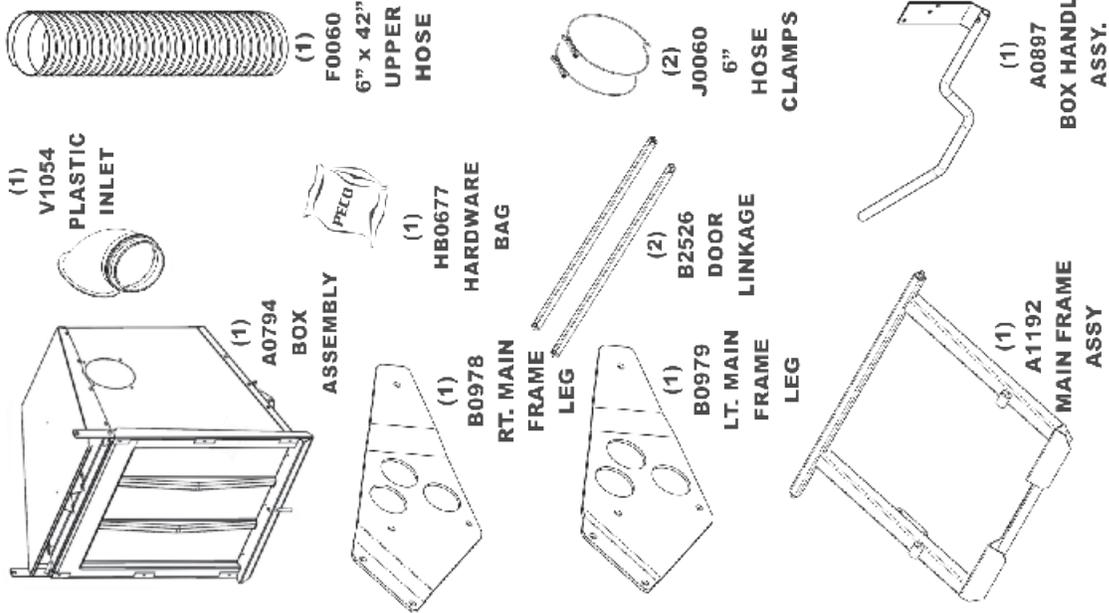


A2090 Mount Kit

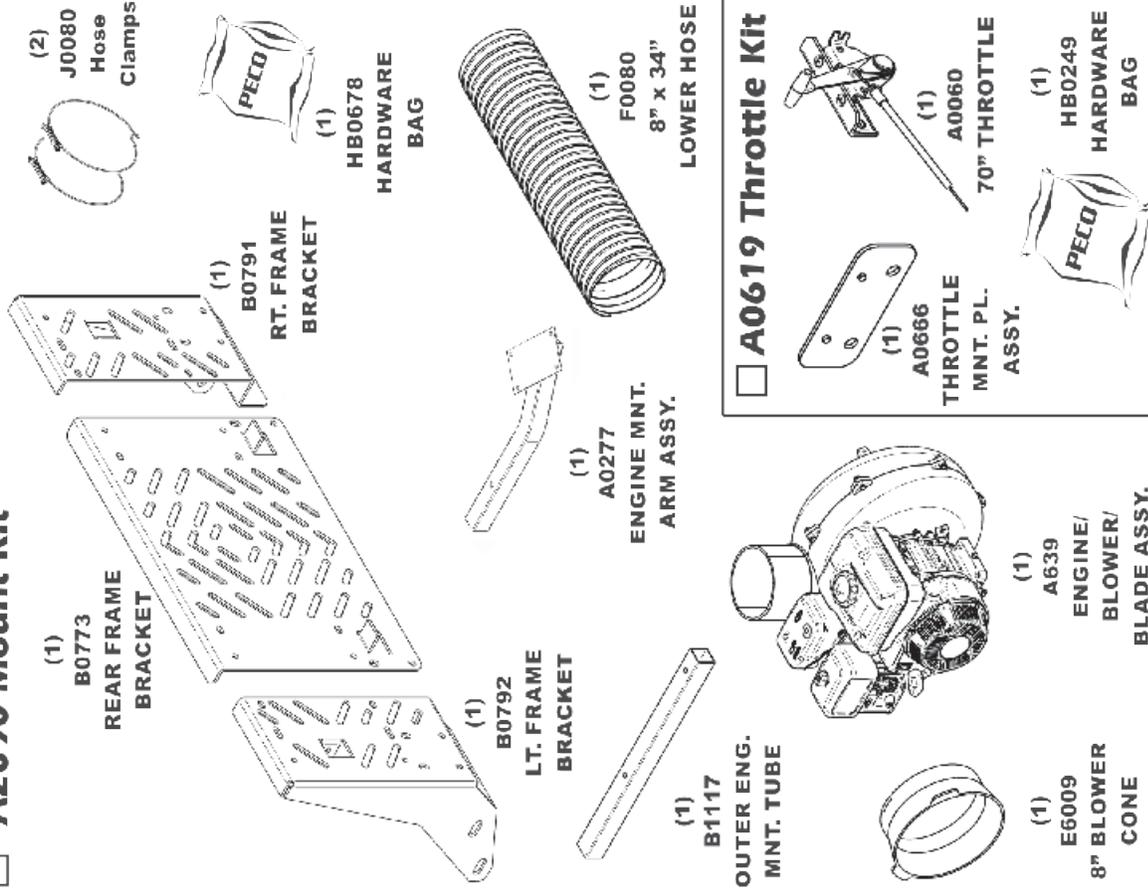



A1922 Boot Kit

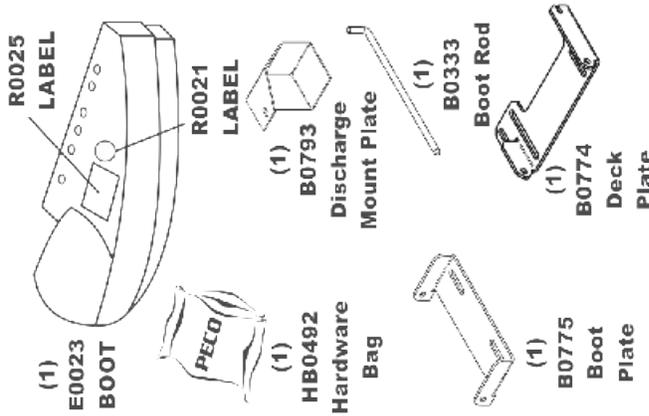

A1879 Weight Kit

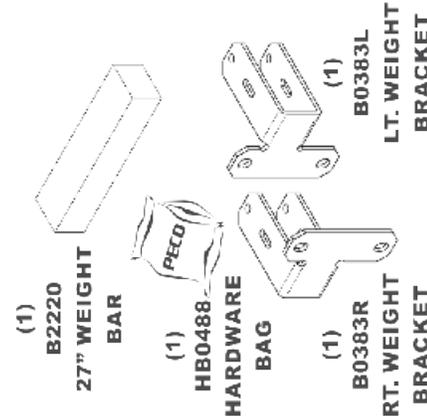

A0619 Throttle Kit

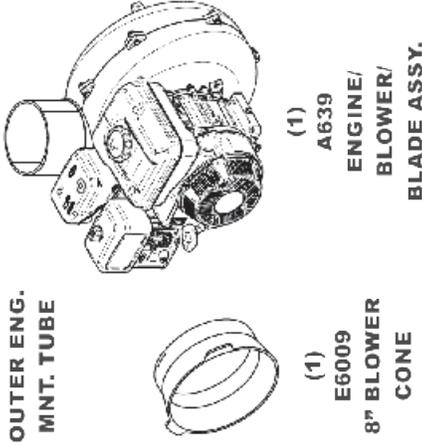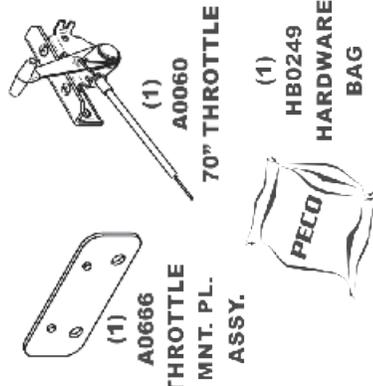

SECTION III OPERATING INSTRUCTIONS

3-1 General Safety

Only qualified people familiar with this operator's manual and the mower's operator's manual should operate this machine.

3-2 Operation And Tips On Mowing

- A. Perform BEFORE EACH USE the maintenance list in paragraph 4-1.
- B. Start the engine/blower/blade assembly.
- C. Start the mower.
- D. Engage the mower deck.

NOTE: If the collection system does not appear to be collecting the grass clippings; disengage the deck, engage the parking brake and turn the mower off, then turn off the engine/blower/blade assembly. Check the upper hose, lower hose, top screen and boot for clogs. To obtain the maximum effectiveness from your collection system the tips listed below should be followed:

- * Watch your speed- Normal conditions will allow a speed of up to approximately 5 mph, but thick, heavy damp conditions will require reduced ground speed.
- * Mow with sharp blades- A sharp blade cuts cleaner.
- * Wet grass and leaves will decrease effectiveness and will increase horsepower requirements.
- * Mow at higher cutting heights- Remove and mulch no more than 2" of grass length with each mowing. (Experts recommend not cutting off more than 1/3 of the grass blade length at any given time.)
- * Mow twice, at different height settings, (high, then low), if grass is extra tall.
- * Remember that horsepower requirements will vary with the mowing conditions such as type and height of turf grass, moisture content, amount of leaves, whether the terrain is flat or hilly, etc.

3-3 Disengagement Of The Blower

- A. Turn the engine/blower/blade assembly off.

WARNING: The blower will continue to spin. DO NOT TOUCH the blower until the blades have come to a complete stop.

3-4 Unloading The Collection System

NOTE: Press the tab, located behind the operator's left side, downward to feel if the collection system is full. If the container is full there will be resistance when depressing the tab.

- A. Stop the forward movement of the mower.
- B. Disengage the mower deck.
- C. Turn of the engine/blower/blade assembly.
- D. Verify that the dump area is clear.
- E. Push the dump handle, on the left of the operator, away from the unit. While holding the handle pushed away, move the handle upward. The container door will swing upward and the container will rotate downward. The container will release its contents.
- F. Once the contents of the container have fallen out, the container is ready to move back into its normal operating position. With the handle in the 'away' position, pull the handle downward until it stops. Move the handle towards the center of the mower. This motion will allow the latch to lock back into collection position.

NOTE: If you do not hold the handle away from the mower as you pull the handle downward, the latch will not lock and the container can unexpectedly release the contents collected.

SECTION IV MAINTENANCE

4-1 Maintenance Checklist

Before each use:

1. Check blades and spindles to be sure that no foreign objects, such as wire or steel strapping bands, are wrapped around them.
2. Inspect blades for wear. Replace if necessary. If it is necessary to sharpen the blades, remove the blades from the spindles before sharpening. DO NOT sharpen blades while still attached to the mower.

3. Make sure all shields are in place and in good condition. Repair or replace any missing or damaged shields.
4. Listen for abnormal sounds, which might indicate loose parts, damaged bearings, or other damage. Correct any deficiency before continuing operation.
5. Check for wear or deterioration of the upper or lower hoses. If there are any portions of the hose that have been torn or worn through, replace with genuine PECO parts.

SECTION V PARTS AND SERVICE

5-1 Parts And Service Information

After Each Use:

1. Clean all debris from machine especially from the container, underneath the belt shields, and safety decals. Replace any missing or illegible decals.
2. Inspect the unit for worn or damaged components. Repair or replace before the next use. Any replacement component installed during repair shall include the component's current safety decal specified by the manufacturers to be affixed to the component.

PECO collection system owners should record the name and telephone number of their Service Center. Your Service Center will be happy to supply replacement parts, accessories, and do any service or repairs to your collection system. If for any reason your Service Center is unable to service your collection system or supply replacement parts, contact PECO and include the following information on the chart below.

DOCUMENT THE FOLLOWING INFORMATION FOR FUTURE REFERENCE

Unit Model Number: _____
Unit Engine Size: _____
Unit Serial Number: _____
Date of purchase: _____ / _____ / _____
Dealer/Distributor Name: _____
Address: _____ **State:** _____ **Zip:** _____
Phone Number: _____

**10 WALDEN DR
ARDEN, NORTH CAROLINA 28704
(800) 438-5823 OR (828) 684-1234 FAX: (828) 684-0858
EMAIL: peco@lawnvac.com
WEBSITE: www.lawnvac.com**

SAFETY DECALS


To promote safe operation, Peco supplies safety decals on all products manufactured. Damage can occur to safety decals either through shipment, use or reconditioning. Contact your local Service Center for replacement decals.



R2008



R2007

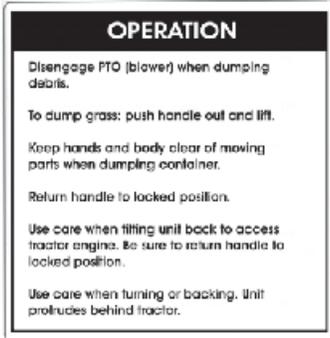

Part #: R1049



Part #: R1069



Part #: R1053



Part #: R1057



Part #: R1055



Part #: R1070



Part #: R4037



Part # R0025



Part #: R1054



Part #:R4054



Part #:R0022



Part #:R1051



Part #: R4027




Part #:R0021


TORQUE SPECIFICATIONS

Proper torque for American fasteners used on Peco equipment.
Recommended Torque in Foot Pounds (Newton Meters).*


AMERICAN Bolt Head Markings

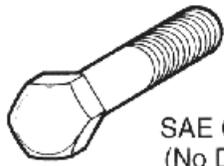

SAE Grade 2
(No Dashes)

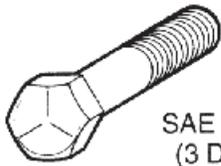


SAE Grade 5
(3 Dashes)

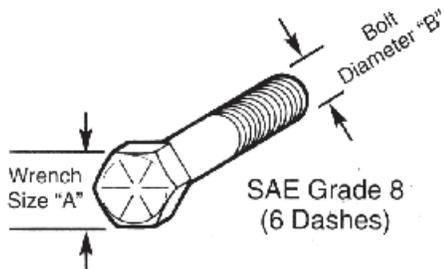

SAE Grade 8
(6 Dashes)

WRENCH SIZE (IN.) "A"	BOLT DIAMETER (IN.) "B" AND THREAD SIZE	SAE GRADE 2	SAE GRADE 5	SAE GRADE 8
7/16	1/4 - 20 UNC	6 (7)	8 (11)	12 (16)
7/16	1/4 - 28 UNF	6 (8)	10 (13)	14 (18)
1/2	5/16 - 18 UNC	11 (15)	17 (23)	25 (33)
1/2	5/16 - 24 UNF	13 (17)	19 (26)	27 (37)
9/16	3/8 - 16 UNC	20 (27)	31 (42)	44 (60)
9/16	3/8 - 24 UNF	23 (31)	35 (47)	49 (66)
5/8	7/16 - 14 UNC	32 (43)	49 (66)	70 (95)
5/8	7/16 - 20 UNF	36 (49)	55 (75)	78 (106)
3/4	1/2 - 13 UNC	49 (66)	76 (103)	106 (144)
3/4	1/2 - 20 UNF	55 (75)	85 (115)	120 (163)
7/8	9/16 - 12 UNC	70 (95)	109 (148)	153 (207)
7/8	9/16 - 18 UNF	79 (107)	122 (165)	172 (233)
15/16	5/8 - 11 UNC	97 (131)	150 (203)	212 (287)
15/16	5/8 - 18 UNF	110 (149)	170 (230)	240 (325)
1-1/8	3/4 - 10 UNC	144 (195)	266 (360)	376 (509)
1-1/8	3/4 - 16 UNF	192 (260)	297 (402)	420 (569)
1-5/16	7/8 - 9 UNC	166 (225)	430 (583)	606 (821)
1-5/16	7/8 - 14 UNF	184 (249)	474 (642)	668 (905)
1-1/2	1 - 8 UNC	250 (339)	644 (873)	909 (1232)
1-1/2	1 - 12 UNF	274 (371)	705 (955)	995 (1348)
1-1/2	1 - 14 UNF	280 (379)	721 (977)	1019 (1381)
1-11/16	1-1/8 - 7 UNC	354 (480)	795 (1077)	1288(1745)
1-11/16	1-1/8 - 12 UNF	397 (538)	890 (1206)	1444 (1957)
1-7/8	1-1/4 - 7 UNC	500 (678)	1120 (1518)	1817 (2462)
1-7/8	1-1/4 - 12 UNF	553 (749)	1241 (1682)	2013 (2728)
2-1/16	1-3/8 - 6 UNC	655 (887)	1470 (1992)	2382 (3228)
2-1/16	1-3/8 - 12 UNF	746 (1011)	1672 (2266)	2712 (3675)
2-1/4	1-1/2 - 6 UNC	870 (1179)	1950 (2642)	3161 (4283)
2-1/4	1-1/2 - 12 UNF	979 (1327)	2194 (2973)	3557 (4820)

METRIC

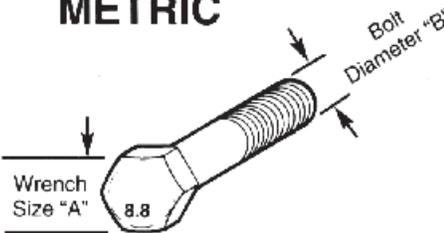

Numbers appearing on bolt heads indicate ASTM class.

Proper torque for metric fasteners used on Peco equipment.
Recommended torque in foot pounds (newton Meters).*

WRENCH SIZE (mm) "A"	BOLT DIA. (mm) "B"	ASTM 4.6	ASTM 8.8	ASTM 9.8	ASTM 10.9
8	5	1.8 (2.4)		5.1 (6.9)	6.5 (8.8)
10	6	3 (4)		8.7 (12)	11.1 (15)
13	8	7.3 (10)		21.1 (29)	27 (37)
16	10	14.5 (20)		42 (57)	53 (72)
18	12	25 (34)	74 (100)	73 (99)	93 (126)
21	14	40 (54)	118 (160)	116 (157)	148 (201)
24	16	62 (84)	167 (226)	181 (245)	230 (312)
30	20	122 (165)	325 (440)		449 (608)
33	22		443 (600)		611 (828)
36	24	211 (286)	563 (763)		778 (1054)
41	27		821 (1112)		1138 (1542)
46	30	418 (566)	1119 (1516)		1547 (2096)

*Use 75% of the specified torque value for plated fasteners. Use 85% of the specified torque values for lubricated fasteners.

NOTES:



**10 WALDEN DR.
ARDEN, NORTH CAROLINA 28704
(800) 438-5823 OR (828) 684-1234 FAX: (828) 684-0858
EMAIL: peco@lawnvac.com
WEBSITE: www.lawnvac.com**