



# **PTO GRASS COLLECTION SYSTEM**

**DESIGNED FOR:**

**MODEL 48131301  
PUP/ OUTLAW/ LIGHTNING SERIES MOWERS**



## **OPERATOR'S MANUAL**

**ASSEMBLY ● OPERATION ● MAINTENANCE**

# PTO GRASS COLLECTION SYSTEM

## TABLE OF CONTENTS

SECTION	PAGE	SECTION	PAGE
Safety - - - - -	2	2-13 Lengths Of Hose Adjustment - - - - -	13
Safety Alert Symbols - - - - -	3	2-14 Upper Hose Installation - - - - -	13
Warranty - - - - -	4	2-15 Lower Hose To Blower Cone Installation - - - - -	13
I INTRODUCTION AND DESCRIPTION - - - - -	5	2-16 Lower Hose To Boot Installation - - - - -	13
1-1 Introduction - - - - -	5	2-17 Front Weight Installation - - - - -	13
1-2 Description - - - - -	5	2-18 Installation/Removal Of Collection Bags - - - - -	14
II INSTALLATION FOR USE - - - - -	5	III OPERATING INSTRUCTIONS - - - - -	15
2-1 Preparation Of Mower - - - - -	5	3-1 General Safety - - - - -	15
2-2 PTO Assembly Installation - - - - -	6	3-2 Operation & Tips On Mowing - - - - -	15
2-3 Belt Installation - - - - -	6	3-3 Disengagement Of The Blower - - - - -	15
2-4 Cam Assembly Adjustment - - - - -	6	3-4 Unloading The Collection System - - - - -	15
2-5 Lower Frame Installation - - - - -	7	IV MAINTENANCE - - - - -	15
2-6 Exhaust Diverter Information - - - - -	7	4-1 Maintenance Checklist - - - - -	15
2-7 Mount Tube Stiffener & Debris Shield Installation - - - - -	7	4-2 Lubrication - - - - -	16
Exploded Views and Pack Drawings - - - - -	8	V PARTS AND SERVICE - - - - -	16
2-8 Upper Frame Assembly Installation - - - - -	11	5-1 Parts And Service Information - - - - -	16
2-9 Top Assembly To Upper Frame Assembly Installation - - - - -	11	Safety Decals - - - - -	17
2-10 Boot To Mower Deck Installation - - - - -	11	Torque Specifications - - - - -	18
2-11 Blower Cone Installation - - - - -	12	Notes - - - - -	19
2-11 Impeller Blade Removal/Replacement - - - - -	12		

## Safety

1. Read the operator's manual carefully and familiarize yourself with the proper use of your attachment. Do not allow anyone who is not acquainted with the Safety Instructions to use your attachment.
2. Know the controls and how to stop quickly. **READ THE OPERATOR'S MANUAL!**
3. Do not allow children to operate the vehicle. Do not allow adults to operate it without proper instruction.
4. Be especially watchful of children and pets darting into the area while operating.
5. Keep your eyes and mind on your unit while mowing or operating your attachment. Don't let others distract you.
6. Do not attempt to operate your unit or mower when not in the driver's seat.
7. Always stop unit when emptying the container.
8. Stop unit, shut off deck and attachment, set parking brake, shut off mower engine and remove spark plug wire before removing clogs or removing or replacing hose, boot, blower cone, or performing any maintenance.
9. Mow across the face of slopes (not steeper than 10 degrees); never up and down the face of the slope.
10. It is recommended that the container be kept only half full when negotiating any slopes. Start mowing on slopes when the container is empty.
11. Inspect your lawn and remove any foreign objects before mowing. Never deliberately run the mower across any foreign object.
12. Wear ear protection if the noise level is offensive.
13. Wear eye protection to prevent debris from damaging your eyes.
14. Be alert for all other traffic when driving on public roads or highways.
15. Moisture content in most grasses can damage mower and grass collector components. Also, dry grass and leaves left in the bags can be a fire hazard. Always make sure the bags are completely empty and the blower and hoses are fully cleaned before storage.

# SAFETY

**WARNING!** **NEVER** operate the unit unless the discharge guard and either the deflector assembly or the vacuum collector adapter are fastened securely in place.

**WARNING!** Do not work around the mower deck boot or the blower area until you are certain that the mower blades and the blower impeller have stopped rotating.

**WARNING!** To avoid serious injury, perform maintenance on the vacuum collector; **ONLY AFTER STOPPING THE MOWER'S ENGINE AND WAITING FOR ALL MOVING PARTS TO COME TO A COMPLETE STOP.** Set the parking brake. Always remove the ignition key before beginning maintenance.

**WARNING!** For your own personal safety, **ALWAYS** mow **ACROSS** the face of slopes and **NEVER UP and DOWN** the face. **NEVER** attempt to mow excessively steep slopes, and use caution when turning on any slope.

## Safety Alert Symbol



This Safety Alert Symbol means: **"ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!"**

This symbol is used to call attention to safety precautions that should be followed by the operator to avoid accidents. When you see this symbol, carefully read the message that follows and heed its advice. Failure to comply with safety precautions could result in death or serious bodily injury.

## Safety Signs

The signal words **DANGER**, **WARNING**, and **CAUTION** are used on the equipment safety signs. These words are intended to alert the viewer to the existence and the degree of hazard seriousness.



White letters on **RED**

This signal word indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.



Black letters on **ORANGE**

This signal word indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

It may also be used to alert against unsafe practices.



Black letters on **YELLOW**

This signal word indicates a potentially hazardous situation exist which, if not avoided, will result in minor or moderate injury.

It may also be used to alert against unsafe practices.

# PECO LIMITED WARRANTY FOR NEW PRODUCTS

## A. WHAT IS WARRANTED?

PECO extends the following warranties to the original purchaser of each new PECO consumer product subject to the following limitations:

- 1. PRODUCT WARRANTY:** Any part of any consumer product, which is defective in material or workmanship as delivered to the purchaser will be repaired or replaced, as PECO elects, without charge for parts or labor, if the defect appears within 12 months (90 days for commercial use) from the date of delivery of the product to the original purchaser. **ALL DEFECTIVE PARTS MUST BE RETURNED TO PECO FOR INSPECTION TO DETERMINE VALIDITY OF WARRANTY CLAIMS.** Freight and mailing will be borne by the customer.
- 2. PARTS REPLACED DURING WARRANTY:** Any new PECO part which is furnished in performance of this warranty and is defective in material or workmanship as delivered to the purchaser will be repaired or replaced, as PECO elects, without charge if the defect appears within 90 days from the date of installation of such part or before the expiration of the original warranty period, whichever is later.

## B. SECURING WARRANTY ADJUSTMENTS.

Call PECO for Return Authorization. Damaged or broken parts, other than engines, batteries, and gearboxes must be returned to PECO Inc., 100 Airport Road, Arden, NC 28704 before any warranty adjustment can be authorized. At the time of requesting warranty adjustment, the purchaser must present evidence for date of delivery of the product. The purchaser shall pay any charge for the product to and from Arden, NC.

## C. ITEMS NOT COVERED BY PECO WARRANTY.

Engines, batteries and, gearboxes attached to PECO products are covered under a separate warranty by the respective manufacturer.

## D. UNAPPROVED ALTERATION OR MODIFICATION.

All obligations of PECO Inc., under this warranty, shall be terminated if products are altered or modified in ways not approved by PECO Inc..

## E. ACCIDENTS AND NORMAL MAINTENANCE.

The warranty covers only defective material and workmanship. It does not cover depreciation or damage caused by normal wear, accident, improper use or abuse of products. The cost of normal maintenance and normal replacement of service items such as belts, cutting blades, hoses, etc., which are not defective shall be paid for by the purchaser.

## F. NO REPRESENTATIONS ADDITIONAL WARRANTIES, DISCLAIMER.

Neither PECO Inc. nor any company affiliated with it makes any warranties, representations or promises as to the quality of performance of its products other than those set forth herein. Except as described above, PECO Inc. makes no other warranties **AND SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY.**

## G. ANY MACHINE USED FOR RENTAL PURPOSES ARE GUARANTEED FOR 45 DAYS FROM DATE OF ORIGINAL SALE ONLY.

## H. REMEDIED EXCLUSIVE.

The only remedies the purchaser has in connection with the breach or performance of any warranty on PECO Inc. consumer products are set forth above. In no event will PECO be liable for special incidental or consequential damages.

## 1. NO SERVICE CENTER WARRANTY.

The selling Service Center makes no warranty on his own on any item warranted by PECO Inc. unless he delivers to purchaser a separate written warranty certificate specifically warranting the item. The dealer has no authority to make any representation or promise on behalf of PECO or to modify the terms of this warranty in any way.



# SECTION I

## INTRODUCTION AND DESCRIPTION

### 1-1 Introduction

We are pleased to have you as a Bad Boy customer. Your collection system has been designed to give you a low maintenance, simple, and effective way to collect the grass clippings from your mower. This manual is provided to give you the necessary instructions to properly mount and operate the collection system on your mower. Please read this manual thoroughly. Understand what each control is for and how to use it. Observe all safety decal precautions on the machine and noted throughout the manual.

**NOTE:** All references made to right, left, front, rear, top or bottom are as viewed from the normal operator's position on the mower.

### 1-2 Description

The collection system is designed for turf maintenance where there is a need to collect the grass clippings as the mower cuts the turf. It is also good for picking up leaves and twigs in pre-season and post-season clean-up.

The blower, mounted on the right side of the unit, uses a belt and gearbox system from the engine PTO shaft. Drive train protection comes through belt slippage. The blower draws grass clippings from the discharge area of the cutter deck back to the 3 - 3.3 cubic foot collection bags P#(G0002) at the rear portion of the mower frame. The operator can engage the blower with a push of the over-center linkage on the right side of the unit. Once the bags are full with clippings, they can be released to make for easy dumping.

## Section II

## INSTALLATION FOR USE

### 2-1 Preparation Of Mower

Carefully dismantle shipping box from around the components. Cut retaining straps and separate the parts. The collection system will have various parts located inside. Remove and sort all parts for easy identification.

**NOTE:** Before each step of assembly it will help to study the exploded drawings on pages 8,9 and 10. From the underside of the mower engine remove the bolt and bushing from the electric clutch assembly. Replace these parts with the engine pulley assembly number 6 P#(A0611), lock washer, and bolt. See the listing below for information on what hardware will need to be used and added for the various types of mower engine options:

#### **23HP, 32HP Vanguard & 26HP Briggs ELS -**


Add (2) flat washers P#(K0131) between clutch and pump pulley, use (1) 7/16"-20 x 4" HHCS P#(K0359) and (1) 7/16" lock washer P#(K0140) to fasten engine pulley assembly number 6 P#(A0611).

**26HP Kawasaki** - Add (1) flat washer P#(K0131) between clutch and pump pulley (has 2 existing washers between clutch and pump pulley), use (1) M10-1.5 x 90MM HHCS P#(K0117) and (1) 7/16" lock washer P#(K0140) to fasten engine pulley assembly number 6 P#(A0611).

**27HP & 30HP Kohler** - Do not add washer (has 1 existing washer between clutch and pump pulley), use (1) 7/16"-20 x 4" HHCS P#(K0359) and (1) 7/16" lock washer P#(K0140) to fasten engine pulley assembly number 6 P#(A0611).

**31HP Kawasaki** - Do not add washer (has 1 existing washer between clutch and pump pulley), use (1) 7/16"-20 x 3-3/4" HHCS P#(K0350) and (1) 7/16" helical spring lock washer P#(K0140) to fasten the engine pulley assembly number 13 P#(A0732).

The added pulley will power the collection system. Note that the center of the hub that is extended should be upward toward the engine (Figure 1). Torque the bolt to 55 ft./lbs.

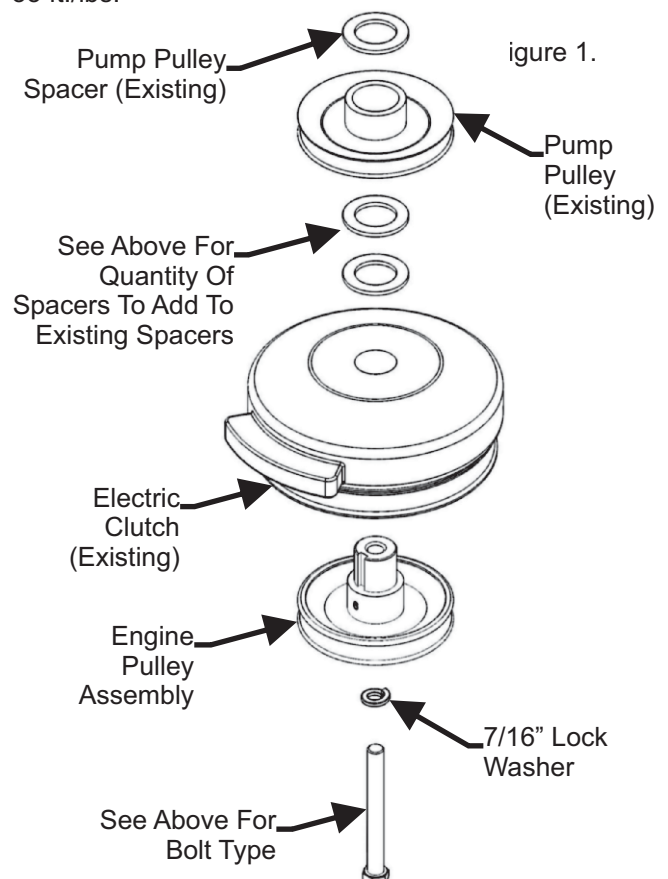

## 2-2 PTO Assembly Installation

Remove the (2) existing nuts and bolts that secure the rear guard to the rear frame of the mower. Remove rear right set of hardware that secures the mower fin to the rear frame of the mower. There are four sets of mounting holes on the PTO assembly P#(A0610). For the Pup Series, use the lower set of mounting holes. For the Outlaw series, use the upper set of mounting holes. Align the two lower holes on the PTO assembly, with the holes on the rear frame of the mower and secure using (2) 3/8"-16 x 1-1/4" HHCS P#(K1192) and (2) 3/8"-16 nyloc nut P#(K1216). For the Pup Series, you may need to drill a hole in the rear guard using a 5/16" drill bit. Secure the PTO assembly to the upper portion of the rear guard using (1) 3/8"-16 x 3-1/4" HHCS and (1) 3/8"-16 nyloc nut. Secure the mower fin to the rear guard and the PTO assembly using (1) 5/16"-18 x 1-1/4" G8 HHCS P#(K0118) and (1) 5/16" nyloc nut P#(K1180). Refer to Figure 2-2a and Figure 2-2b.

Figure 2-2a




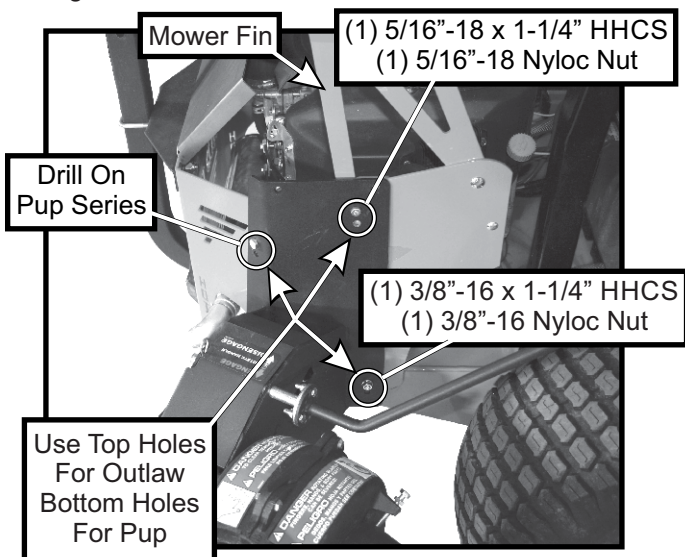


Figure 2-2b

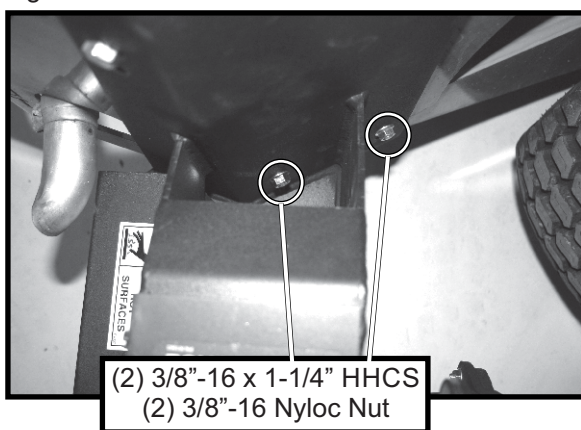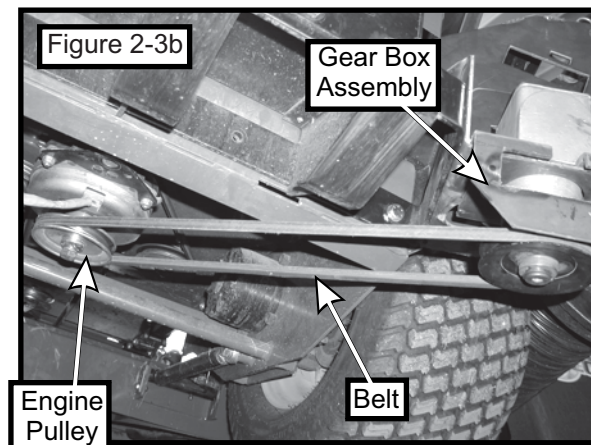

## 2-3 Belt Installation


Remove the pulley guard P#(B0075) by removing the (2) 1/4"-20 x 1/2" HHSTS P#(K0353), see page 9, diagram # 38 and #39 for part location. Loosen the (2) bolts that secure the gear box assembly P#(A0429) to the PTO mount plate (Figure 2-3a). Loosen the adjustment bolt P#(K0348) until the gear box assembly is at the far left adjustment (the gear box is moved towards the mower's engine pulley). Connect the kevlar cord belt from the engine pulley to the lower gear box pulley (Figure 2-3b). For all engine sizes except for the 31HP Kawasaki, use the A52K belt P#(M0238). For the 31 HP Kawasaki, use the A53K belt P#(M0247). To tension the drive belt, turn the adjustment bolt clockwise until there is 1" of deflection, with 10-11 lbs. of pressure between the engine pulley and the gear box pulley. Once the correct tension of the belt is achieved, tighten the (2) bolts that secure the gear box assembly.

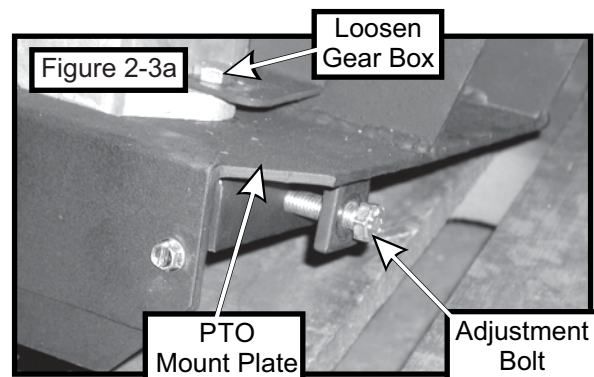

## 2-4 Cam Assembly Adjustment

The cam assembly P#(A0422), which controls the blower belt tension, comes from the factory pre-adjusted. If the belt is too tight or becomes too loose, remove the hair pin clip P#(K0099) from the belt tension rod P#(K0326) and pull the "L" end of the rod out of its hole in the cam assembly. The tension rod may then be screwed out to tighten the belt or screwed in to loosen the belt. Replace the "L" end into the top hole in the cam and replace the hair pin clip. Adjust the cam stop bolt P#(K1159) to allow the cam to rotate slightly over center when the blower is disengaged (Figure 6).




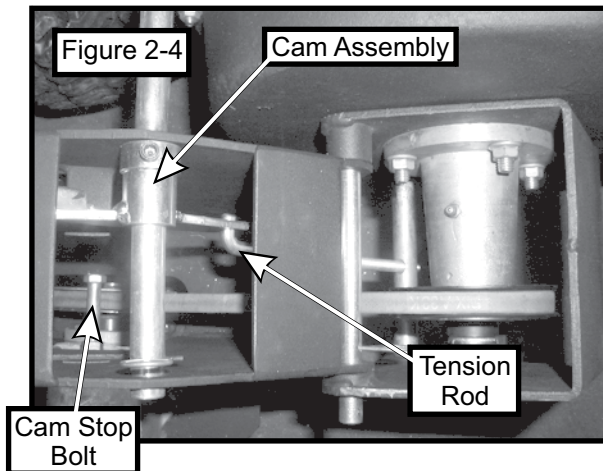

## 2-5 Lower Frame Installation


**NOTE:** Before continuing installation, you must install the Bad Boy Pup Series bolt-on hitch P#(093-1112-00) for the rear of the mower. Adding this hitch is required for mounting the collection system. Contact Bad Boy to purchase at (870) 698-0090.

Slide the short leg of the lower mount tube P#(B0246) into the Bad Boy bolt-on hitch previously installed. Align the hole in the mount tube to the bolt-on hitch and fasten by using (1) 5/8" x 3" clevis pin P#(K0172) and (1) 5/32" x 2-5/8" hair pin clip P#(K0088) (Figure 2-5).

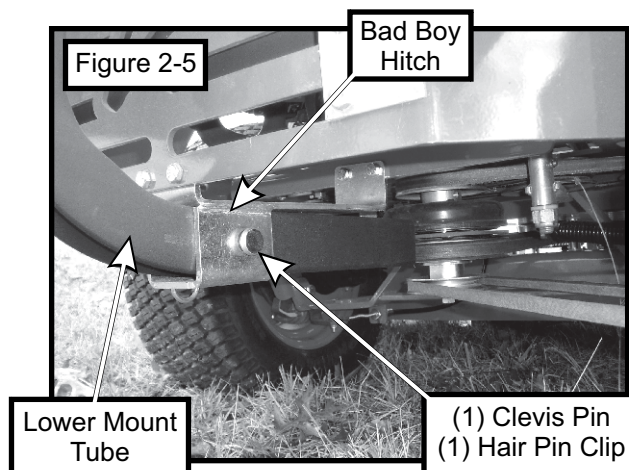



## 2-6 Exhaust Diverter Installation

Attach the exhaust diverter P#(J0150) to the muffler and position it as shown in Figure 2-6. Tighten the diverter to the muffler using the existing hardware on the deflector.

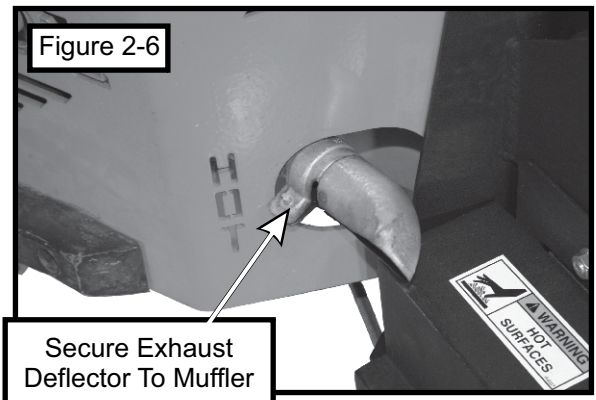


## 2-7 Mount Tube Stiffener and Debris Shield Installation

Place the lower mount tube stiffener P#(B0247) between the lower mount tube and the rear guard as shown in Figure 2-7. Align the holes in the debris shield P#(B0624) with the holes in the rear guard and secure both parts to the rear guard with (2) 1/2"-13 x 1" HHCS P#(K1231), (2) 1/2" flat washer P#(K0055), and (2) 1/2"-13 nyloc nut P#(K1247). Fasten the lower mount tube P#(B0246) to the lower mount tube stiffener, using (1) 3/8"-16 u-bolt P#(K1432) and (2) 3/8"-16 nyloc nuts P#(K1216). Refer to Figures 2-7a and 2-7b.

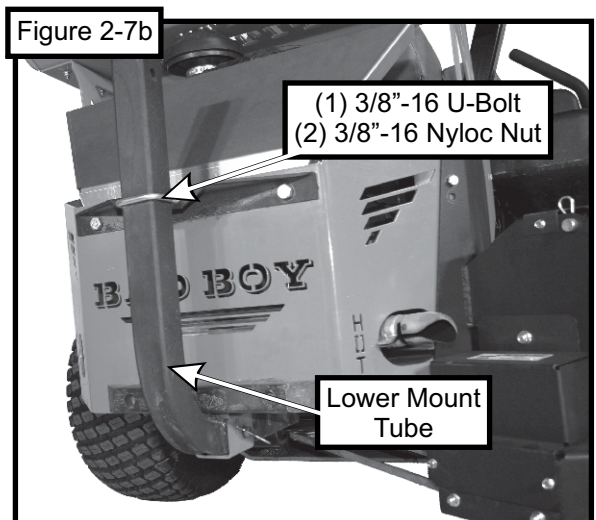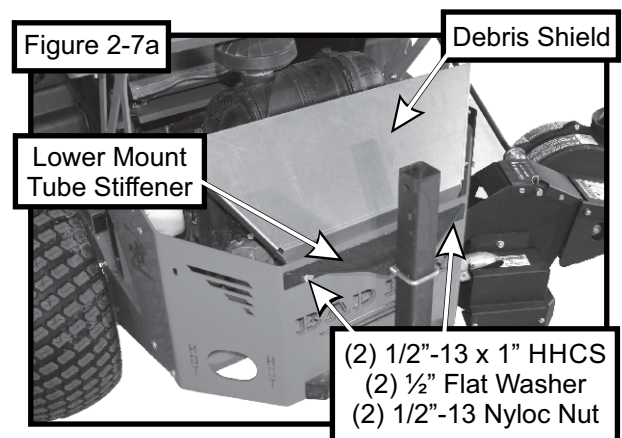

# Exploded Parts View


## A1157 Top Assembly

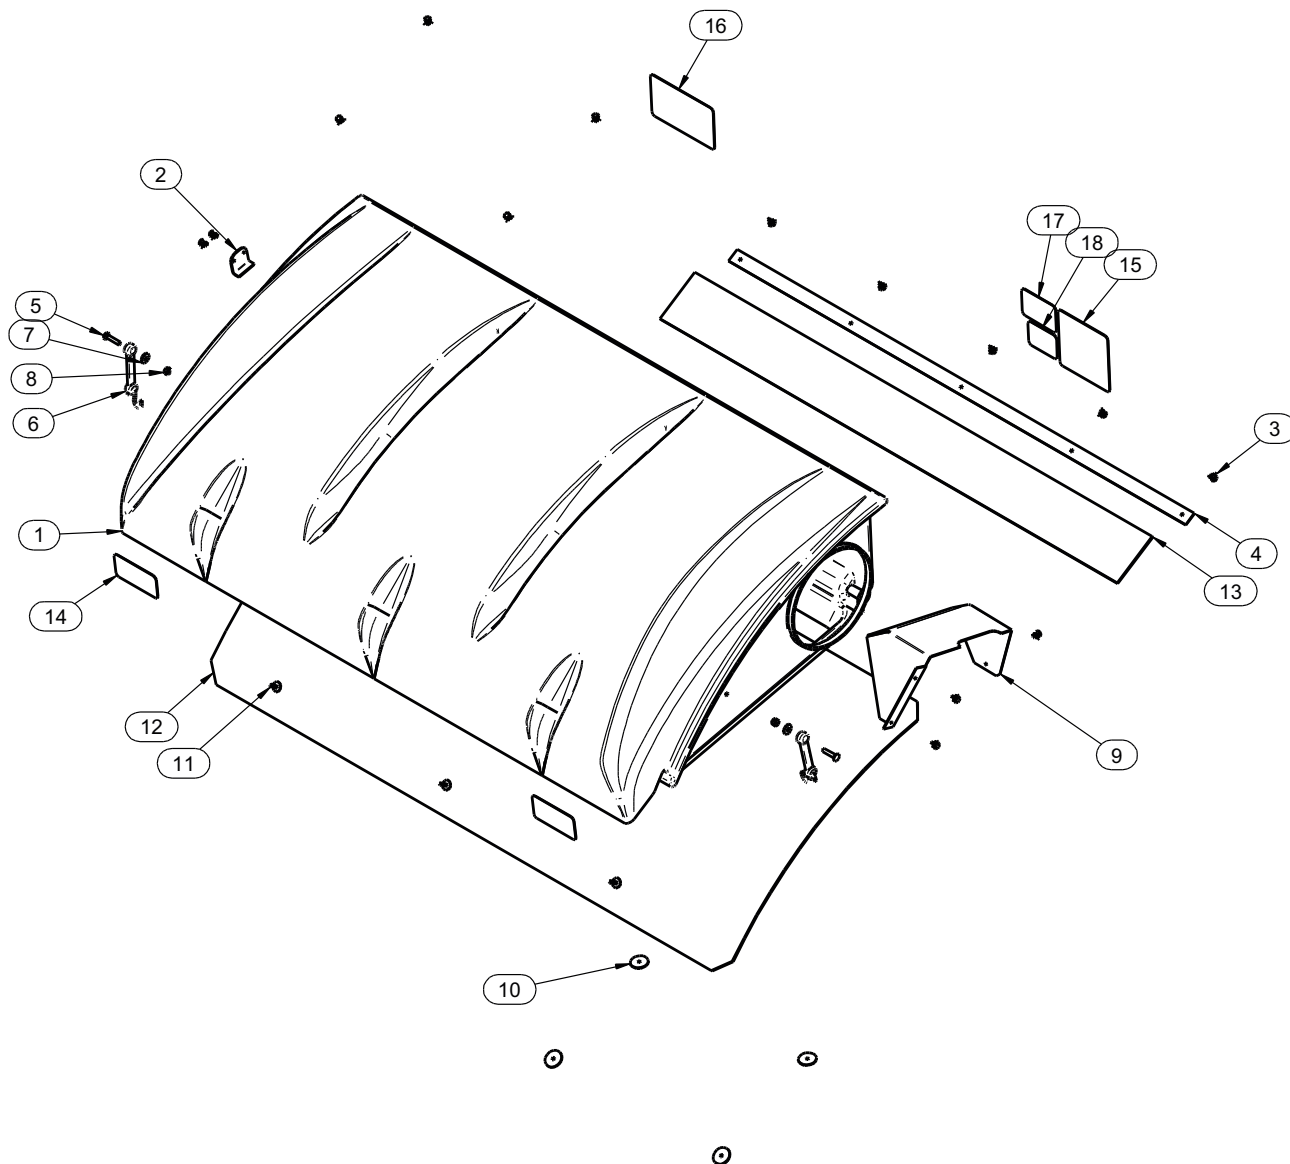

Item #	Doc #	Title	Qty
1	V0022	PRO 3 BAGGER TOP	1
2	B0676	Hinge Stop Pl.	1
3	K0114	BLACK PLASTIC RIVET	14
4	C0069	DUST GUARD BRACE	1
5	K1030	1/4"-20 x 1-1/4" CARRIAGE BOLT	2
6	J4009	SHORT RUBBER STRAP W/ S HOOK	2
7	K0037	1/4" FLAT WASHER .75 OD x .314 ID x .060 T	2
8	K1128	1/4"-20 NYLOC NUT	2
9	C0026	GRASS DEFLECTOR	1
10	K0062	3/16" x 1-1/2" FENDER WASHER, Z	4
11	K1265	BLACK PANEL RETAINER	3
12	V1120	Black Plastic Screen	1
13	V1118	DUST GUARD	1
14	R1057	2" x 4" Red Reflector Label	2
15	R1069	Warning - Turn Off Blower Label	1
16	R1065	Made In USA Label	1
17	R1054	Important Check Hoses	1
18	R1051	Warning - Use Hearing Protection	1



## Exploded View Of The A0610 - PTO Assembly

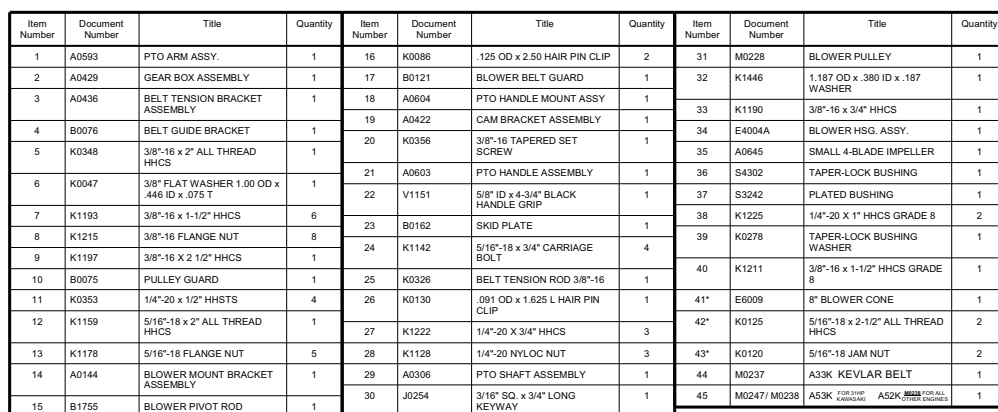

**MODEL#: 48131301**

**MOWER NAME: BAD BOY PUP/ OUTLAW/ LIGHTNING**

**MOWER MODEL: 27HP & 30HP KH,  
26HP & 31HP KW, & 23HP, 26HP, 32HP BR**

**MOWER DECK SIZE: 48", 52", 60" & 61"**


**VAC NAME: 13 CUBIC FOOT PRO BAGGER**




**FOR YEAR: 2011 & BELOW**

**REVISED:**


☐ **A0607 - UNIT ASSEMBLY**

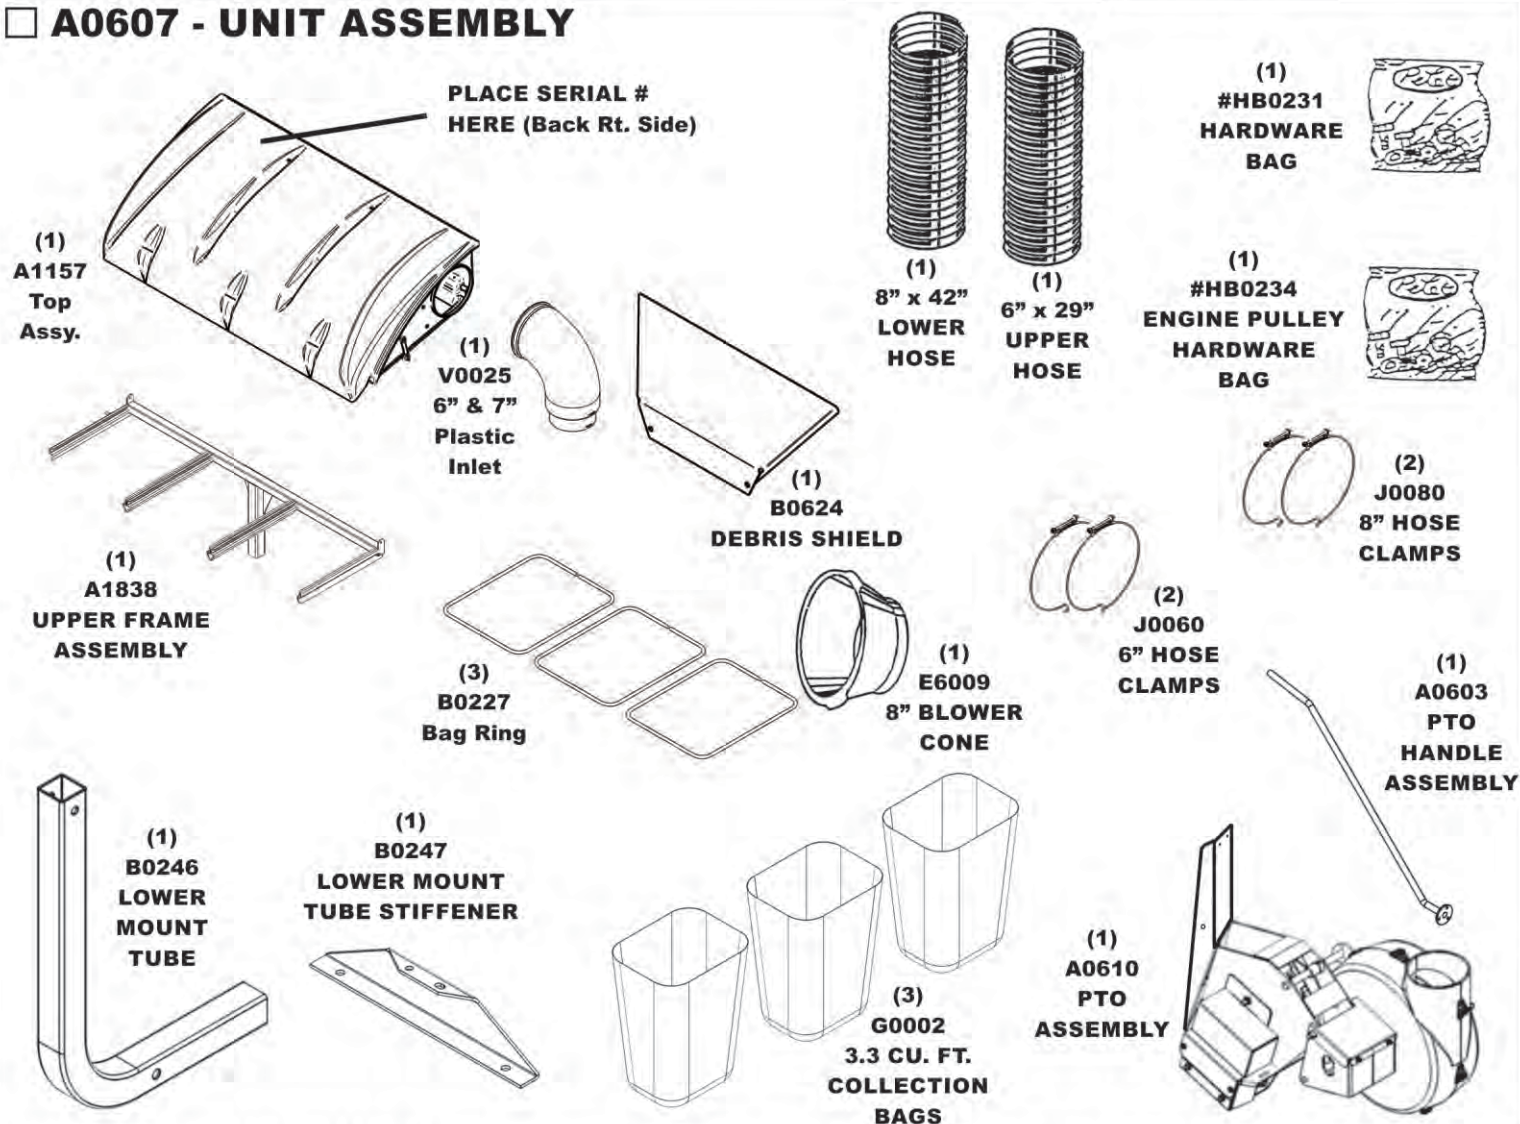

☐ **A0608 - WEIGHT KIT**

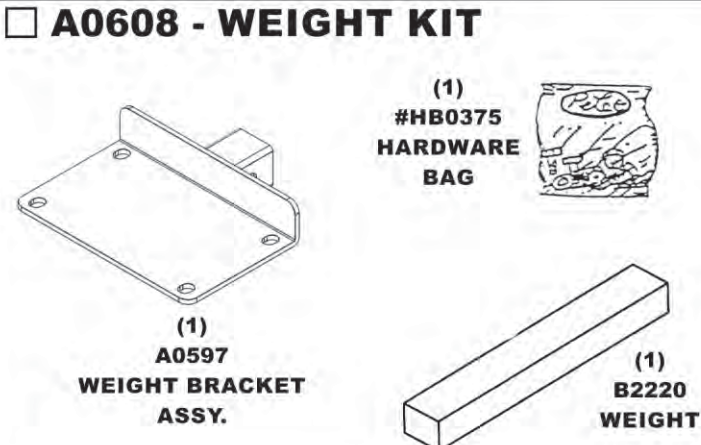


☐ **A0609 - BOOT KIT**

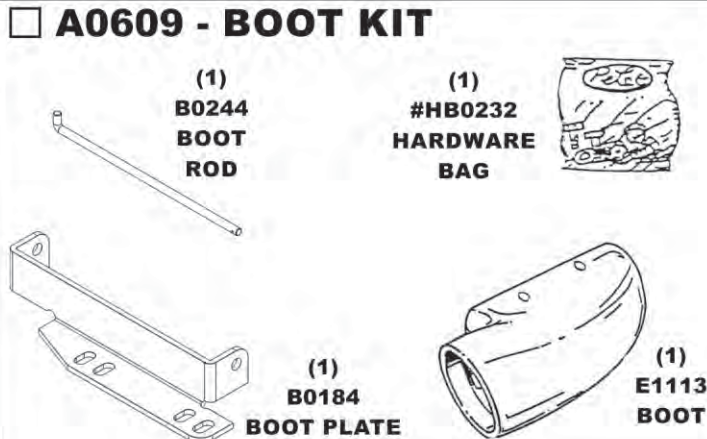




## 2-8 Upper Frame Assembly Installation

**NOTE:** During this step, it is suggested that two people install the upper frame to the lower mount tube. Using two people to lift the upper frame, lift the upper frame above the lower mount tube making sure the frame is pointing away from the mower (Figure 2-8). Slide the upper frame tube into the lower mount tube aligning the mounting hole. Insert (1)  $\frac{1}{2}$ " x 2-1/2" clevis pin P#(K0133) through the hole and fasten with (1)  $\frac{5}{32}$ " x 2-5/8" hair pin clip P#(K0088).

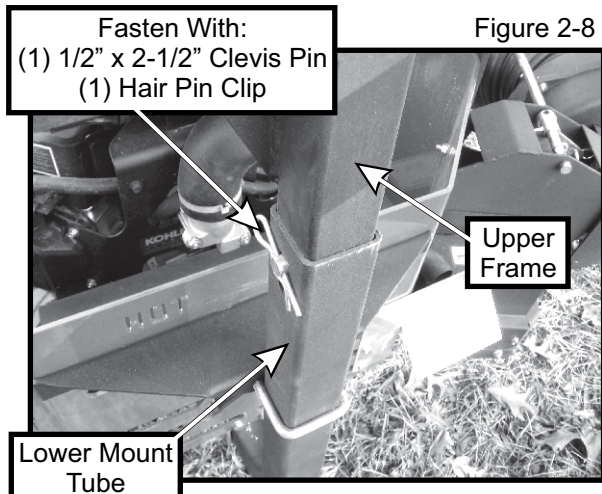

## 2-9 Top Assembly To Upper Frame Assembly Installation

Position the top assembly P#(A1157) above the upper frame assembly as shown in Figure 2-7. Fasten the top assembly to the upper frame assembly using (2)  $\frac{5}{16}$ "-18 x 2-1/2" HHCS P#(K0125) and (2)  $\frac{5}{16}$ "-18 nylon flange locknuts P#(K2516). Leave the locknuts slightly loose, to allow the top assembly to open and close easily. Refer to Figure 2-9 for hardware location.

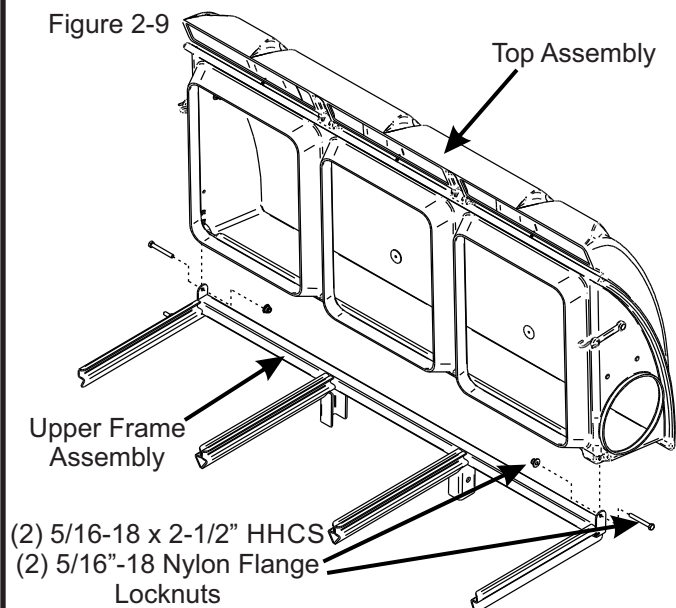

## 2-10 Boot To Mower Deck Installation 60" Boot Plate Mounting Instructions

To mount the boot plate P#(B0184) to the boot P#(E1113) use (2)  $\frac{3}{8}$ "-16 x 1" carriage bolts P#(K1182) and (2)  $\frac{3}{8}$ "-16 nyloc nuts P#(K1216). See Figure 2-10 for bolt placement.

### 48" & 52" Boot Plate Mounting Instructions

To mount the boot plate P#(B0184) to the boot P#(E1113) use (2)  $\frac{3}{8}$ "-16 x 1" carriage bolts P#(K1182) and (2)  $\frac{3}{8}$ "-16 nyloc nuts P#(K1216). See Figure 2-10 for bolt placement.



**NOTE:** When bolting the boot and boot plate together, the head of the bolt is placed from the inside of the boot. This will prevent grass from collecting on the bolts.

### For All Deck Sizes

Remove the bolts that hold the deflector shield in place so that the boot rod can fasten the boot and boot plate to the mower deck. Align the holes in the boot plate to the holes in the deflector shield mount and slide the boot rod P#(B0244) through and fasten by using (1) hair pin clip P#(K0099).

**NOTE:** The mower's deflector shield is removed in the following photo for clarity. Always have the deflector shield mounted when mowing.


Figure 2-10

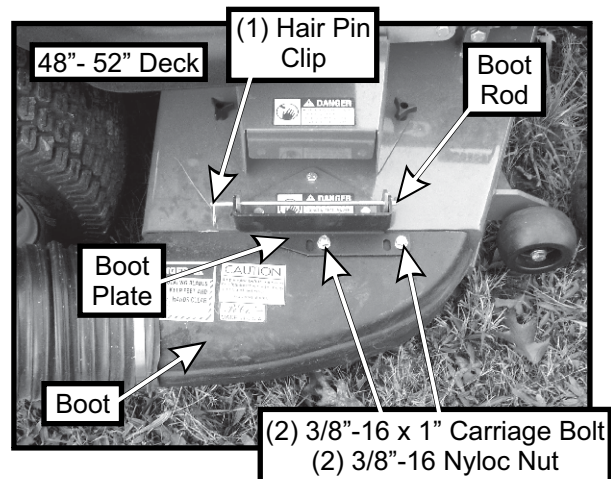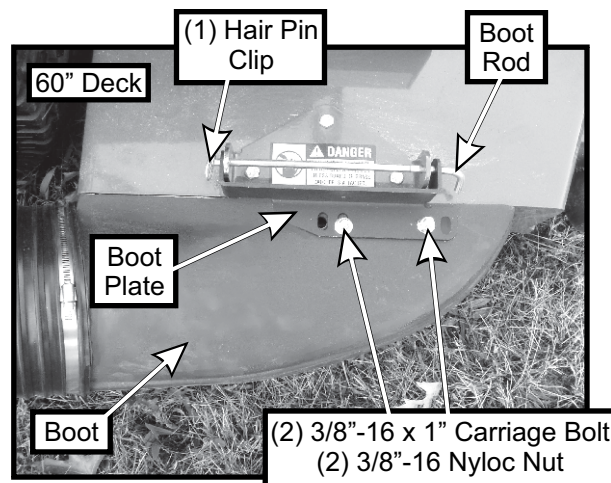

## 2-11 Blower Cone Installation

Thread (1) 5/16"-18 jam nut P#(K0120) onto each end of (2) 5/16"-18 x 2-1/2" HHCS P#(K0125). Now partially thread the bolts into each of the two tabs located on the blower housing. Place blower cone so the two tabs line up with the bolts then tighten completely. Refer to Figure 2-11 for reference.

Figure 2-11

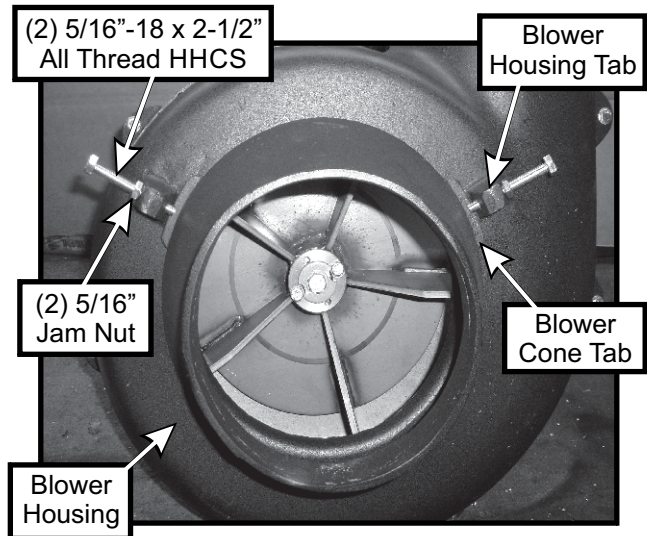

## 2-12 Impeller Blade Removal/Replacement

**To Remove:** First remove the 3/8"-16 x 1-1/2" HHCS P#(K1211) (#1), taper lock bushing washer P#(K0278) (#3) and spacer bushing P#(S3242) (#4) from the taper-lock bushing (#5). See Figure 2-12. Next remove the (2) 1/4"-20 x 1" HHCS (#2) and place them into the threaded holes of the taper-lock bushing P#(S4302) (#5). Gradually thread each bolt evenly into the taper-lock bushing, forcing the blade to break-away from the taper-lock bushing. If the impeller will not move, carefully hit the base of the impeller, between each vein, with a hammer, then try again.

**To Replace:** Place impeller blade over the engine shaft. Slide the taper-lock bushing (#5) on to the engine shaft and into the impeller blade, aligning the **non-threaded** holes of the taper-lock bushing to the threaded holes of the impeller blade. Fasten by using (2) 1/4"-20 x 1" HHCS (#2), (1) spacer bushing (#4) (1) taper lock bushing washer (#3), and (1) 3/8"-16 x 1-1/2" HHCS (#1). Torque to the proper specifications in the torque chart on the back of this manual. Next, rotate the impeller blade to ensure that the blade is clear of contact on all sides of the blower housing.

Figure 2-12






## 2-13 Lengths Of Hose Adjustment

The hoses in steps 2-14 and 2-15 must be cut to fit your machine. Follow steps 2-14 and 2-15. Do not cut the hoses until you have tried to fit them on your machine. Remember that the hoses have to be long enough to allow for enough clamping surface between the inlet, blower assembly, and the deck boot.

## 2-14 Upper Hose Installation

Fasten the inlet to the plastic top by sliding the inlet from the inside of the top to the outside and lock into place. Slide a 6" upper hose clamp P#(J0060) onto both ends of the 6" upper hose (Figure 2-13). Then slide one end of the 6" hose onto the inlet. Make sure there is about a two-inch overlap between the hose end and the container inlet. Proceed to slide the opposite end of the 6" hose onto the outlet of the blower assembly. See Figure 2-13 for details. Make sure both ends of the hose are clearly attached to the inlet and the blower assembly inlet. Tighten the hose clamps.

Figure 2-13

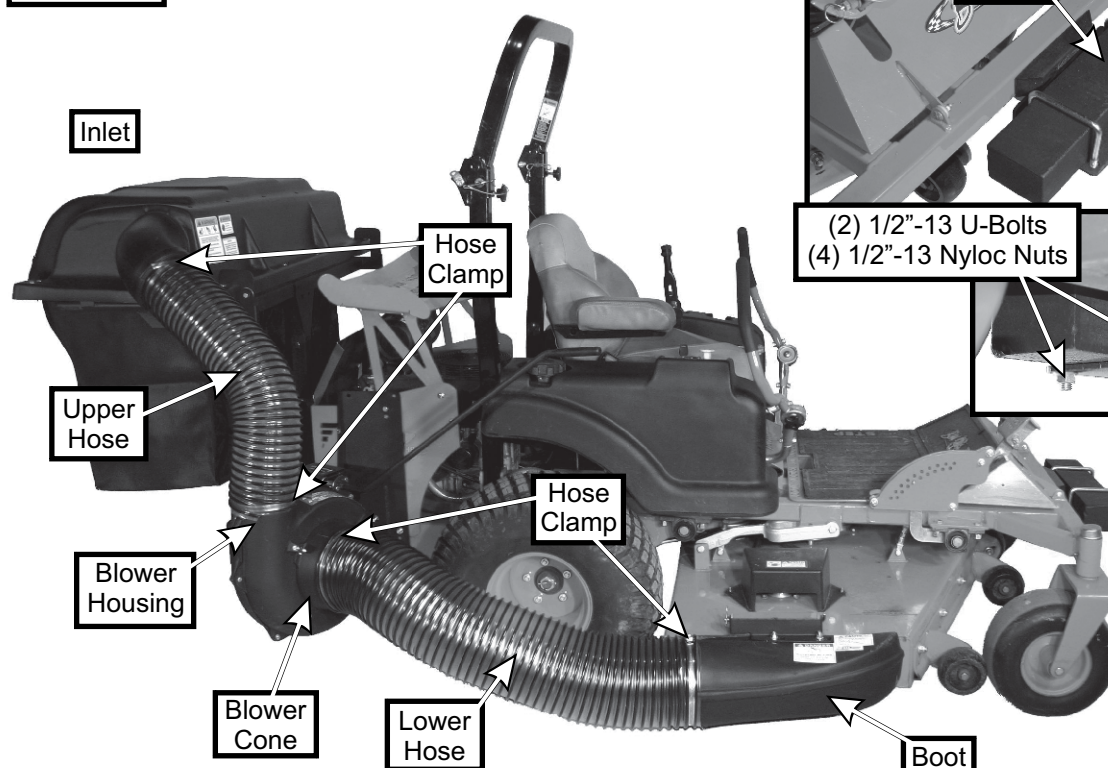

## 2-15 Lower Hose To Blower Cone Installation

Slide a 8" hose clamp P#(J0080) over both ends of the lower hose. Then proceed to slide the lower hose onto the blower cone. Tighten the hose clamp. The assembly should look like Figure 2-13.


## 2-16 Lower Hose To Boot Installation

Take the unattached end of the lower hose and slide it over the circular end of the boot. Use the lower hose clamp to secure the hose to the boot (Figure 2-13). Tip: Before securing clamp rotate hose counter-clockwise (away from yourself) approximately 1" to add in retaining boot to mower deck.

## 2-17 Front Weight Installation

Slide the weight bracket assembly P#(A0597) into the mower's front receiver hitch (Figure 2-17). Fasten by using (1) 5/8" x 3" clevis pin P#(K0172) and (1) 5/32" x 2-5/8" hair pin clip P#(K0088). When installing the weight bar (Figure 18) P#(B2220), you should have another person help position the weight centered onto the weight bracket assembly. Fasten the weight by using (2) 1/2"-13 U-bolts P#(K0331) and (4) 1/2"-13 flange nuts P#(K1246). Tighten all nuts and bolts.

Figure 2-17

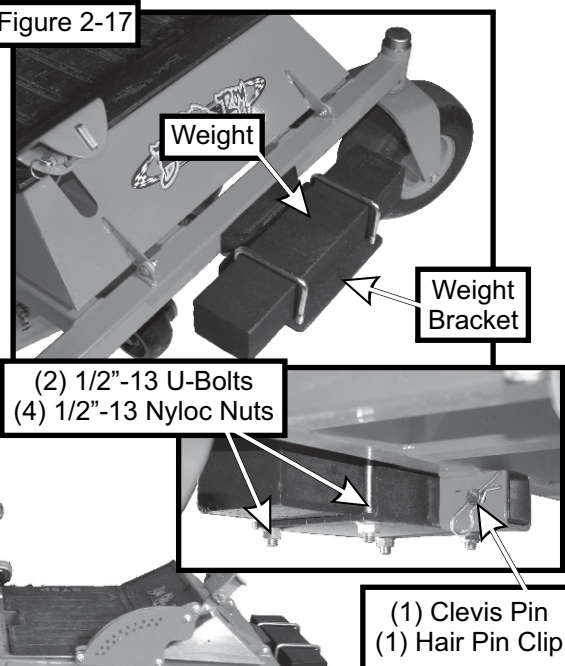

## 2-18 Installation/Removal Of Collection Bags

To install the bag onto the bag ring, first make sure the bag ring end caps are fastened to the bag ring. Place the seam openings of the bag onto the bag ring openings and turn the bag until the slot bracket in the bag ring is protruding from the opening in the bag (Figure 2-18a). Do this for each of three bags.

Install the completed assemblies onto the support frame and close the plastic top. Fasten both draw latches to hold the plastic top closed (Figure 2-18b).

To empty the bag, remove the bag and bag ring by lifting and sliding rearward. Grasp the loop on the bottom of the bag, turn it upside down and empty the collected debris (Figure 2-18c). Repeat for the other bags. Reinstall all bags, line with plastic bags if desired, close the plastic top and reattach the draw latches.

Plastic lawn and leaf bags, 33 gallon size, may be used inside the cloth bags. Be sure to leave enough plastic bag hanging over the frame so the plastic bags can be twist tied before emptying (Figure 2-18d).

Figure 2-18a

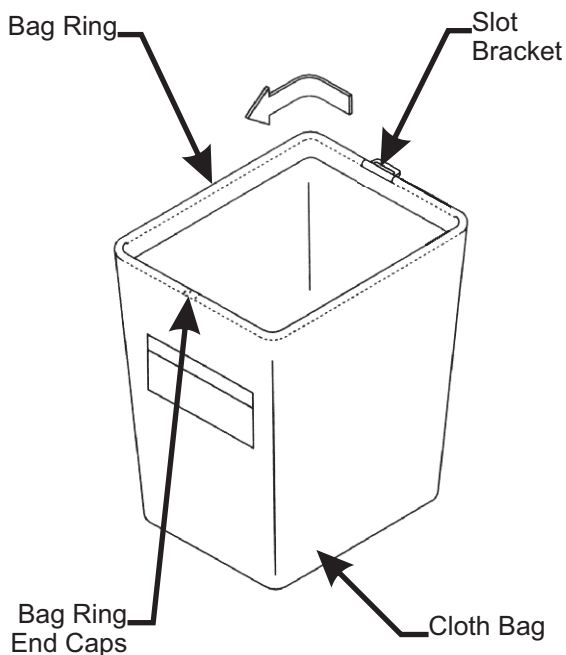


Figure 2-18b

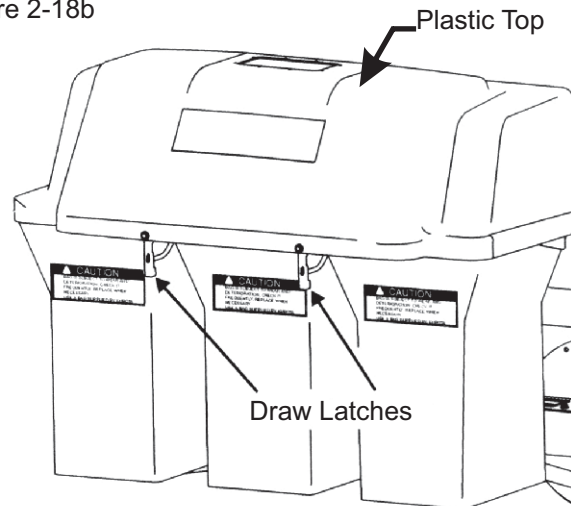


Figure 2-18c


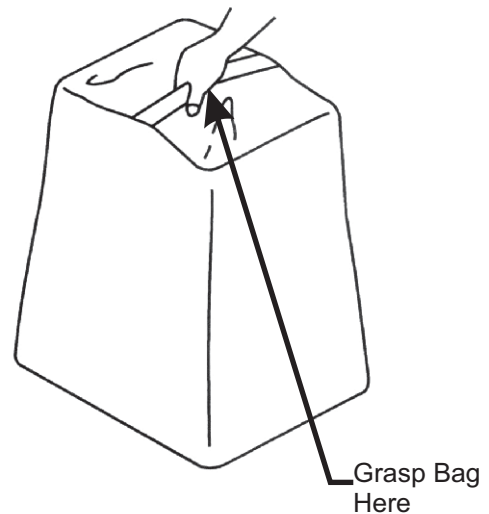


Figure 2-18d

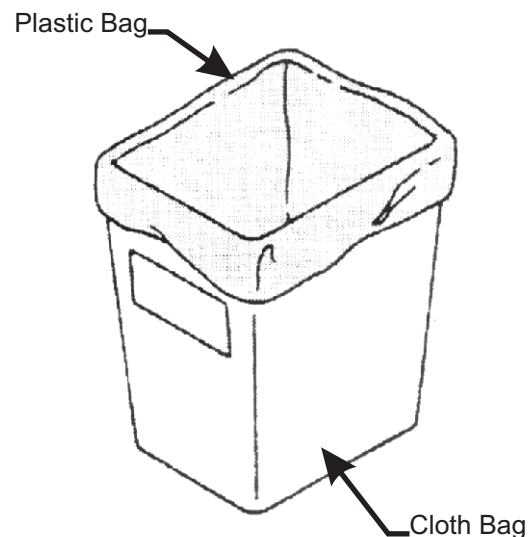

## SECTION III OPERATING INSTRUCTIONS

### 3-1 General Safety

Only qualified people familiar with this operator's manual and the mower's operator's manual should operate this machine.

### 3-2 Operation And Tips On Mowing

- A. Perform BEFORE EACH USE the maintenance list in paragraph 4-1.
- B. Start mower.
- C. With the mower at high idle speed, engage the mower deck.
- D. While seated in the operator's seat, rotate the engagement handle of the collection system away from the mower. Continue to rotate the handle until it stops in an over center position. With the blower engaged, you can proceed to operate the control levers of the mower.

**NOTE:** If the collection system does not appear to be collecting the grass clippings, disengage the deck and blower, then, engage the parking brake and turn the mower off. Proceed to section 3-3, and review the section 2-3 and 2-4, in this manual.

To obtain the maximum effectiveness from your collection system the tips listed below should be followed:

- \* Watch your speed- Normal conditions will allow a speed of up to approximately 5 mph, but thick, heavy damp conditions will require reduced ground speed.
- \* Mow with sharp blades- A sharp blade cuts cleaner.
- \* Wet grass and leaves will decrease effectiveness and will increase horsepower requirements.
- \* Mow at higher cutting heights- Remove and mulch no more than 2" of grass length with each mowing. (Experts recommend not cutting off more than 1/3 of the grass blade length at any given time.)
- \* Mow twice, at different height settings, (high, then low), if grass is extra tall.
- \* Remember that horsepower requirements will vary with the mowing conditions such as type and height of turf grass, moisture content, amount of leaves, whether the terrain is flat or hilly, etc.

### 3-3 Disengagement Of The Blower

- A. To disengage the blower, rotate the engagement handle towards the mower.

**WARNING:** The blower will continue to spin. DO NOT TOUCH the blower, pulleys, or the belt until the tractor is turned off. DO NOT adjust the belt tension until the mower is turned off. Refer to section 2-3 and 2-4 of the manual.

### 3-4 Unloading The Collection System

**NOTE:** To determine when the collection bags are full, follow the following steps:

- A. Stop the forward movement of the mower.
- B. Disengage the mower deck.
- C. Disengage the blower.
- D. Engage the parking brake.
- E. Once the parking brake has been engaged, then and only then, walk behind the mower and check the collection bags by lifting the plastic hood. Load in bags should not exceed the height of the installed bag.
- F. To release bags from frame, lift bag ring from tab on bagger frame, slide bag out and turn bags over to deposit clippings.
- G. Follow steps on page 14 to re-attach bags back to the bagger.

**NOTE:** Do not allow collection bags to become over-filled as potential damage may occur to your equipment. Also, be sure to clean the hood screen as needed.

## SECTION IV MAINTENANCE

### 4-1 Maintenance Checklist

Before each use:

- 1. Check blades and spindles to be sure that no foreign objects, such as wire or steel strapping bands, are wrapped around them.
- 2. Inspect blades for wear. Replace if necessary. If it is necessary to sharpen the blades, remove the blades from the spindles before sharpening. DO NOT sharpen blades while still attached to the mower.

3. Make sure all shields are in place and in good condition. Repair or replace any missing or damaged shields.
4. Perform lubrication per paragraph 4-2.
5. Listen for abnormal sounds, which might indicate loose parts, damaged bearings, or other damage. Correct any deficiency before continuing operation.
6. With the engine off, engage the blower assembly. Check the belt tension and inspect the pulley belt for cracks or tears.
7. Check for wear or deterioration of the upper or lower hoses. If there are any portions of the hose that have been torn or worn through, replace with genuine Bad Boy parts.

After Each Use:

1. Clean all debris from machine especially from the container, underneath the belt shields, and safety decals. Replace any missing or illegible decals.
2. Inspect the unit for worn or damaged components. Repair or replace before the next use. Any replacement component installed during repair shall include the component's current safety decal specified by the manufacturers to be affixed to the component.
3. Check belt for proper tension.

THE SERIAL NUMBER PLATE  
IS LOCATED ON THE TOP  
ASSEMBLY P#(A0551)

PECO OUTDOOR POWER EQUIPMENT	
Model Number	
Serial Number	
Arden, North Carolina 28704	

WRITE THE MODEL AND  
SERIAL NUMBER IN THE  
BOX ABOVE FOR FUTURE  
REFERENCE.

## 4-2 Lubrication

**NOTE:** Use only white lithium based grease for lubrication of the shaft on the blower assembly.

1. On initial use: Grease the fitting on the blower shaft.
2. Every 25 hours of use: Re-grease the grease fitting.
3. Every 200 hours of use: Check oil levels in gear box. Oil in gear box should cover the gears. If not, fill using an EP90 weight oil. 6oz. will fill the gear box from empty.

## SECTION V PARTS AND SERVICE

### 5-1 Parts And Service Information

Bad Boy collection system owners should record the name and telephone number of their Service Center. Your Service Center will be happy to supply replacement parts, accessories, and do any service or repairs to your collection system. If for any reason your Service Center is unable to service your collection system or supply replacement parts, contact PECO and include the following information on the chart below.

**Unit Model Number:** \_\_\_\_\_

**Unit Engine Size:** \_\_\_\_\_

**Unit Serial Number:** \_\_\_\_\_

**Date of purchase:** \_\_\_\_/\_\_\_\_/\_\_\_\_

**Dealer/Distributor Name:** \_\_\_\_\_

**Dealer's/Distributor's:** \_\_\_\_\_ **State:** \_\_\_\_\_ **Zip:** \_\_\_\_\_

**Phone Number:** \_\_\_\_\_

**Address: PECO Inc.**  
**100 Airport Road**  
**Arden, NC 28704**


**Phone #: (828) 684-1234 or Toll Free: (800) 438-5823**

**Email: peco@lawnvac.com**



## SAFETY DECALS

To promote safe operation, Bad Boy supplies safety decals on all products manufactured. Damage can occur to safety decals either through shipment, use or reconditioning. Contact your local Service Center for replacement decals.

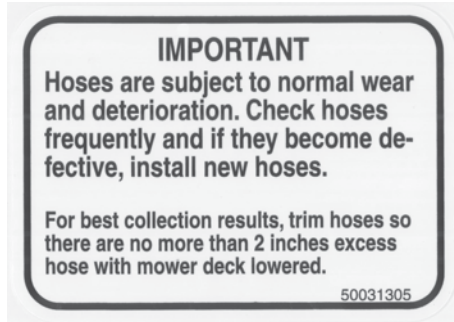

Part #: R1054




Part #: R1057




Part # R1051



Part #: R1050

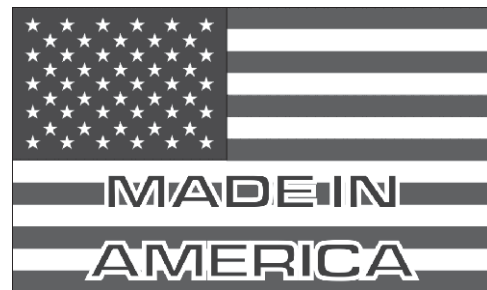

Part #: R1065

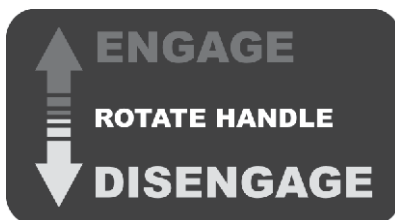

Part #: R1083



Part #: R1052




Part #: R4037


# TORQUE SPECIFICATIONS

Proper torque for American fasteners used on Bad Boy equipment.  
Recommended Torque in Foot Pounds (Newton Meters).\*


## AMERICAN Bolt Head Markings

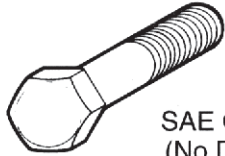

SAE Grade 2  
(No Dashes)

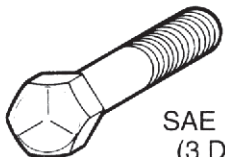

SAE Grade 5  
(3 Dashes)

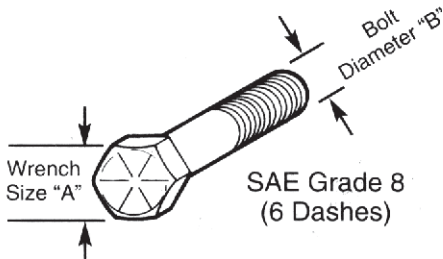


SAE Grade 8  
(6 Dashes)

WRENCH SIZE (IN.) "A"	BOLT DIAMETER (IN.) "B" AND THREAD SIZE	SAE GRADE 2	SAE GRADE 5	SAE GRADE 8
7/16	1/4 - 20 UNC	6 (7)	8 (11)	12 (16)
7/16	1/4 - 28 UNF	6 (8)	10 (13)	14 (18)
1/2	5/16 - 18 UNC	11 (15)	17 (23)	25 (33)
1/2	5/16 - 24 UNF	13 (17)	19 (26)	27 (37)
9/16	3/8 - 16 UNC	20 (27)	31 (42)	44 (60)
9/16	3/8 - 24 UNF	23 (31)	35 (47)	49 (66)
5/8	7/16 - 14 UNC	32 (43)	49 (66)	70 (95)
5/8	7/16 - 20 UNF	36 (49)	55 (75)	78 (106)
3/4	1/2 - 13 UNC	49 (66)	76 (103)	106 (144)
3/4	1/2 - 20 UNF	55 (75)	85 (115)	120 (163)
7/8	9/16 - 12 UNC	70 (95)	109 (148)	153 (207)
7/8	9/16 - 18 UNF	79 (107)	122 (165)	172 (233)
15/16	5/8 - 11 UNC	97 (131)	150 (203)	212 (287)
15/16	5/8 - 18 UNF	110 (149)	170 (230)	240 (325)
1-1/8	3/4 - 10 UNC	144 (195)	266 (360)	376 (509)
1-1/8	3/4 - 16 UNF	192 (260)	297 (402)	420 (569)
1-5/16	7/8 - 9 UNC	166 (225)	430 (583)	606 (821)
1-5/16	7/8 - 14 UNF	184 (249)	474 (642)	668 (905)
1-1/2	1 - 8 UNC	250 (339)	644 (873)	909 (1232)
1-1/2	1 - 12 UNF	274 (371)	705 (955)	995 (1348)
1-1/2	1 - 14 UNF	280 (379)	721 (977)	1019 (1381)
1-11/16	1-1/8 - 7 UNC	354 (480)	795 (1077)	1288 (1745)
1-11/16	1-1/8 - 12 UNF	397 (538)	890 (1206)	1444 (1957)
1-7/8	1-1/4 - 7 UNC	500 (678)	1120 (1518)	1817 (2462)
1-7/8	1-1/4 - 12 UNF	553 (749)	1241 (1682)	2013 (2728)
2-1/16	1-3/8 - 6 UNC	655 (887)	1470 (1992)	2382 (3228)
2-1/16	1-3/8 - 12 UNF	746 (1011)	1672 (2266)	2712 (3675)
2-1/4	1-1/2 - 6 UNC	870 (1179)	1950 (2642)	3161 (4283)
2-1/4	1-1/2 - 12 UNF	979 (1327)	2194 (2973)	3557 (4820)

Proper torque for metric fasteners used on Peco equipment.  
Recommended torque in foot pounds (newton Meters).\*

## METRIC

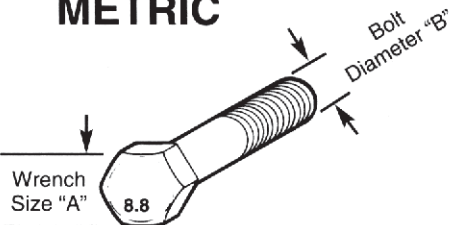

Numbers appearing on bolt heads  
indicate ASTM class.

WRENCH SIZE (mm) "A"	BOLT DIA. (mm) "B"	ASTM 4.6	ASTM 8.8	ASTM 9.8	ASTM 10.9
8	5	1.8 (2.4)		5.1 (6.9)	6.5 (8.8)
10	6	3 (4)		8.7 (12)	11.1 (15)
13	8	7.3 (10)		21.1 (29)	27 (37)
16	10	14.5 (20)		42 (57)	53 (72)
18	12	25 (34)	74 (100)	73 (99)	93 (126)
21	14	40 (54)	118 (160)	116 (157)	148 (201)
24	16	62 (84)	167 (226)	181 (245)	230 (312)
30	20	122 (165)	325 (440)		449 (608)
33	22		443 (600)		611 (828)
36	24	211 (286)	563 (763)		778 (1054)
41	27		821 (1112)		1138 (1542)
46	30	418 (566)	1119 (1516)		1547 (2096)

\*Use 75% of the specified torque value for plated  
fasteners. Use 85% of the specified torque  
values for lubricated fasteners.

## **NOTES**

**Turn any Bad Boy Lawn Vac into a  
total lawn grooming tool with the Bad  
Boy Wand Kit!**

With your Bad Boy Wand Attachment you will double the ability of your Bad Boy Lawn Vac. Using the same powerful vacuum/blower that makes your Lawn Vac work so well, you will be able to get to all those hard-to-reach places where you needed a rake or broom before.

**Contact Bad Boy Today!**

