



COLLECTION SYSTEM & UTILITY TRAILER

Model# 5920E, 5920EB, 7930E, 7930EB

20 CUBIC FOOT CONVERTIBLE TRAILER VAC

5920E
5920EB

30 CUBIC FOOT CONVERTIBLE TRAILER VAC

7930E
7930EB



OPERATOR'S MANUAL

ASSEMBLY • OPERATION • MAINTENANCE

GRASS COLLECTION SYSTEM

TABLE OF CONTENTS

SECTION	PAGE	SECTION	PAGE
Safety	2-3	Dump Handle Installation	15
Safety Alert Symbols	3	Wheel Installation	16-17
I INTRODUCTION AND DESCRIPTION	4	Trailer Top Installation	17
Introduction	4	E-Drive/Blower/Blade Assembly Installation	18
Description	4	Blower Cone Installation	18
Parts List	5-8	Inlet Ring Installation	18
II OPERATING INSTRUCTIONS	9	Upper Hose Installation	19
General Safety	9	Attaching Trailer to Tractor	19
Operation & Tips On Mowing	9	Drive Stay Assembly Installation	20
Disengagement Of The E-Drive Assembly	9	Drive Stay Adjustments	21-24
Unloading The Collection System	9	Universal Boot Installation	25-27
III MAINTENANCE	10	Lower Hose Installation	27
Maintenance Checklist	10	Universal Mount Base Installation	28
IV PARTS AND SERVICE	10	E-Drive Installation	29
Parts And Service Information	10	Impeller Blade Removal/Replacement	30
Torque Specifications	11	E-Drive Battery Removal/Replacement	31
V INSTALLATION FOR USE	12	Wire Harness Installation	32
Preparation of Parts	13	Jack Stand Assembly Installation	33-34
Removing Trailer Pan	14	Exploded Views	35-55
Wooden Support Removal	14	Safety Decals	56
Removing Trailer from Pallet	15	Troubleshooting	57
Attaching Trailer to Trailer Pan	15	Warranty	58

SAFETY

1. Read the operator's manual carefully and familiarize yourself with the proper use of your attachment. Do not allow anyone who is not acquainted with the Safety Instructions to use your attachment.
2. Know the controls and how to stop them quickly. READ THE OPERATOR'S MANUAL!
3. Do not allow children to operate the machine. Do not allow adults to operate it without proper instruction.
4. Be especially watchful of children and pets entering into the area while operating.
5. Keep your eyes and mind on your machine while mowing or operating your attachment. Don't let others distract you.
6. Do not attempt to operate your machine when not in the driver's seat.
7. Always shut off blades and engine when emptying the container.
8. Stop machine, shut off deck attachment, set parking brake, shut off engine and remove ignition key before removing clogs, removing or replacing hose, boot, blower cone, or performing any maintenance.
9. Mow across the face of slopes (not more than 10 degrees); never up and down the face.
10. It is recommended that the container be emptied when half full while operating on slopes. Start mowing on slopes when the container is empty.
11. Inspect your lawn and remove any foreign objects before mowing. Never deliberately run the mower across any foreign object.
12. Wear hearing protection.
13. Wear eye protection to prevent debris from getting into your eyes.

SAFETY

WARNING! NEVER operate the mower unless the discharge guard and either the deflector assembly or the vacuum collector adapter are fastened securely in place.

WARNING! Do not work around the mower deck boot or the blower area until you are certain that the mower blades and the blower impeller have stopped rotating.

WARNING! To avoid serious injury, perform maintenance on the vacuum collector; **ONLY AFTER STOPPING THE MOWER'S ENGINE AND WAITING FOR ALL MOVING PARTS TO COME TO A COMPLETE STOP.** Set the parking brake. Always remove the ignition key before beginning maintenance.

WARNING! For your own personal safety, **ALWAYS mow ACROSS the face of slopes and NEVER UP and DOWN the face. NEVER attempt to mow excessively steep slopes, and use caution when turning on any slope.**

Safety Alert Symbol



This Safety Alert Symbol means: **“ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!”**

This symbol is used to call attention to safety precautions that should be followed by the operator to avoid accidents. When you see this symbol, carefully read the message that follows and heed its advice. Failure to comply with safety precautions could result in death or serious bodily injury.

Safety Signs

The signal words **DANGER**, **WARNING**, and **CAUTION** are used on the equipment safety signs. These words are intended to alert the viewer to the existence and the degree of hazard seriousness.



White letters on **RED**

This signal word indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.



Black letters on **ORANGE**

This signal word indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

It may also be used to alert against unsafe practices.



Black letters on **YELLOW**

This signal word indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury.

It may also be used to alert against unsafe practices.

Section I - INTRODUCTION AND DESCRIPTION

Introduction

We are pleased to have you as a PECO customer. Your collection system has been designed to give you a low maintenance, simple, and effective way to collect the grass clippings from your mower. This manual is provided to give you the necessary instructions to properly mount, operate and maintain the collection system on your mower. Please read this manual thoroughly. Understand what each control is for and how to use it. Observe all safety decal precautions on the machine and noted throughout the manual.

NOTE: All references made to right, left, front, rear, top or bottom are as viewed from the normal operator's position on the mower.

Description

The grass collection system is designed for turf maintenance where there is a need to collect the grass clippings as the mower cuts the turf. It is also used for picking up leaves in pre-season and post-season clean-up. The engine/blower/blade assembly, is mounted on the right side of the unit. The blower draws grass clippings from the discharge area up and back to the container mounted to the rear of the mower. The operator can engage the engine/blower/blade assembly by starting the engine. Once the container is full of clippings, the operator can remove the rear door and then easily pull and lift the handle to dump.



Unit Model #: 5920E

Owner's Manual: Q0598

Mower Type:


Vac Type: X20 Trailer Vac

Drive Type: E Drive


Fits Year(s):



Crate Contents

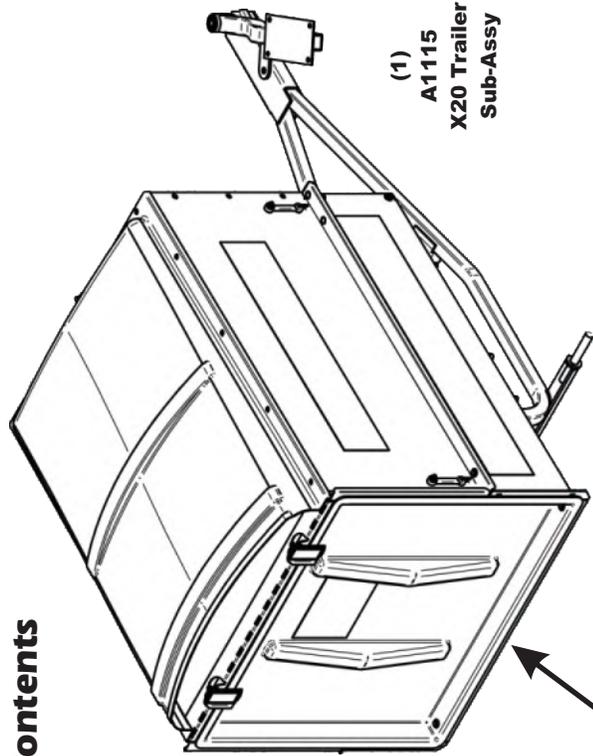


Components Box Contents

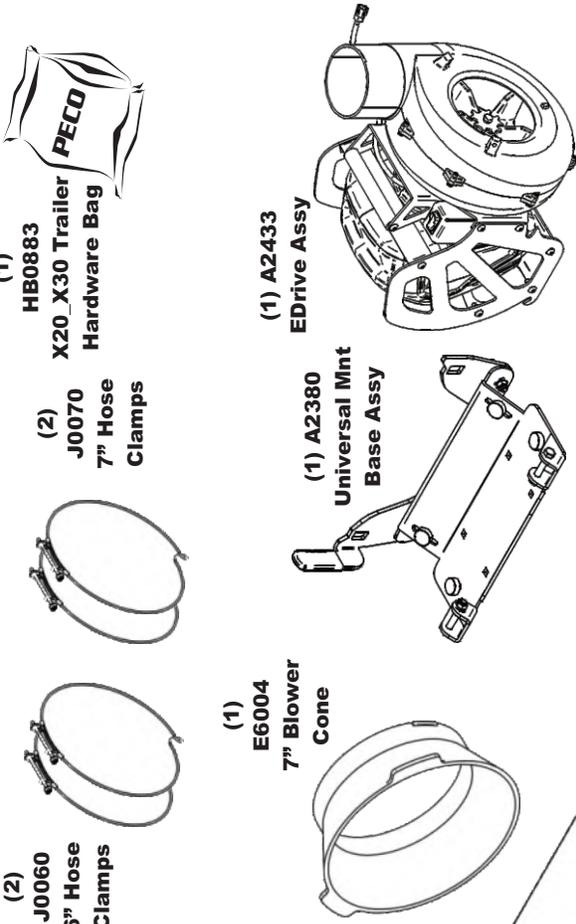

The contents below are placed inside of the X20 Trailer Sub-Assy

(1) F0070-66 7" x 66" Lower Hose

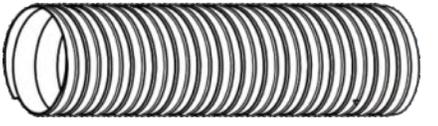


(1) A0262 Tail Gate Assy




(1) F0060-60 6" x 60" Upper Hose




(2) H5001 Wheel & Tire

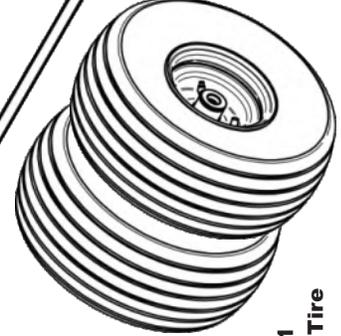


(1) B3492 Dump Handle

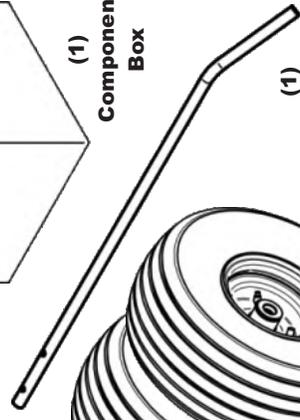


(1) Components Box

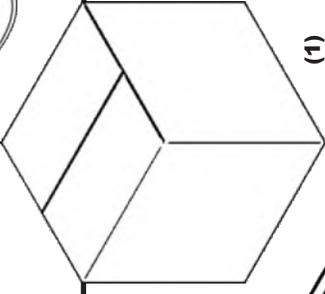

A0121 Small Universal Boot Kit

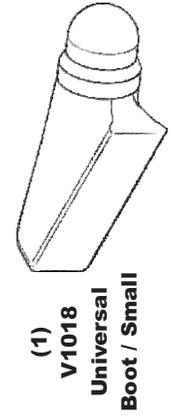

A0137 Large Universal Boot Kit

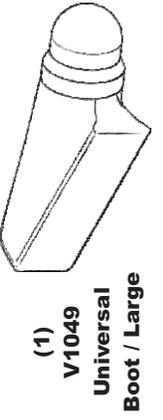

Unit Model #: 5920EB

Mower: **Owner's Manual: Q0598**

Mower Type:


Deck Size: **Vac Type: X20 Trailer Vac**

Deck Type: **Drive Type: E Drive**

Revision #: **Fits Year(s):**




Crate Contents

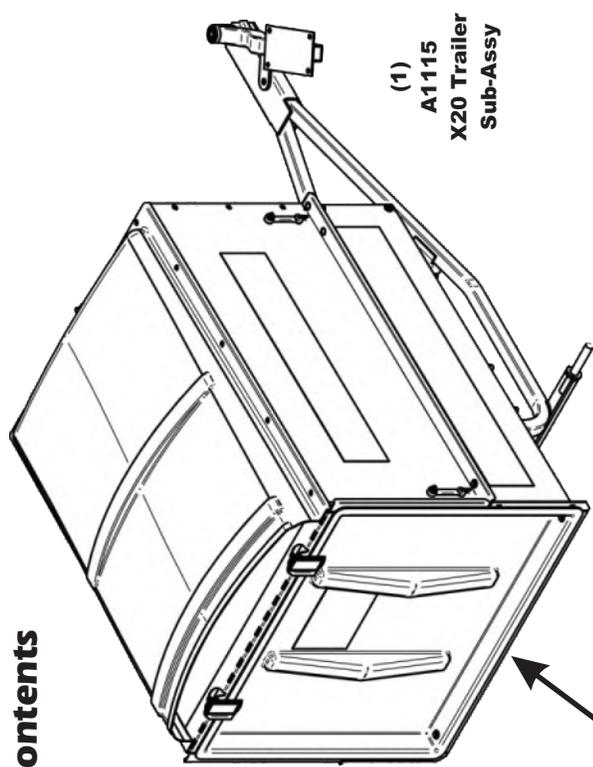



(1) **A1115 X20 Trailer Sub-Assy**

The contents below are placed inside of the X20 Trailer Sub-Assy

(1) **F0070-66 7" x 66" Lower Hose**

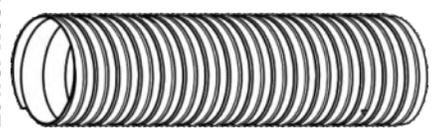


 (1) **F0060-60 6" x 60" Upper Hose**

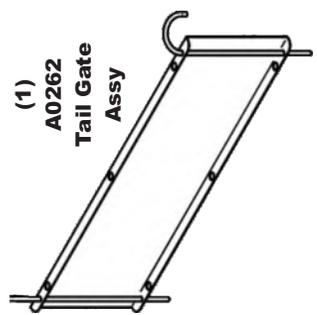


(1) **A0262 Tail Gate Assy**


(2) **H5001 Wheel & Tire**

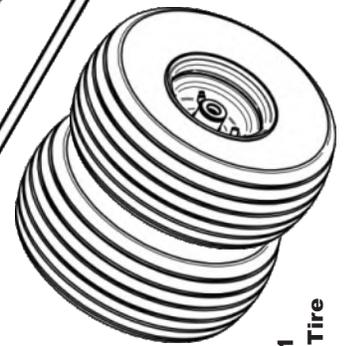

(1) **B3492 Dump Handle**

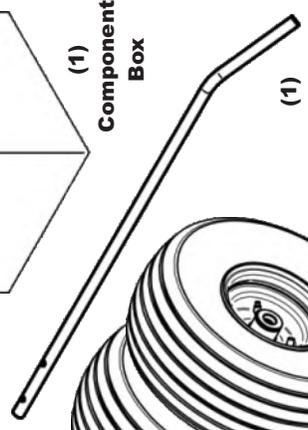

(1) **Components Box**

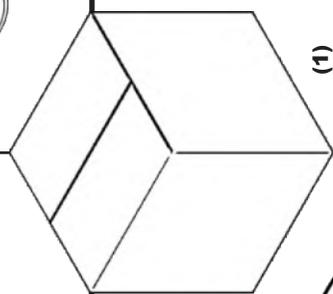

Components Box Contents


(2) **J0060 6" Hose Clamps**




(2) **J0070 7" Hose Clamps**




(1) **E6004 7" Blower Cone**

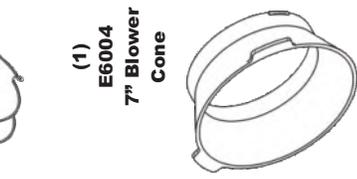


(1) **A2434 E-Drive Battery & Charger Kit**

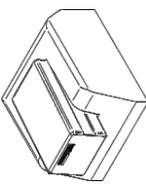

(1) **A2380 Universal Mint Base Assy**

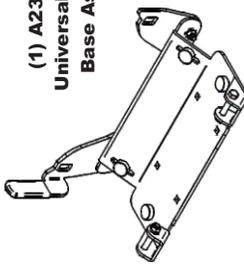

(1) **A2433 Edrive Assy**

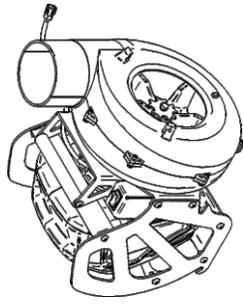

(1) **HB0883 X20_X30 Trailer Hardware Bag**



A0121 Small Universal Boot Kit

(1) **A0849 Boot Kit HW Bag**



(1) **V1018 Universal Boot / Small**




A0137 Large Universal Boot Kit

(1) **A0856 Boot Kit HW Bag**



(1) **V1049 Universal Boot / Large**

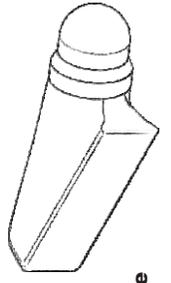

Unit Model #: 7930E

Owner's Manual: Q0598

Mower Type: X30 Trailer Vac

Drive Type: E Drive

Fits Year(s):

Revision #:

Optional Accessories

Components Box Contents

Crate Contents

- A2214 Jack Stand Assy w/ Jack Foot Kit
 - (1) A2200 Jack Stand Assy
 - (1) B1089 Jack Stand Mount / Gusset
 - (1) HB0819 Jack Stand HW Bag
- A2215 Jack Stand Assy w/ Caster Wheel Kit
 - (1) A2201 Jack Stand Assy
 - (1) B1089 Jack Stand Mount / Gusset
 - (1) HB0819 Jack Stand HW Bag





- (2) J0060 6" Hose Clamps
- (2) J0070 7" Hose Clamps
- (1) E6004 7" Blower Cone
- (1) HB0883 X20_X30 Trailer Hardware Bag
- (1) A2433 E-Drive Assy
- (1) A2380 Base Assy

- (1) A1116 X30 Trailer Sub-Assy

The contents below are placed inside of the X30 Trailer Sub-Assy

- A0121 Small Universal Boot Kit
 - (1) A0849 Boot Kit HW Bag
 - (1) V1018 Universal Boot / Small
- A0137 Large Universal Boot Kit
 - (1) A0856 Boot Kit HW Bag
 - (1) V1049 Universal Boot / Large

- (1) Components Box
- (1) F0070-66 7" x 66" Lower Hose
- (1) F0060-60 6" x 60" Upper Hose
- (1) A0263 Tail Gate Assy
- (1) B3492 Dump Handle
- (2) H5001 Wheel & Tire

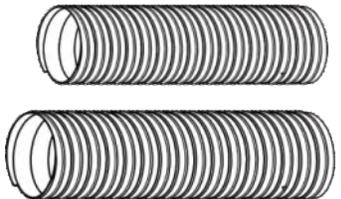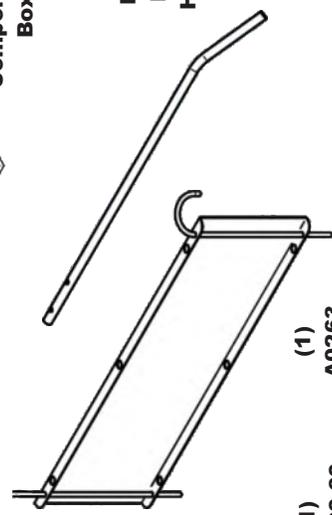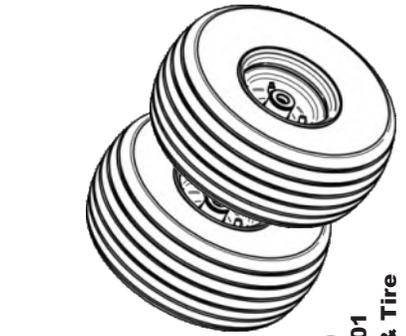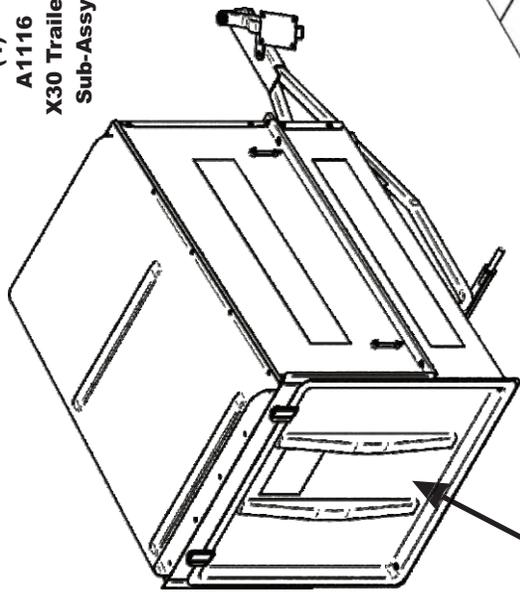

Unit Model #: 7930EB

Mower: **Owner's Manual: Q0598**

Mower Type:

Deck Size:

Deck Type:

Revision #:

Vac Type: X30 Trailer Vac


Drive Type: E Drive

Fits Year(s):




Crate Contents

(1) A1116
X30 Trailer
Sub-Assy

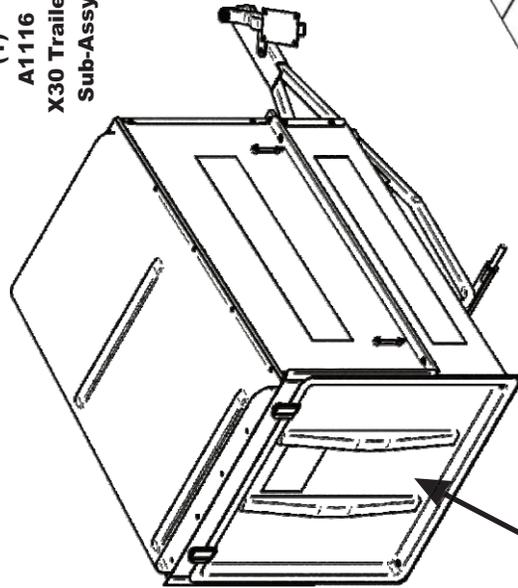

The contents below are placed
inside of the X30 Trailer Sub-Assy

(1)
Components
Box

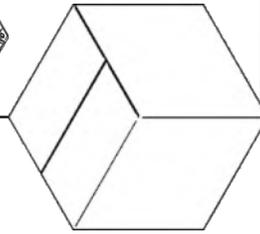

Components Box Contents


(2) J0060
6" Hose
Clamps



(1) E6004
7" Blower
Cone



(1) A2434 E-
Drive Battery
& Charger Kit

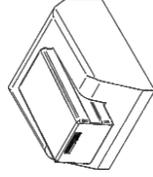

(2) J0070
7" Hose
Clamps




(1) Hb0883
X20_X30 Trailer
Hardware Bag



(1) A2380
Base Assy




(1) A2433
E-Drive Assy

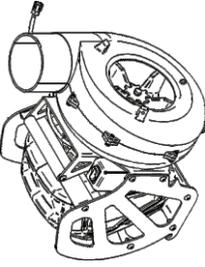

Optional Accessories

A2214 Jack Stand Assy w/ Jack Foot Kit

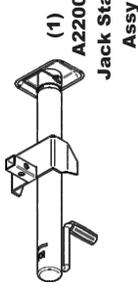

(1) A2200
Jack Stand
Assy

 
(1) B1089
Jack Stand
Mount /
Gusset



(1) HB0819
Jack Stand
HW Bag



A2215 Jack Stand Assy w/ Caster Wheel Kit



(1) A2201
Jack Stand
Assy


(1) B1089
Jack Stand
Mount /
Gusset




(1) HB0819
Jack Stand
HW Bag



(1)
F0070-66
7" x 66"
Lower Hose

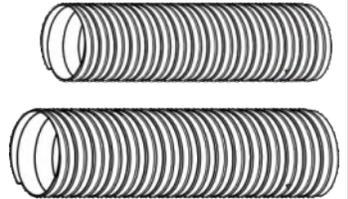

(1)
F0060-60
6" x 60"
Upper Hose

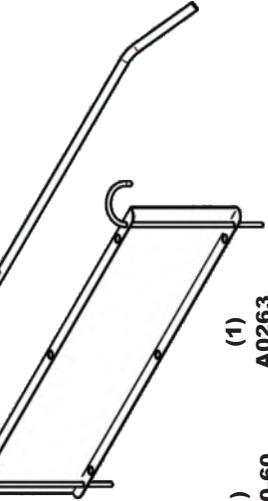

(1)
B3492
Dump
Handle



(2)
H5001
Wheel & Tire

A0121 Small Universal Boot Kit

(1)
A0849
Boot Kit
HW Bag



(1)
V1018
Universal
Boot / Small



A0137 Large Universal Boot Kit

(1)
A0856
Boot Kit
HW Bag



(1)
V1049
Universal
Boot / Large



SECTION II OPERATING INSTRUCTIONS

General Safety

Only qualified people familiar with this operator's manual and the mower's operator's manual should operate this machine.

Operation And Tips On Mowing

- A. Perform BEFORE EACH USE the maintenance list referenced in Section IV.
- B. Start the mower.
- C. Start the EDrive Assembly.
- D. With the mower turned on, engage the mower deck.
- E. Proceed to operate the control levers of the mower.

NOTE: If the collection system does not appear to be collecting the grass clippings, disengage the deck and EDrive assembly, then, engage the parking brake and turn the mower off. Check upper and lower hoses for any clogs.

To obtain the maximum effectiveness from your collection system, the tips listed below should be followed:

- * Watch your speed- Normal conditions will allow a speed of up to approximately 4 mph, but thick, heavy damp conditions will require reduced ground speed.
- * Mow with sharp blades- A sharp blade cuts cleaner.
- * Wet grass and leaves will decrease effectiveness and will increase horsepower requirements.
- * Mow at higher cutting heights- Remove and mulch no more than 2" of grass length with each mowing. (Experts recommend not cutting off more than 1/3 of the grass blade length at any given time.)
- * Mow twice, at different height settings, (high, then low), if grass is extra tall.
- * Remember that horsepower requirements will vary with the mowing conditions such as type and height of turf grass, moisture content, amount of leaves, whether the terrain is flat or hilly, etc.

Disengagement Of The EDrive Assy

- A. To disengage the EDrive assembly, move the Rocker Switch to the off position.

WARNING: DO NOT TOUCH the EDrive Assembly until after the tractor is turned off.

Unloading The Collection System

NOTE: Collection system blower will have an audible change in tone when the collection system is full.

- A. Stop the forward movement of the mower.
- B. Engage the parking brake.
- C. Disengage the mower deck and EDrive assembly
- D. Once the parking brake has been engaged, then and only then, walk back and turn off the collection system blower.
- E. Detach the upper hose from the inlet mount.
- F. Remove the trailer door.
- G. Unlock and lift the handle to pivot the container towards the ground. The container will then release its contents.
- H. Once the contents of the container have fallen out, the container is ready to move back into its normal operating position. Pull the handle downward and return the handle into the locked position. Then re-attach the trailer door and the upper hose.

NOTE: Do not allow the container to become over-filled as potential damage may occur to your equipment. Also, be sure to clean the hood screen as needed.

SECTION III MAINTENANCE

Maintenance Checklist

Before each use:

1. Check blades and spindles to be sure that no foreign objects, such as wire or steel strapping bands, are wrapped around them.
2. Inspect blades for wear. Replace if necessary. If it is necessary to sharpen the blades, remove the blades from the spindles before sharpening. **DO NOT** sharpen blades while still attached to the mower.
3. Make sure all shields are in place and in good condition. Repair or replace any missing or damaged shields.
4. Listen for abnormal sounds, which might indicate loose parts, damaged bearings, or other damage. Correct any deficiency before continuing operation.
5. Check for wear or deterioration of the upper or lower hoses. If there are any portions of the hose that have been torn or worn through, replace immediately.

After Each Use:

1. Clean all debris from machine especially from the container, and safety decals. Replace any missing or illegible decals.
2. Inspect the unit for worn or damaged components. Repair or replace before the next use. Any replacement component installed during repair shall include the component's current safety decal specified by the manufacturers to be affixed to the component.

SECTION IV PARTS & SERVICE

Parts And Service Information

Collection system owners should record the name and telephone number of their Service Center. Your Service Center will be happy to supply replacement parts, accessories, and do any service or repairs to your collection system. If for any reason your Service Center is unable to service your collection system or supply replacement parts, contact New PECO, Inc. and include the following information on the chart below.

DOCUMENT THE FOLLOWING INFORMATION FOR FUTURE REFERENCE

Unit Model Number: _____

Unit Engine Size: _____

Unit Serial Number: _____

Date of purchase: ____/____/____

Dealer/Distributor Name: _____

Address: _____ **State:** _____ **Zip:** _____

Phone Number: _____

New PECO, Inc.
10 Walden Dr | Arden, North Carolina 28704
Phone: 1-800-438-5823 | 828-684-1234
Fax: 828-684-0858
Email: peco@lawnvac.com
Website: www.lawnvac.com


TORQUE SPECIFICATIONS

Proper torque for American fasteners used on **PECO** equipment.
Recommended Torque in Foot Pounds (Newton Meters).*


AMERICAN Bolt Head Markings



SAE Grade 2
(No Dashes)

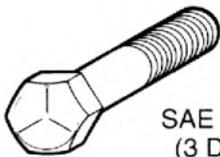


SAE Grade 5
(3 Dashes)

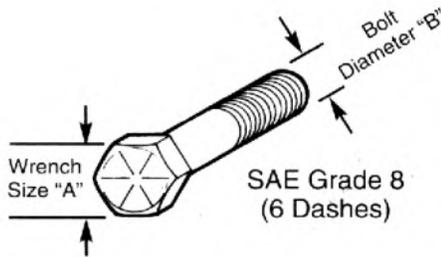

SAE Grade 8
(6 Dashes)

WRENCH SIZE (IN.) "A"	BOLT DIAMETER (IN.) "B" AND THREAD SIZE	SAE GRADE 2	SAE GRADE 5	SAE GRADE 8
7/16	1/4 - 20 UNC	6 (7)	8 (11)	12 (16)
7/16	1/4 - 28 UNF	6 (8)	10 (13)	14 (18)
1/2	5/16 - 18 UNC	11 (15)	17 (23)	25 (33)
1/2	5/16 - 24 UNF	13 (17)	19 (26)	27 (37)
9/16	3/8 - 16 UNC	20 (27)	31 (42)	44 (60)
9/16	3/8 - 24 UNF	23 (31)	35 (47)	49 (66)
5/8	7/16 - 14 UNC	32 (43)	49 (66)	70 (95)
5/8	7/16 - 20 UNF	36 (49)	55 (75)	78 (106)
3/4	1/2 - 13 UNC	49 (66)	76 (103)	106 (144)
3/4	1/2 - 20 UNF	55 (75)	85 (115)	120 (163)
7/8	9/16 - 12 UNC	70 (95)	109 (148)	153 (207)
7/8	9/16 - 18 UNF	79 (107)	122 (165)	172 (233)
15/16	5/8 - 11 UNC	97 (131)	150 (203)	212 (287)
15/16	5/8 - 18 UNF	110 (149)	170 (230)	240 (325)
1-1/8	3/4 - 10 UNC	144 (195)	266 (360)	376 (509)
1-1/8	3/4 - 16 UNF	192 (260)	297 (402)	420 (569)
1-5/16	7/8 - 9 UNC	166 (225)	430 (583)	606 (821)
1-5/16	7/8 - 14 UNF	184 (249)	474 (642)	668 (905)
1-1/2	1 - 8 UNC	250 (339)	644 (873)	909 (1232)
1-1/2	1 - 12 UNF	274 (371)	705 (955)	995 (1348)
1-1/2	1 - 14 UNF	280 (379)	721 (977)	1019 (1381)
1-11/16	1-1/8 - 7 UNC	354 (480)	795 (1077)	1288(1745)
1-11/16	1-1/8 - 12 UNF	397 (538)	890 (1206)	1444 (1957)
1-7/8	1-1/4 - 7 UNC	500 (678)	1120 (1518)	1817 (2462)
1-7/8	1-1/4 - 12 UNF	553 (749)	1241 (1682)	2013 (2728)
2-1/16	1-3/8 - 6 UNC	655 (887)	1470 (1992)	2382 (3228)
2-1/16	1-3/8 - 12 UNF	746 (1011)	1672 (2266)	2712 (3675)
2-1/4	1-1/2 - 6 UNC	870 (1179)	1950 (2642)	3161 (4283)
2-1/4	1-1/2 - 12 UNF	979 (1327)	2194 (2973)	3557 (4820)

METRIC

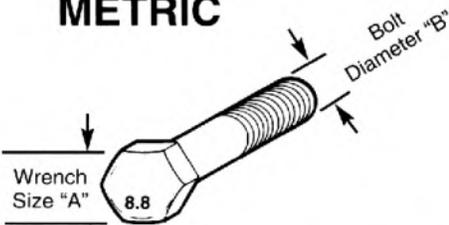

Numbers appearing on bolt heads indicate ASTM class.

Proper torque for metric fasteners used on **PECO** equipment.
Recommended torque in foot pounds (newton Meters).*

WRENCH SIZE (mm) "A"	BOLT DIA. (mm) "B"	ASTM 4.6	ASTM 8.8	ASTM 9.8	ASTM 10.9
8	5	1.8 (2.4)		5.1 (6.9)	6.5 (8.8)
10	6	3 (4)		8.7 (12)	11.1 (15)
13	8	7.3 (10)		21.1 (29)	27 (37)
16	10	14.5 (20)		42 (57)	53 (72)
18	12	25 (34)	74 (100)	73 (99)	93 (126)
21	14	40 (54)	118 (160)	116 (157)	148 (201)
24	16	62 (84)	167 (226)	181 (245)	230 (312)
30	20	122 (165)	325 (440)		449 (608)
33	22		443 (600)		611 (828)
36	24	211 (286)	563 (763)		778 (1054)
41	27		821 (1112)		1138 (1542)
46	30	418 (566)	1119 (1516)		1547 (2096)

*Use 75% of the specified torque value for plated fasteners. Use 85% of the specified torque values for lubricated fasteners.

Section V - INSTALLATION FOR USE

Recommended Tools & Equipment

For the installation of this Collection System & Utility Trailer, It is recommended to always use Personal Protective Equipment, such as safety goggles & hearing protection, while using any tool or power equipment during the installation of your Grass Collection Unit.

A basic set of standard wrenches, sockets, and ratchets will be perfectly suitable for most operations outlined in this manual.

Section V - INSTALLATION FOR USE

Preparation Of Parts

PECO Trailer Vacs are shipped as shown in Figure A.

Note: The following instructions are used in the installation of both the X20 Trailer Vac & X30 Trailer Vac.


Figure A



Shipping Crate

Remove the shrink wrap as shown in Figure B.

Figure B

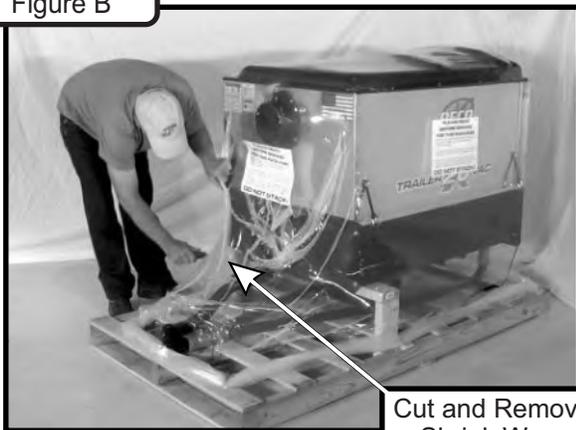

Cut and Remove Shrink Wrap

Remove the door as shown in Figure C. Rotate the red reflectors to release the door. Then lift up and out.

Figure C



Rotate Reflectors


Remove the hoses as shown in Figure D.

Figure D



Release the (2) rubber straps (PER SIDE) as shown in Figure E.

Figure E

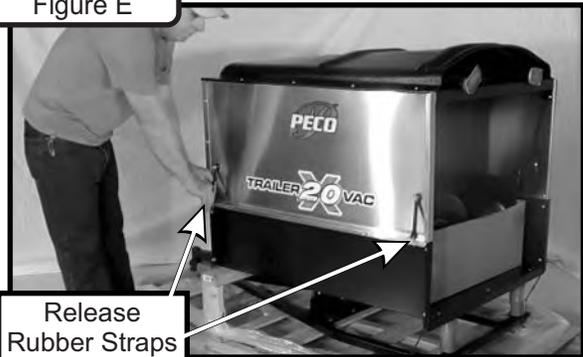

Release Rubber Straps


Remove the lightweight top as shown in Figure F.

Figure F



Remove all parts from trailer pan as shown in Figure G.


Figure G

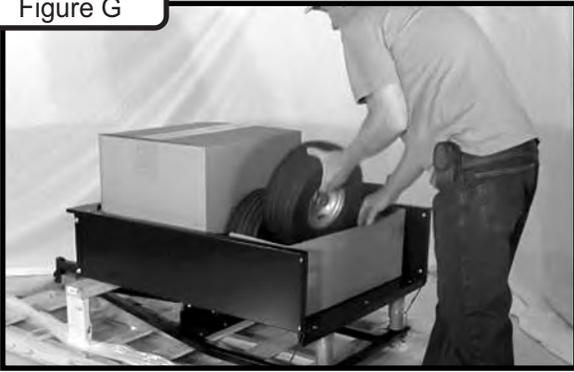

Removing Trailer Pan

Remove the (2) shipping screws from the front trailer pan as shown in Figure A.


Figure A

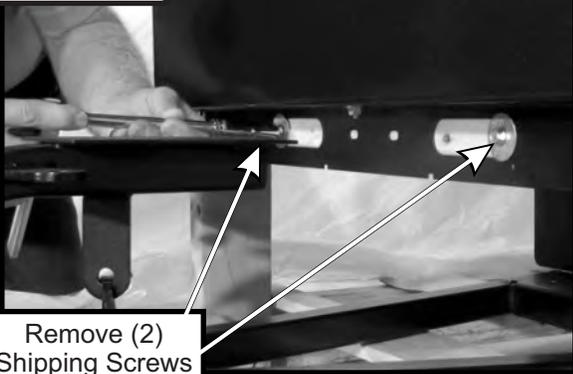

Remove (2) Shipping Screws

Cut and remove the (2) retaining wires from the trailer pan. Refer to Figure B.


Figure B

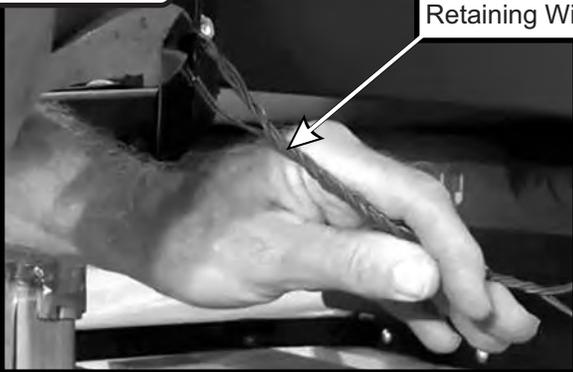

Cut (2) Retaining Wire

Lift the trailer pan off of the chassis and set the trailer pan upside down as shown in Figure D.

Figure D

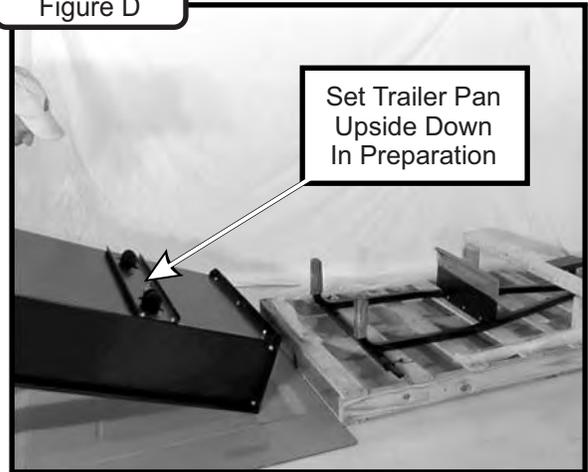


Set Trailer Pan Upside Down In Preparation

Wooden Support Removal

Using a hammer or pry bar, carefully remove the wooden supports from the shipping crate. The support consists of (3) pieces. (2) support legs and (1) top support. Refer to Figure A.


Figure A

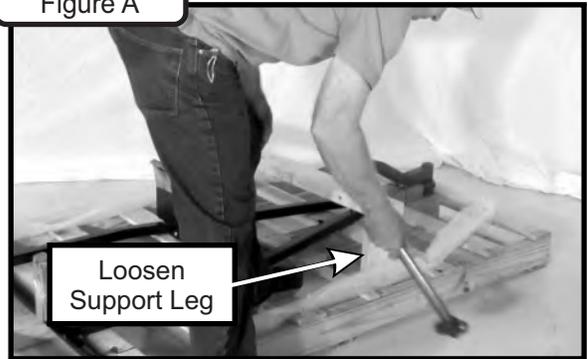

Loosen Support Leg

Using a hammer or pry bar, carefully loosen the top support and remaining support leg. Refer to Figure B.

Figure B

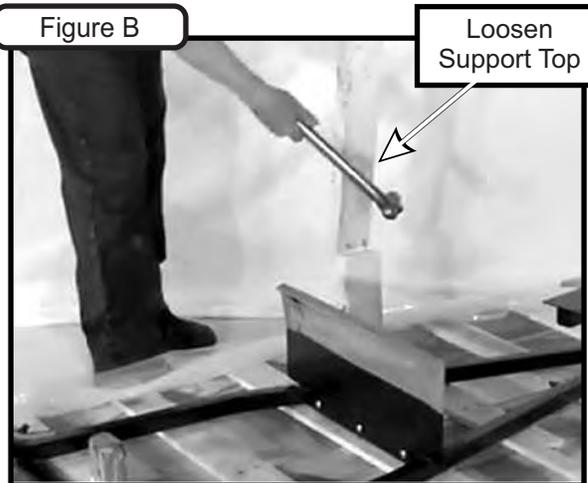


Loosen Support Top

Removing Trailer From Pallet


Cut and remove the remaining retaining wires as shown in Figure A. Then lift and remove the trailer from the shipping crate as shown in Figure B.

Figure A

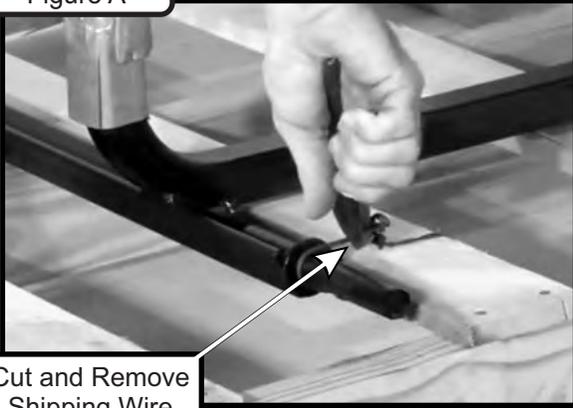

Cut and Remove Shipping Wire

Figure B

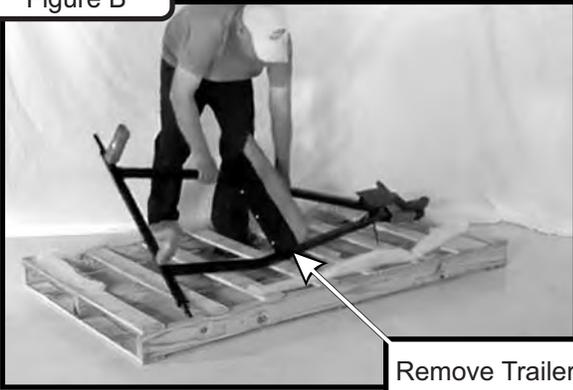


Remove Trailer

With the trailer upright on the ground, remove the cardboard from the trailer as shown in Figure C.

NOTE: Do not remove the engine mount arm zip tie.

Figure C

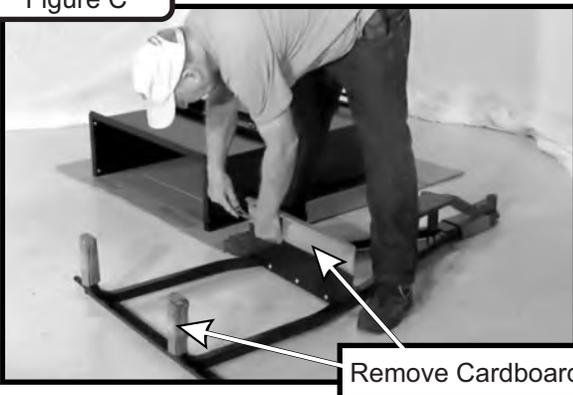


Remove Cardboard

Attaching Trailer to Trailer Pan

Flip the trailer over and place on the trailer pan as shown in Figure A.


Figure A

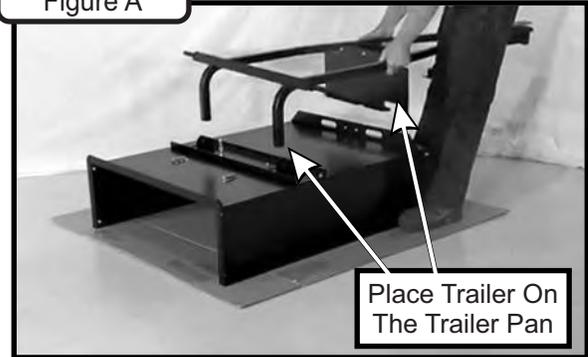

Place Trailer On The Trailer Pan

Attach the trailer to the trailer pan using (2) clevis pins P#(K0127) and (2) hair pin clip P#(K0086). Refer to Figure B.

Figure B

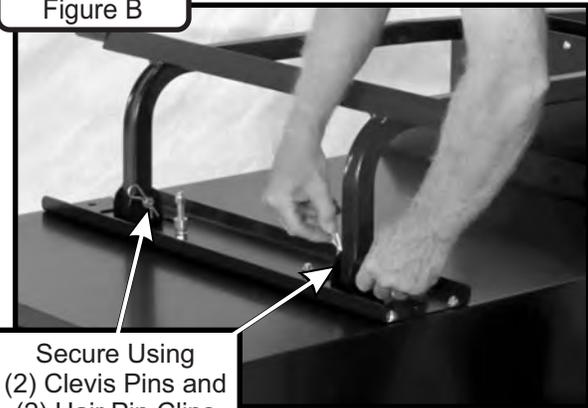


Secure Using (2) Clevis Pins and (2) Hair Pin Clips

Dump Handle Installation

Remove the existing 3/8" nut from the pivot bolt as shown in Figure A.


Figure A

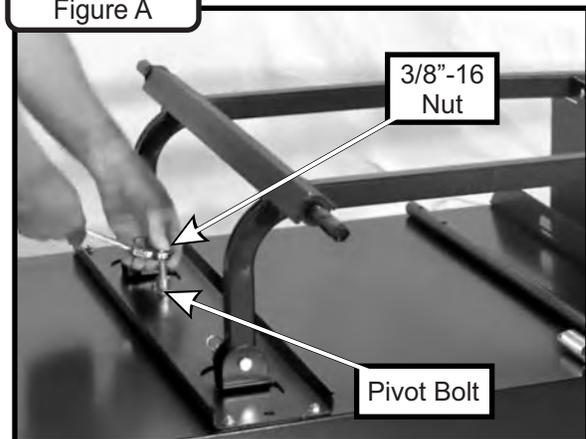

3/8"-16 Nut


Pivot Bolt

Insert the dump handle through the slot in the trailer pan and through the handle spring P#(J0310) as shown in Figure B.

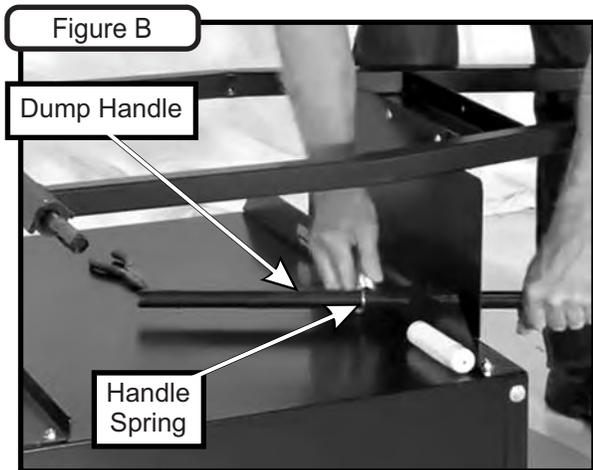


Note: The Dump Handle contains 2 holes that are specific to the type of Trailer Vac it is being installed on. The First hole is for the X30 Trailer Vac and the Second hole is for the X20 Trailer Vac.

Insert the pivot bolt through the hole corresponding with your Trailer Vac in the dump handle. Secure the handle to the pivot bolt using the 3/8"-16 Nut that was removed. Attach the hook end of the spring to the hole in the trailer pan. Refer to Figure C.


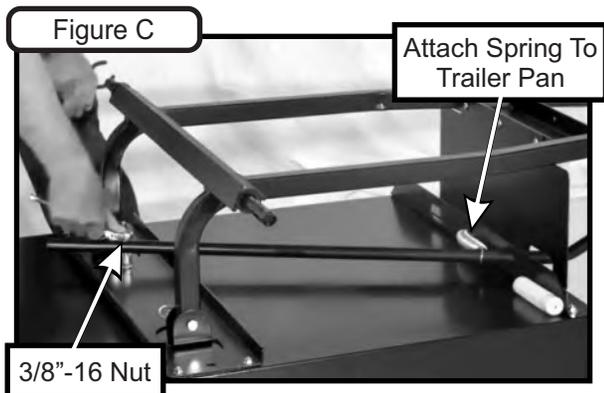


Insert the Handle Grip P#(J0522) onto the end of the dump handle as shown in Figure D.

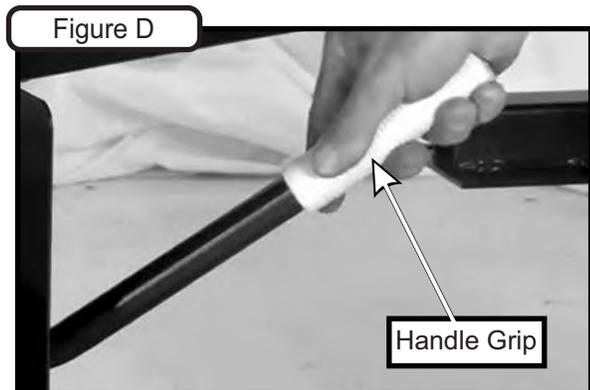

Wheel Installation

Remove the tape from both axles. Refer to Figure A and Figure B for reference.

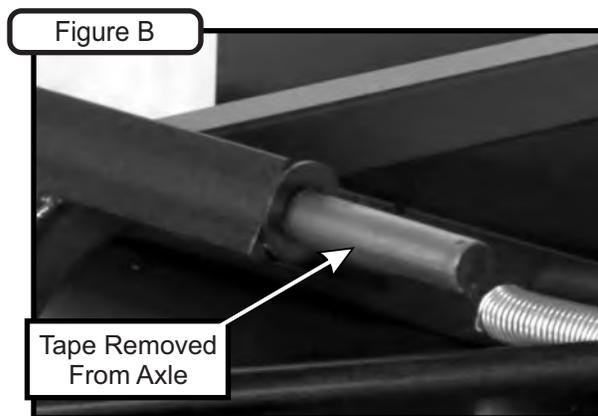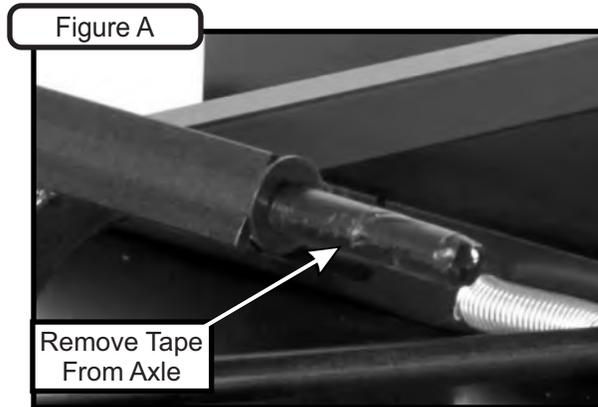

Insert the wheels onto the wheel axle as shown in Figure C. Secure each wheel using (1) 3/4" flat washer P#(K0061) and (1) 1/8"-1/2" cotter pin P#(K0085). Refer to Figure C below and Figure D on the next page.


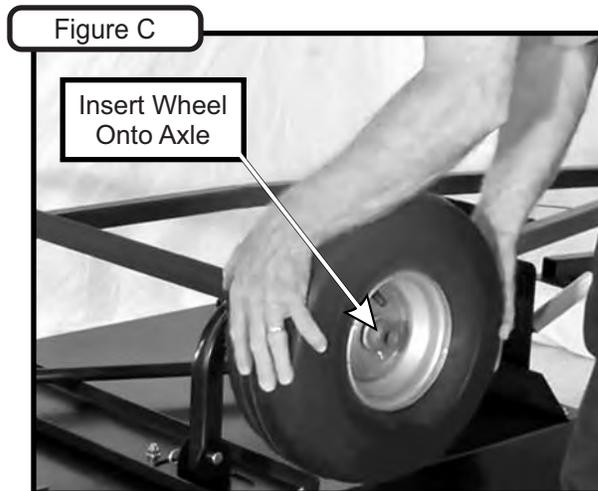


Figure D

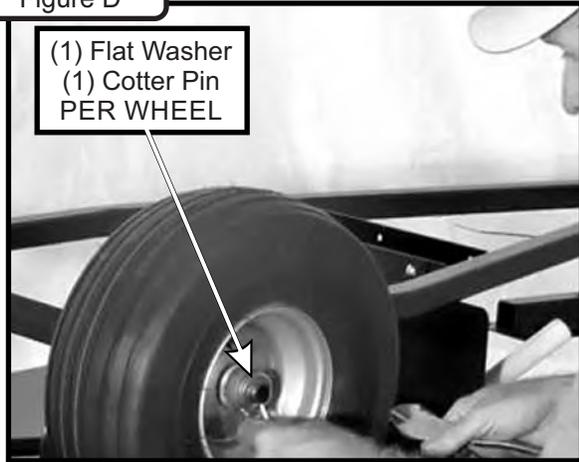

Flip the trailer over onto the wheels in preparation for the trailer top installation. Refer to Figure E.

NOTE: It is recommended that someone assist you during this step.


Figure E



Trailer Top Installation

Lift the trailer top and place onto the trailer pan as shown in Figure A.


Figure A

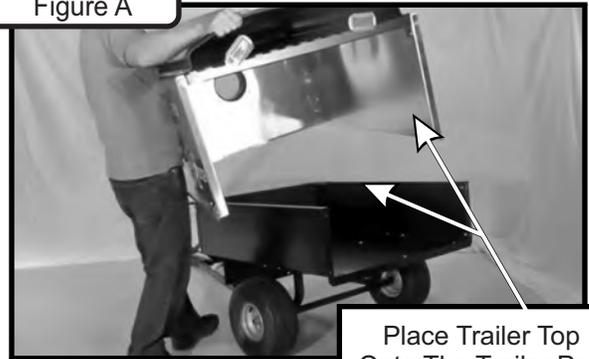

Place Trailer Top
Onto The Trailer Pan

Secure the trailer top to the trailer pan with the (4) rubber straps. Refer to Figure B.

Figure B

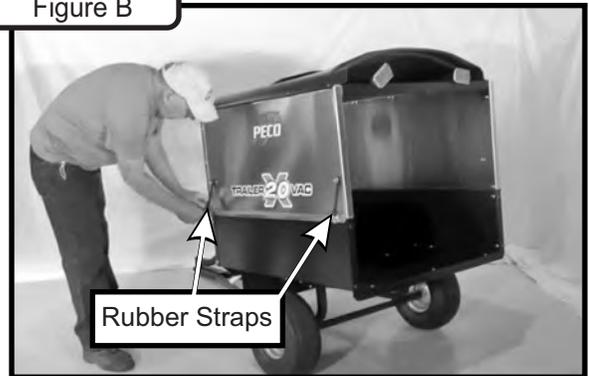

Rubber Straps

Attach the trailer door to the assembly. Secure the door by rotating the (2) red reflectors on the trailer top. Refer to Figure C.


Figure C




Rotate
Reflectors

E-Drive/Blower/Blade Assembly Installation

Remove the E-Drive assembly from the box. Place the E-Drive on top of the mount arm as shown in Figure A.

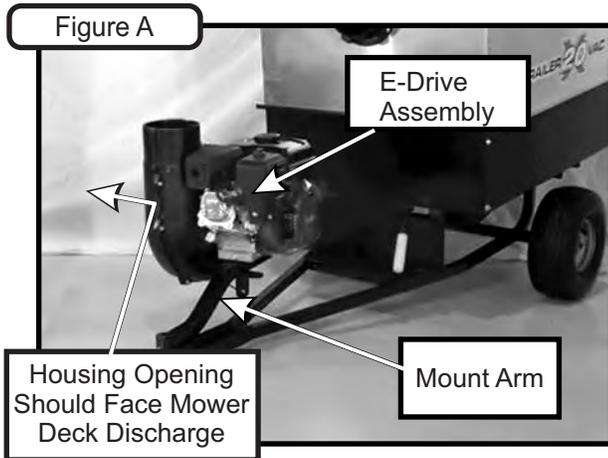


Secure the E-Drive assembly to the engine mount arm with (4) 5/16"-18 x 1" carriage bolts P#(K1144) and (4) 5/16"-18 locknuts P#(K2516). Refer to Figure B.

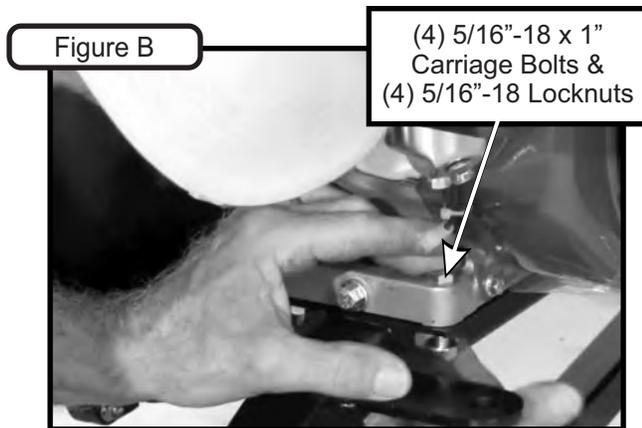


Blower Cone Installation

Insert the blower cone as shown in Figure A and secure with (2) 5/16"-18 x 2-1/2" Hex Bolts P#(K0125) and (2) 5/16"-18 Jam Nuts P#(K0120).

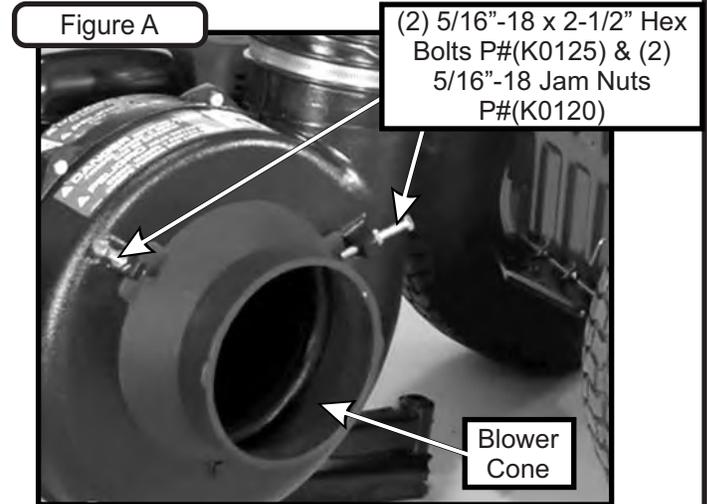


Inlet Ring Installation

Pull the Locking Pin P#(K0095) up from the Inlet Ring P#(V1052). Position the 6" Inlet P#(E8010) into the Inlet Ring and secure the 6" Inlet by pressing the Locking Pin back down. Refer to Figure A.

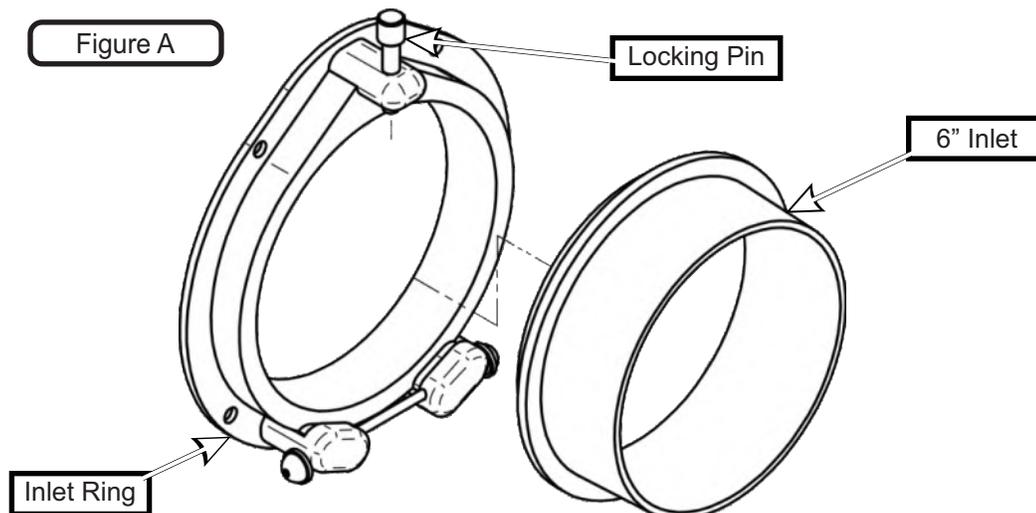


Upper Hose Installation


Before attaching the Upper Hose, place a Hose Clamp P#(J0060) relatively loose on both ends of the Upper Hose. Then insert one end of the 6" upper hose onto the blower outlet as shown in Figure A.

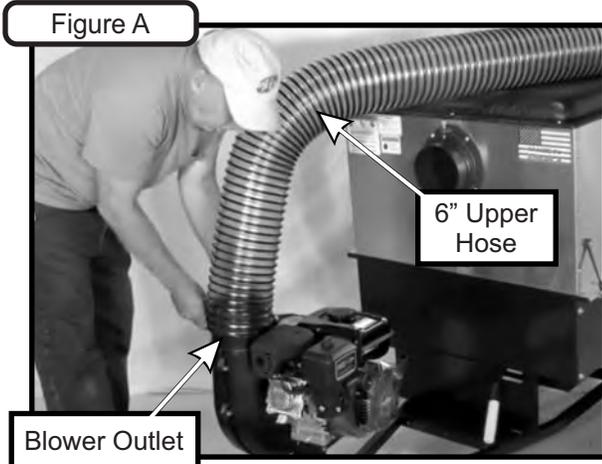

Attach the other end of the 6" upper hose to the inlet on the trailer top as shown in Figure B.

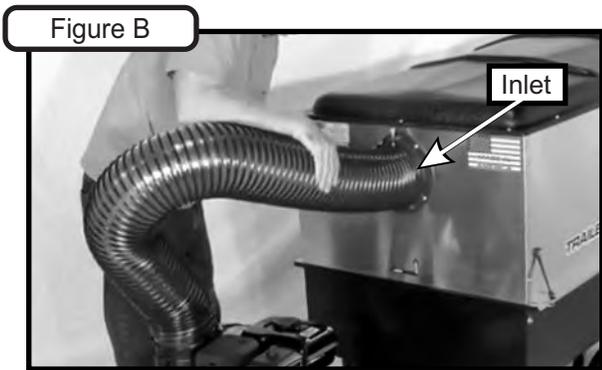


Secure the upper hose by tightening both hose clamps. Refer to Figure C.

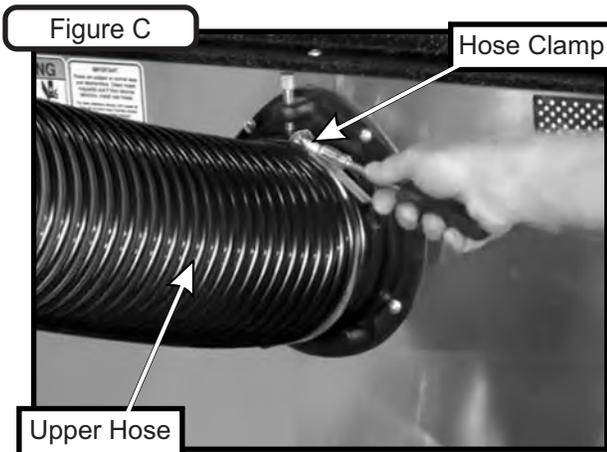


Attaching Trailer To Tractor


Back the tractor up to the trailer tongue. Lift the trailer tongue and slide onto the tractor hitch as shown in Figure A.

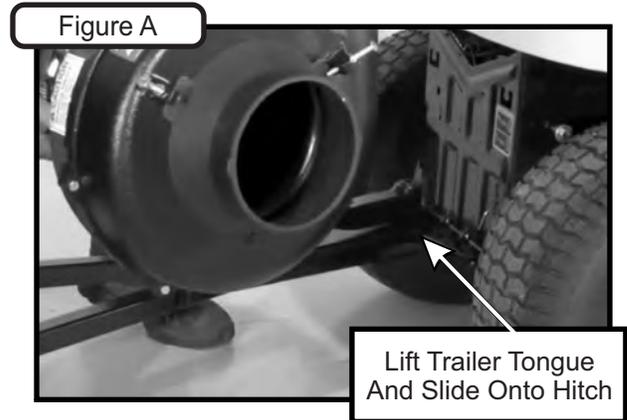

Secure the trailer tongue to the hitch with (1) hitch pin assembly P#(A0312). Refer to Figure B.

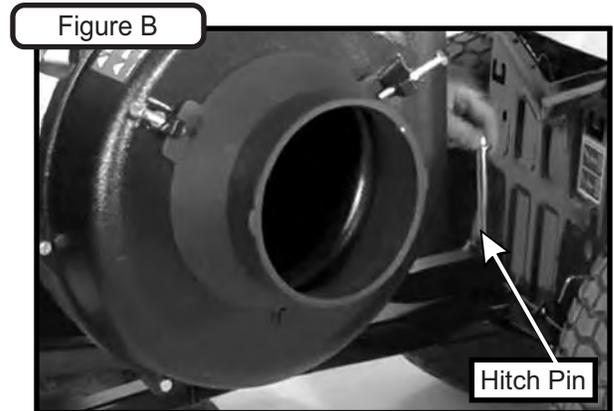


Secure the hitch pin using (1) hair pin clip P#(K0086). Refer to Figure C.

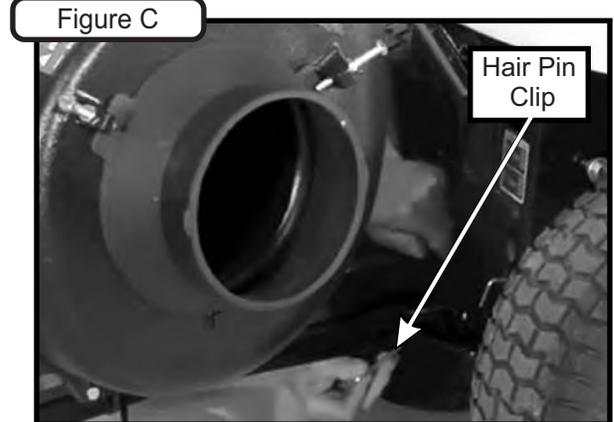


Drive Stay Assembly Installation

Note: Depending on the manufacturer and style of your tractor, the drive stay assembly mounting procedure may vary slightly from the instructions listed below.

Cut the zip tie that secures the mount arm to the trailer. Refer to Figure A.

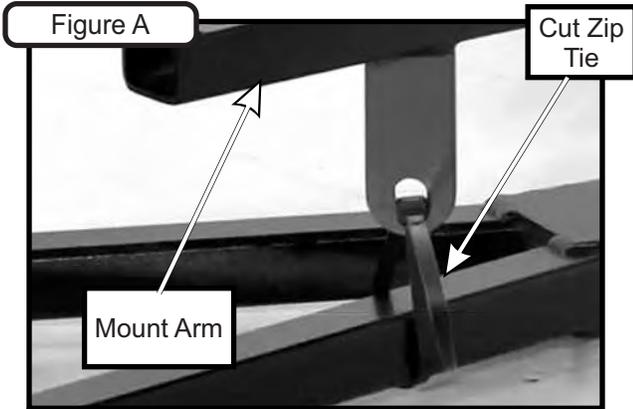


Rotate the E-Drive towards the deck opening of the tractor as shown in Figure B. (See [Drive Stay Adjustments](#), pg. 21 through 24).


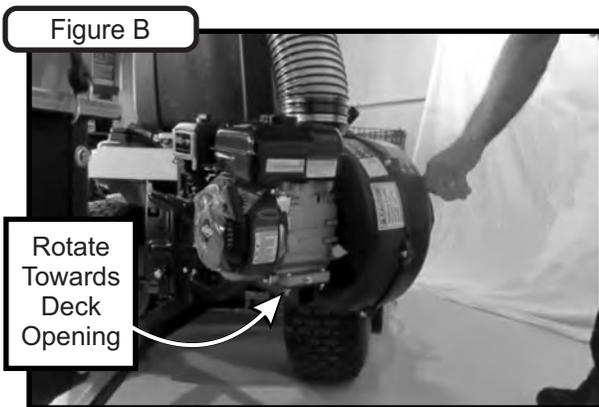


Attach the ball clevis P#(B0132) to the rear left of the tractor. There should be an existing hole in the tractor frame for this ball clevis to mount to. Secure the ball clevis using (1) 3/8"-16 x 1" hex bolt P#(K1191) and (1) 3/8" lock washer P#(K0048).

NOTE: If there is not an existing hole, position the ball clevis as shown in Figure C, then mark the position. Drill a hole in the tractor frame using a 3/8" drill bit.

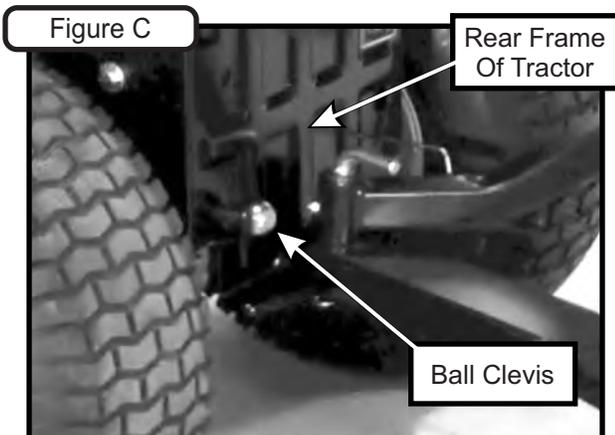

Attach the ball clevis clamp assembly P#(A0336) to the ball clevis using (1) 5/16"-18 x 2" hex bolt P#(K1159) and (1) 5/16"-18 locknut P#(K1180). Thread the adjusting rod P#(B4311) into the ball clevis clamp assembly as shown in Figure D. Insert the adjusting rod into the mounting hole on the engine mount arm. Secure the adjusting rod with (1) hair pin clip P#(K0099) and (1) 1/2" flat washer P#(K0055). Refer to Figure D and E for reference.

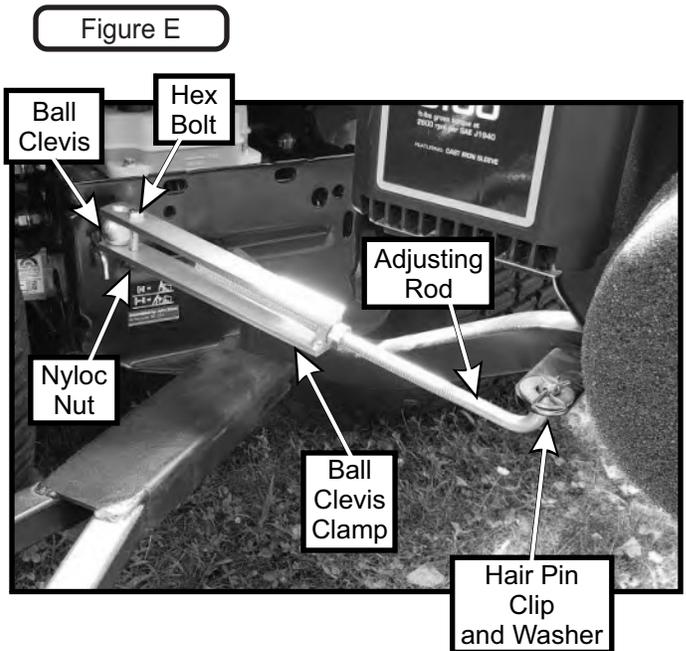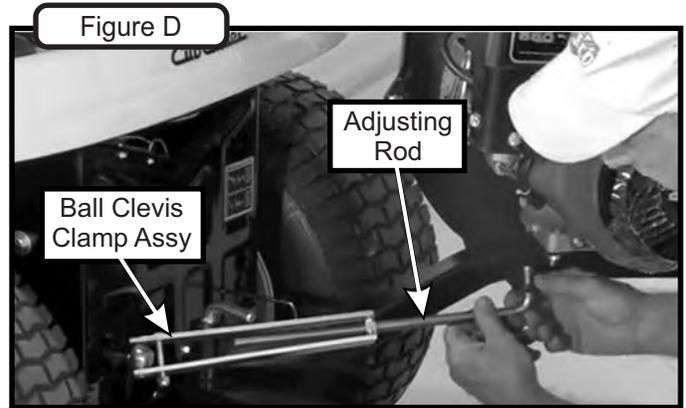

Drive Stay Adjustments

With your Drive Stay mounted it is recommended to position the E-Drive so that it sits between the rear tires and is angled about 35° to the right from the center of your tractor. This will keep the E-Drive stationary at the same position when the Trailer Vac swings left or right. Refer to Figure A, Figure B & Figure C for E-Drive position on a riding Lawn Tractor.

Figure A



Figure B



View of Collection Unit sitting to the Right of Operator

Figure C



View of Collection Unit sitting to the Left of Operator

Figure D - Figure F are views showing the E-Drive Positioning on a Zero Turn Mower.

Figure D



Figure E



View of Collection Unit sitting to the Right of Operator


Figure F




View of Collection Unit sitting to the Left of Operator

Universal Boot Installation

Remove the discharge chute from the mowing deck as shown in Figure A.

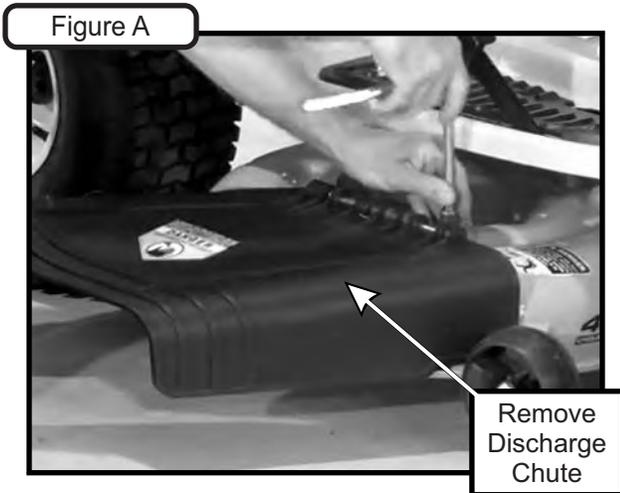


Position the plastic boot over the opening on the mower deck and trace the opening outline onto the plastic boot. Refer to Figure B.

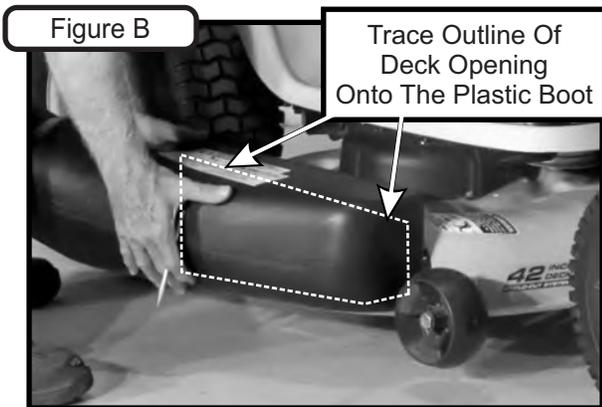


NOTE: To prevent injury, wear the appropriate personal protection equipment when drilling or cutting plastic boot.


Place plastic boot on a secure surface and carefully drill a hole into the plastic boot in preparation for the cutout. Use a 3/8" or 1/2" drill bit. Refer to Figure C for hole location.

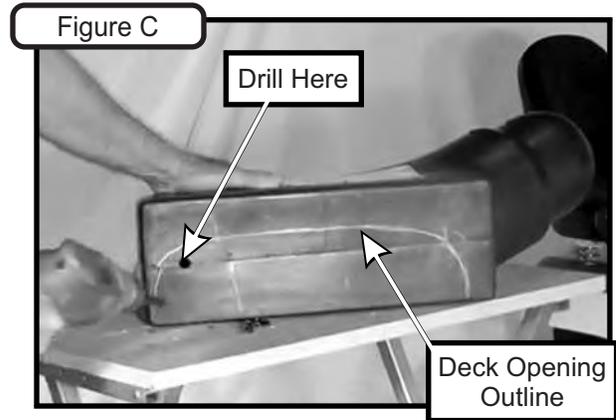


Using a jigsaw, cut along the traced outline and the bottom edge of the plastic boot. Discard the cutout portion of the boot. Refer to Figure D.

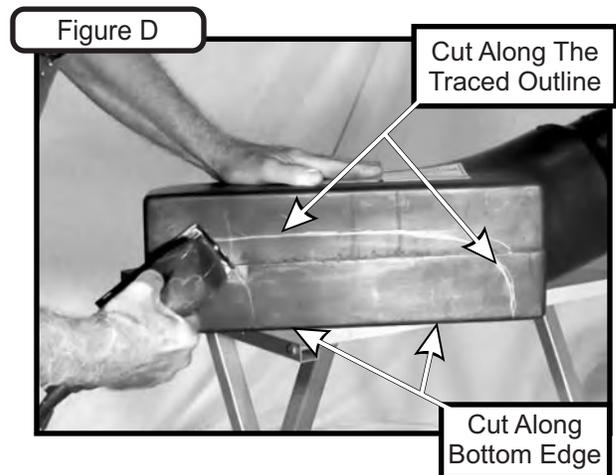

Place the plastic boot against the deck opening again and check for blade clearance. Trace the outline of the blade extent (with clearance) onto the bottom edge of the boot. Refer to Figure E.

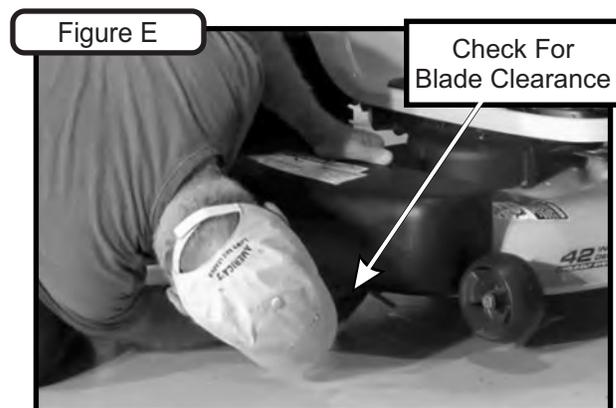


If necessary, cut out the traced underside of the plastic boot to allow for blade clearance. Refer to Figure F.

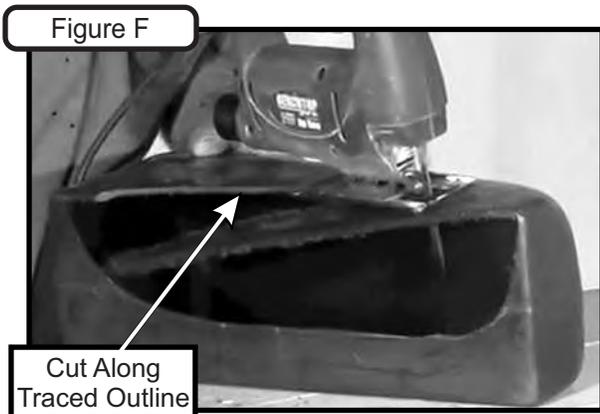


Position the boot over the deck opening and check for any gaps in the fit. Adjust the cut as needed. Make sure there are no gaps between the plastic boot and the mower deck. This will help prevent grass blowout.


Fasten the deck bracket P#(B2306) to the slide plate P#(B2307) using (2) 1/4"-20 x 5/8" carriage bolts P#(K1010) and (2) 1/4"-20 nylon flange locknuts P#(K2014). Refer to Figure G.

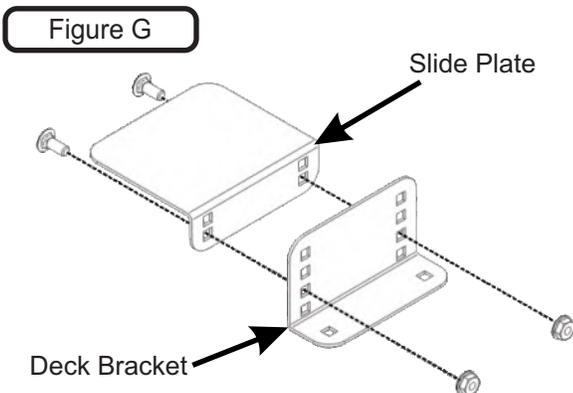


Place the plastic boot and deck bracket (with slide plate attached) firmly against the mower deck as shown in Figure H. Make sure there are no gaps between the plastic boot and the mower deck. Trace the (2) holes from the deck bracket onto the mower deck.

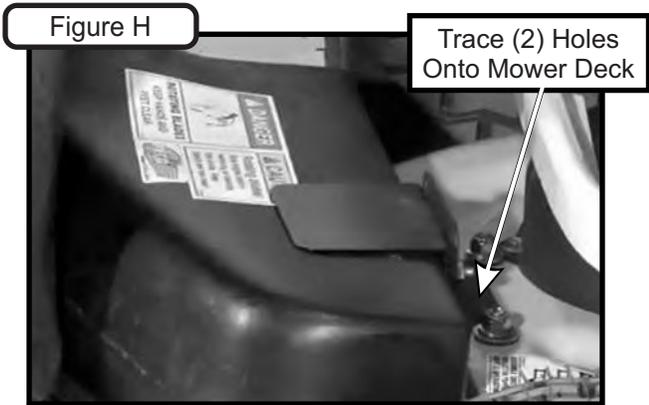


Center the upper clamp plate P#(B2308) over the slide plate and trace the (2) holes onto the plastic boot. Refer to Figure I.

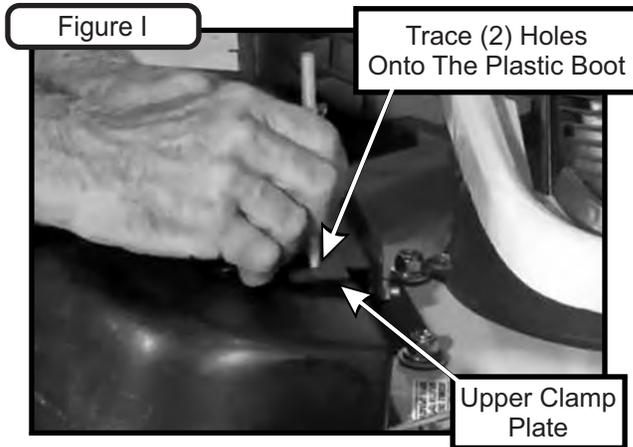


Drill the (2) holes traced onto the plastic boot with 1/4" drill bit as shown in Figure J.

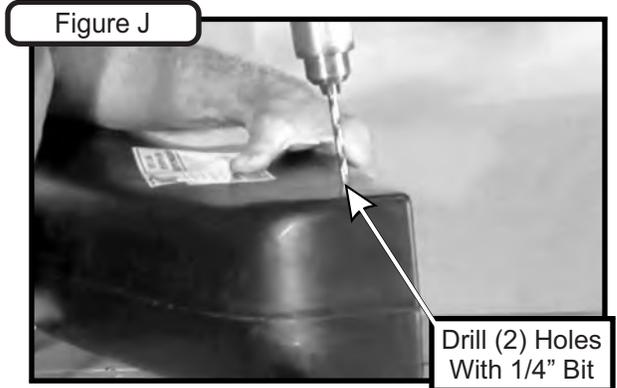


Drill the (2) traced holes in the mower deck using 1/4" drill bit as shown in Figure K.

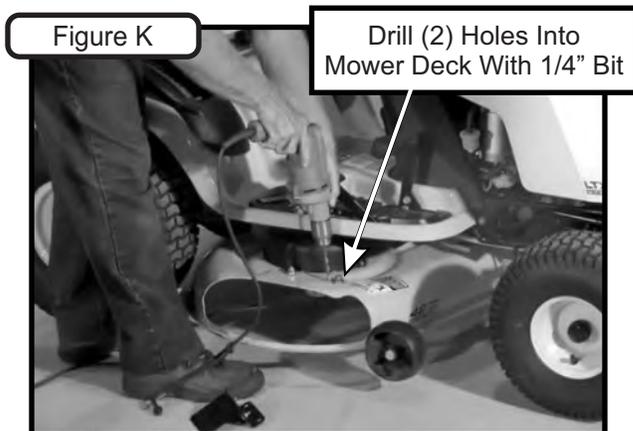


Insert (2) 1/4"-20 x 1" carriage bolts P#(K1025) into the lower clamp plate P#(B2039). Insert the lower clamp plate through the cutout in the plastic boot. Push the carriage bolts in the lower clamp plate up through the holes drilled in the plastic boot. Refer to Figure L.

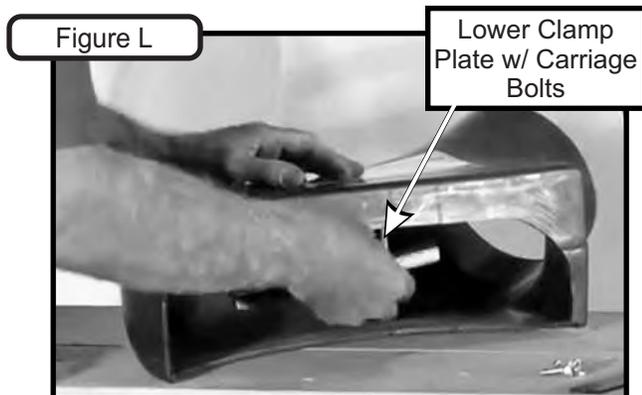

Insert the upper clamp plate P#(B2308) onto the (2) carriage bolts as shown in Figure M. Secure the upper clamp plate using (2) 1/4"-20 wing nuts P#(K1129).

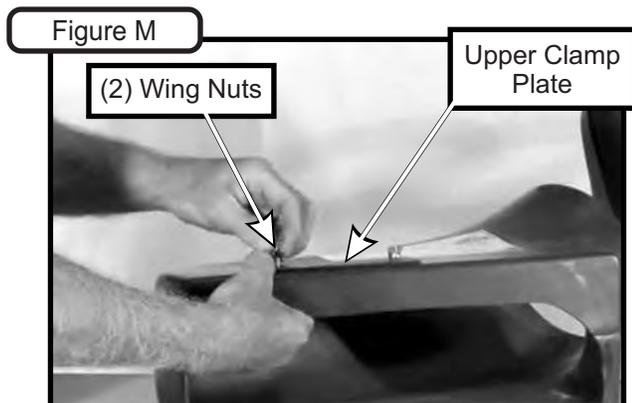


Slightly loosen the (2) wings nuts on the plastic boot. Insert the slide plate in between the upper clamp plate and the plastic boot. While pressing the boot firmly against the mower deck, tighten the (2) wing nuts as shown in Figure N.

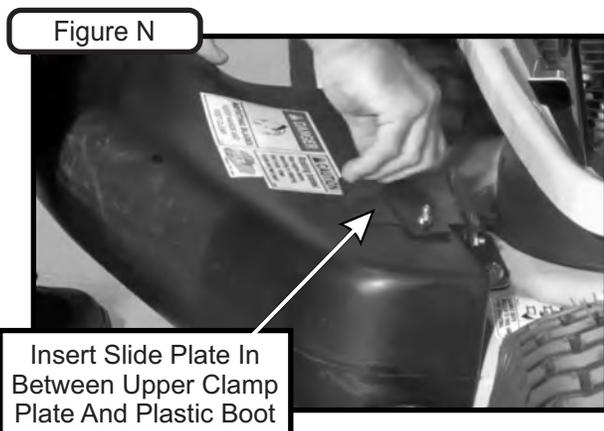

Lower Hose Installation

Attach one end of the 7" lower hose to the blower cone and the other end of the hose to the plastic boot. Secure the lower hose using (2) hose clamps P#(J0070). Refer to Figure A for reference.

Note: The lower hose must be cut to fit your machine. Do not cut the hose until you have tried to fit it on your machine. Remember that the hose has to be long enough to allow for enough clamping surface between the blower cone and the deck boot.

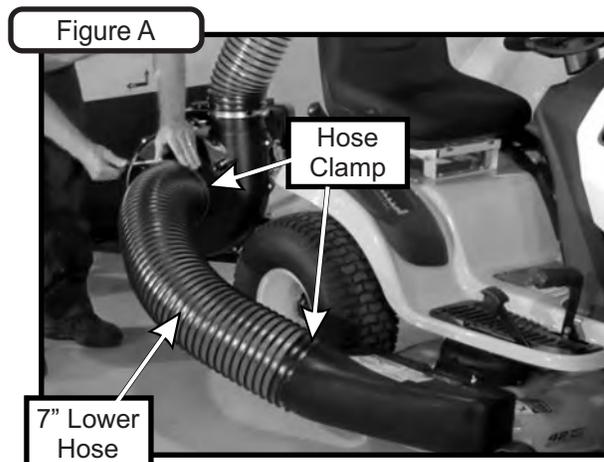


Universal Mount Base Installation

To Install the Universal Mount Base (Item #1) position and align the (4) bolt holes of the Universal Mount Base to the Engine Mount Arm Assembly (Item #2). Secure the Universal Mount Base by using (4) 5/16"-18 x 1" Carriage Bolts (Item #3) and (4) 5/16"-18 Ny-Flange Lock Nuts (Item #4). See Figure A below.

Note: Some parts and part features have been hidden from view for visual clarity.

Figure A

Item #	Part #	Desc.	Qty.
1	A2380	Universal Mount Base	1
2	A0837	Eng. Mnt. Arm Assy.	1
3	K1144	5/16"-18 x 1" Carriage Bolts	4
4	K2516	Ny-Flange Lock Nut 5/16"-18	4

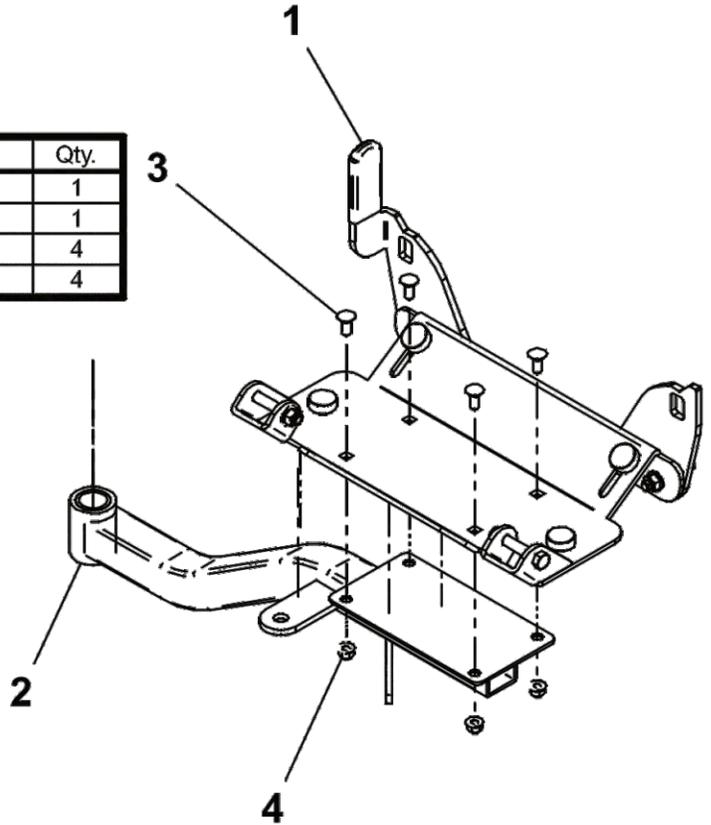

E-Drive Installation

To install the E-Drive P#(A2433), locate the pivot slot on the E-Drive and the pivot bolt on the Universal Mount Base P#(A2380). See Figure A.

Position the pivot slot of the E-Drive over the pivot bolt of the Universal Mount Base and rotate the E-Drive forward until the Latch Plate of the Universal Mount Base locks the E-Drive into place.

Note: Some parts and part features have been hidden from view for visual clarity.

Figure A


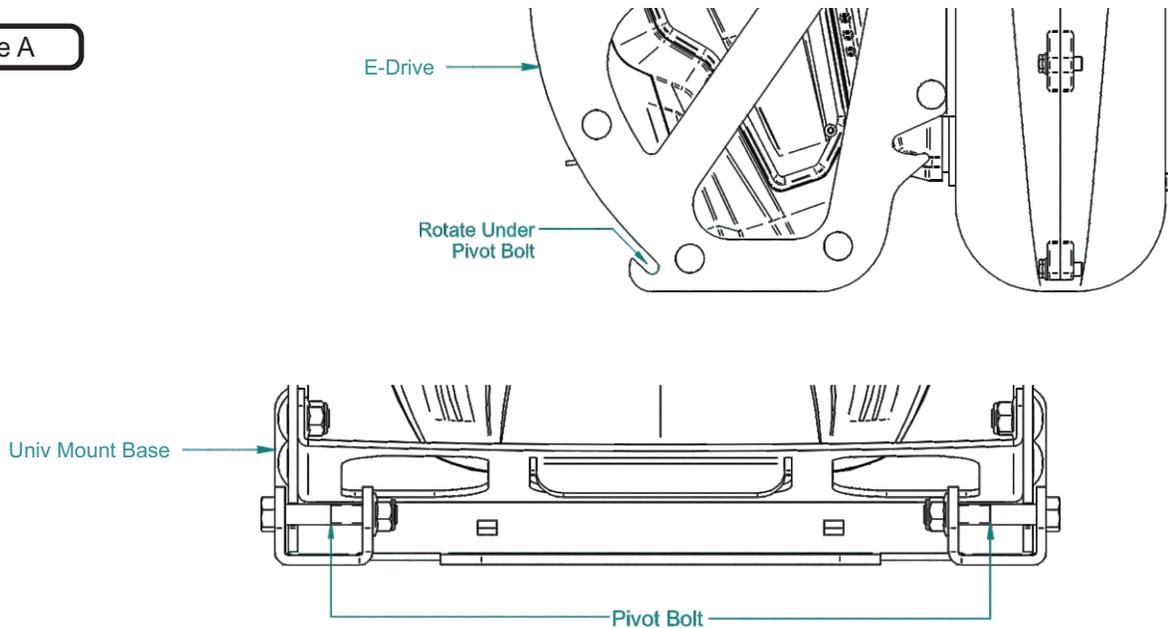


Figure B

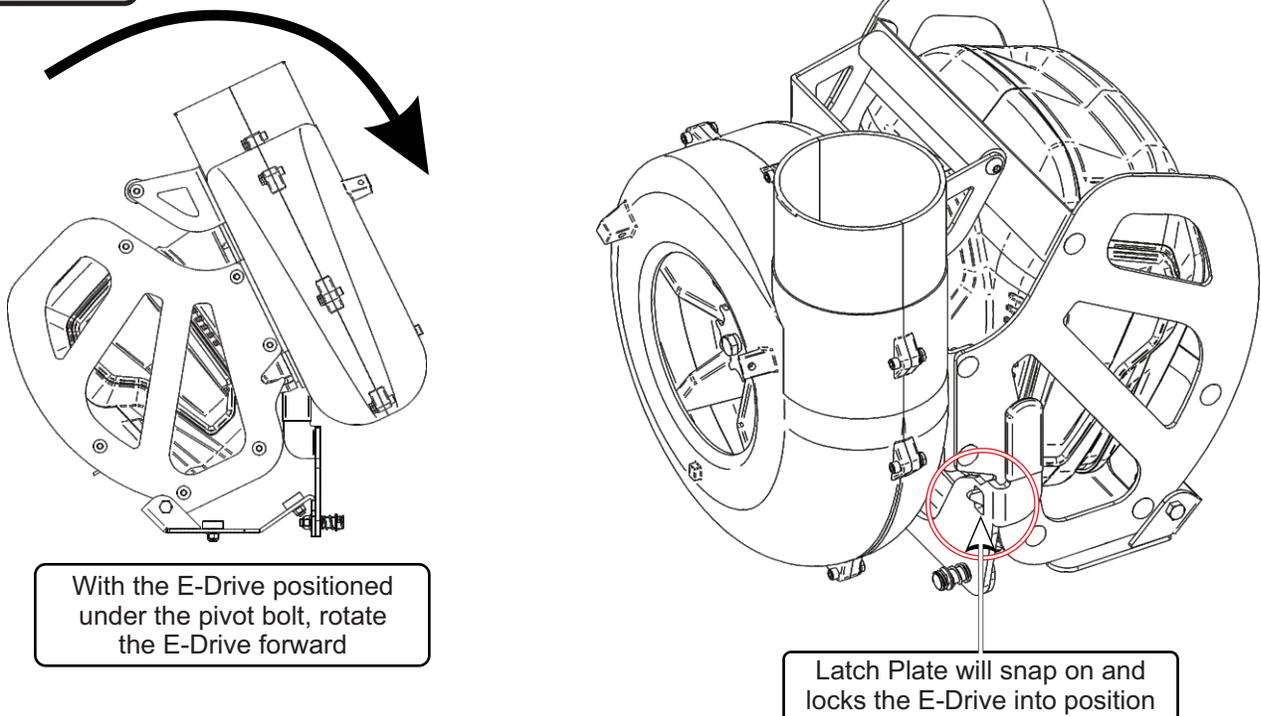

Impeller Blade Removal/Replacement

To Remove:

First, remove the M10-1.5 / 8.8 x 90 HHCS (Item #5), 7/16" Lock Washer (Item #4) and 5-Blade Washer (Item #3) from the Standard 5-Blade Impeller (Item #1). Next, remove the Standard 5-Blade Impeller (Item #1) from the EDrive Shaft. Finally, remove the Blade Bushing (Item #2) from the back of the Standard 5-Blade Impeller (Item #1) by threading a 1/2"-13 bolt through the front of the blade back. This will break the Blade Bushing away from the Impeller Blade. Refer to Figure A and Figure B.

To Replace:

First, install the Blade Bushing (Item #2) to the back of the Standard 5-Blade Impeller (Item #1). Next, place the Impeller Blade over the EDrive shaft. Then, fasten the Impeller Blade by using (1) M10-1.5 / 8.8 x 90 HHCS (Item #5), (1) 7/16" Lock Washer (Item #4) and (1) 5-Blade Washer (Item #3). Torque the bolt to its proper specifications as listed in the Torque Chart on the back of this Manual. Finally, rotate the Impeller Blade to ensure that the blade is clear of contact on all sides of the Blower Housing. If there is interference, remove and reposition the Impeller Blade, re-tighten the hardware, and then check for clearance. Refer to Figure A.

Figure A

Item #	Part #	Desc.	Qty.
1	V0059	Standard 5-Blade Impeller / Plastic	1
2	S0232	Blade Bushing	1
3	B2203	Washer / Small 5-Blade Impeller	1
4	K0140	Lock Washer 7/16" / High-Collar Helical Spring	1
5	K0117	M10-1.5 / 8.8 x 90 HHCS	1


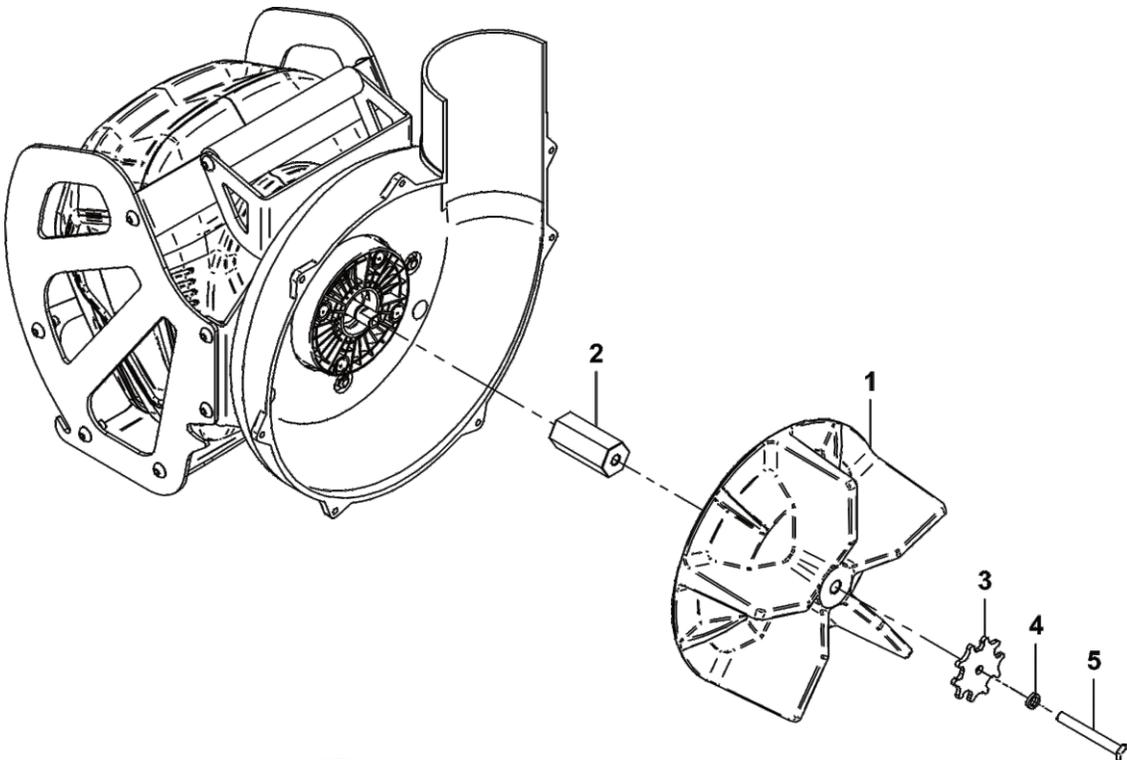


Figure B

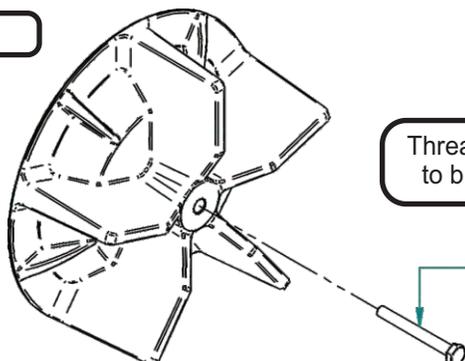

Thread a 1/2"-13 bolt through the front of the Impeller Blade to break the Blade Bushing away from the Impeller Blade

1/2"-13 Bolt

E-Drive Battery Removal/Replacement

To Remove:

Open the battery housing lid back to expose the (2) 82V Batteries, refer to Figure A and Figure B. The batteries can then be removed by hand. The charge level of the batteries can be checked by pressing the battery check level, see Figure C.

To Replace:

After fully charging your 82V Batteries, open the battery housing lid of the Powerhead to expose the battery bay. Check the position of the battery before installing to make sure it'll seat properly in place and then install the battery. Refer to Figure A & Figure B.

Note: Some parts and part features have been hidden from view for visual clarity.

Figure A

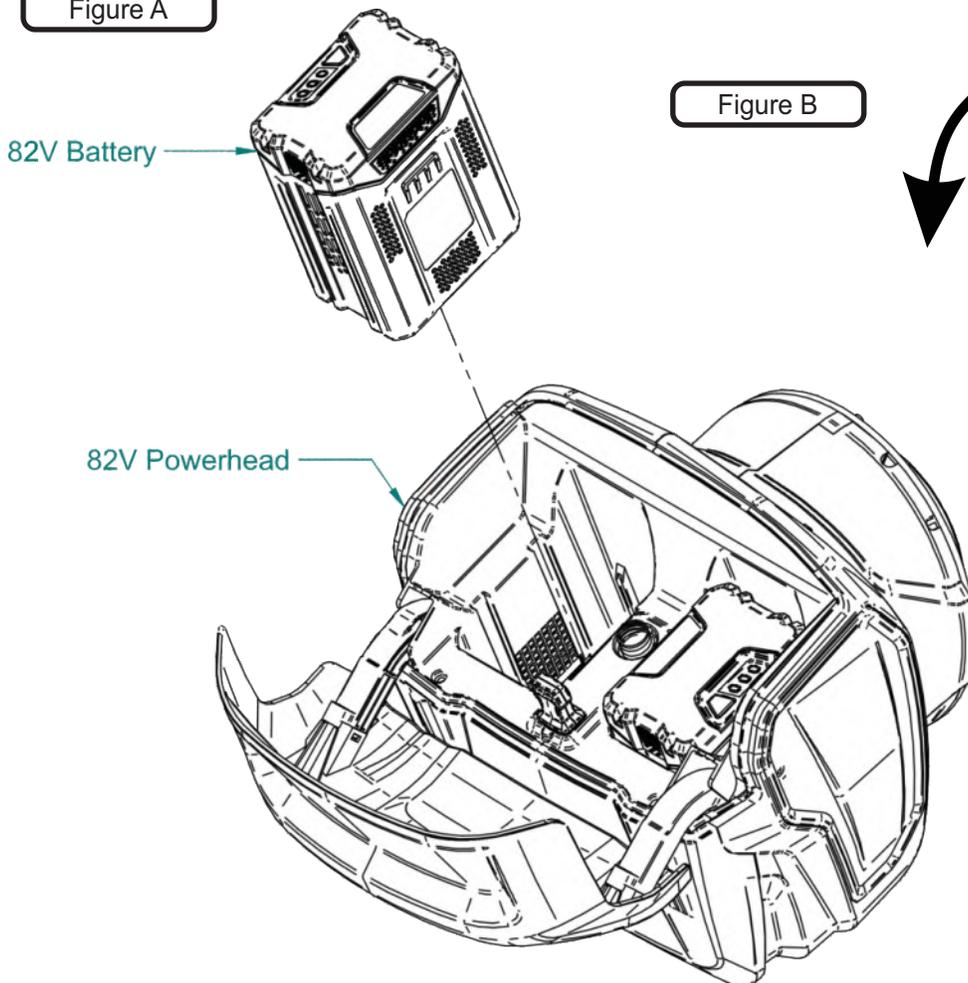


Figure B


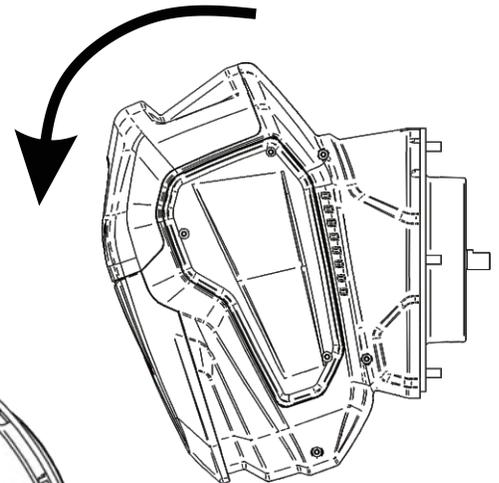


Figure C

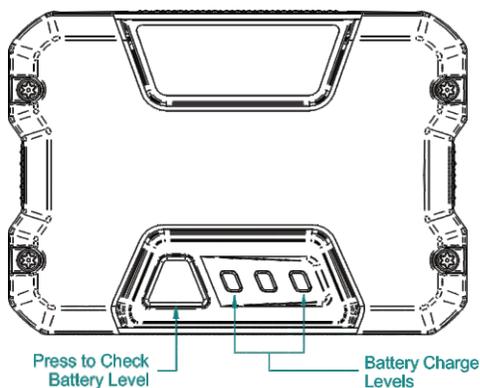


Wire Harness Installation

Connect the Wire Harness to the connector of the Powerhead. Refer to Figure A.

Adjust the position of the Wire Harness to ensure that it does not interfere with or that it is out of the way of all other components and then secure with Cable Ties at this time.

Note: Some parts and part features have been hidden from view for visual clarity.



Figure A

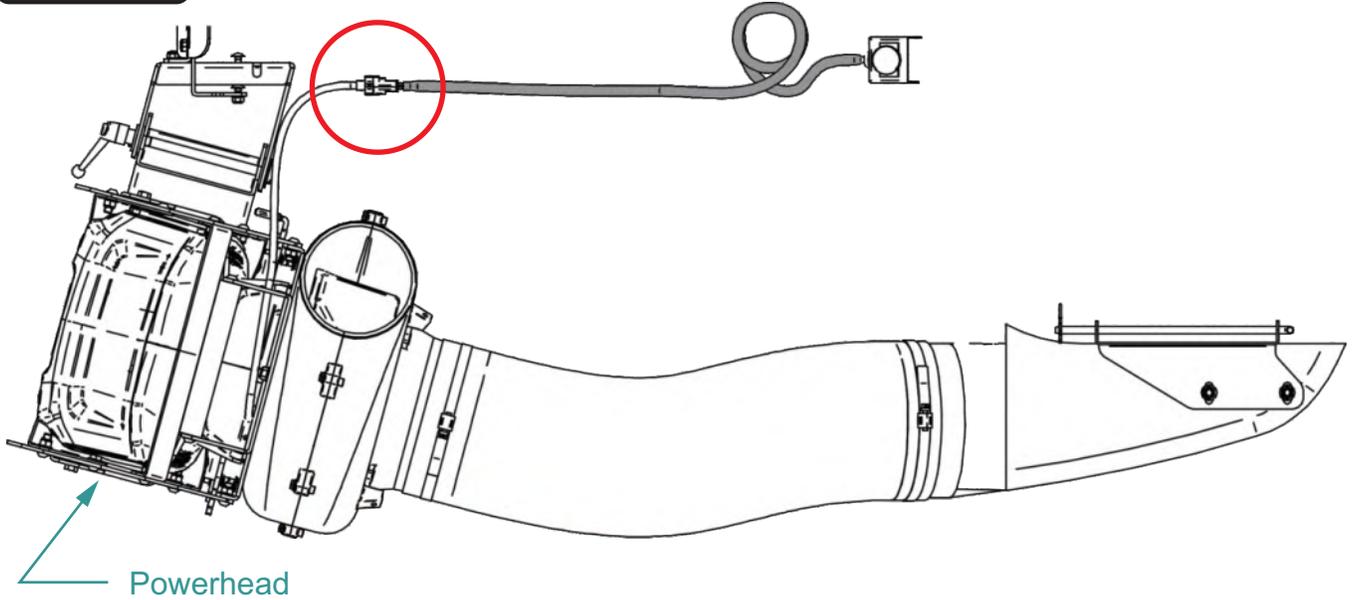

Wire Harness - P0301



Switch Plate Mount

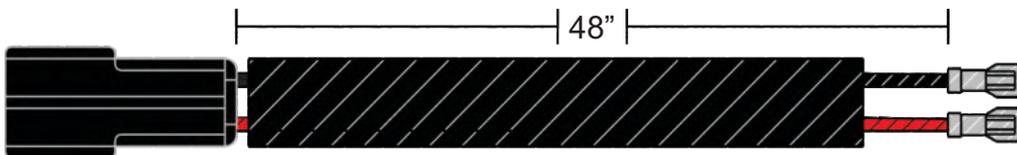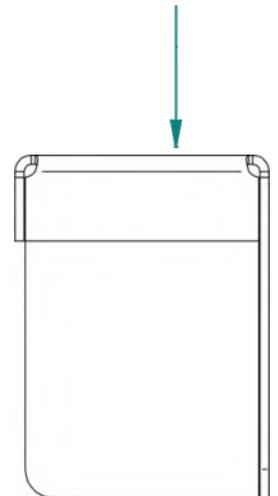

Note: Not drawn to scale

Jack Stand Assembly Installation


Jack Stand options are available ONLY for the X30 Trailer Vac.

To install the Jack Stand Assembly, first position the Jack Stand Mount / Gusset (Item #1) behind the Pan Support and align the bolt holes of the Jack Stand Mount / Gusset to the bolt holes of the Pan Support and Frame Brace of the Trailer Vac (Item #2). Refer Figure A.

Then, secure the Jack Stand Mount / Gusset by using (4) 5/16"-18 x 3/4" Carriage Bolts (Item #3) and (4) 5/16"-18 Ny-Flange lock Nuts (Item #4).

Note: Some parts and part features have been hidden from view for visual clarity.

Figure A

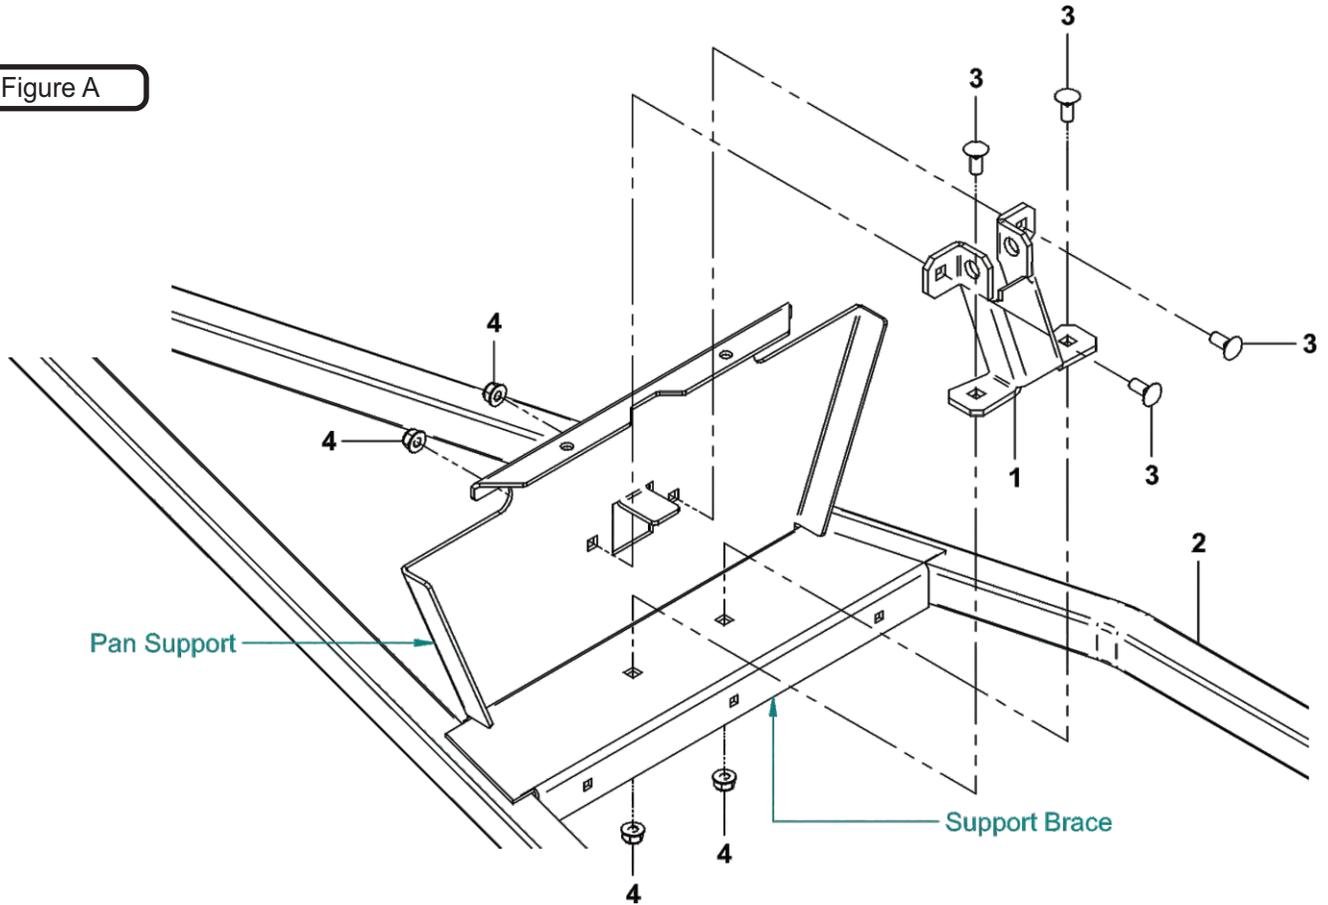

Item #	Part #	Desc.	Qty.
1	B1089	Jack Stand Mount / Gusset	1
2	A1116	X30 Trailer Vac Sub-Assy	1
3	K1142	5/16"-18 x 3/4" Carriage Bolt	4
4	K2516	Ny-Flange Lock Nut 5/16"-18	4


Jack Stand Assembly Installation (Cont.)

Next, position the Jack (Item #2) in front of the Pan Support and slide the Mount tube of the Jack through the Pan Support. Refer to Figure B.

Finally, secure the Jack to the Jack Stand Mount / Gusset (Item #1) by using (1) Detent Pin (Item #3) and (1) Hair Pin Clip (Item #4). Refer to Figure B.


Figure B

Jack Stand installed in the traveling position

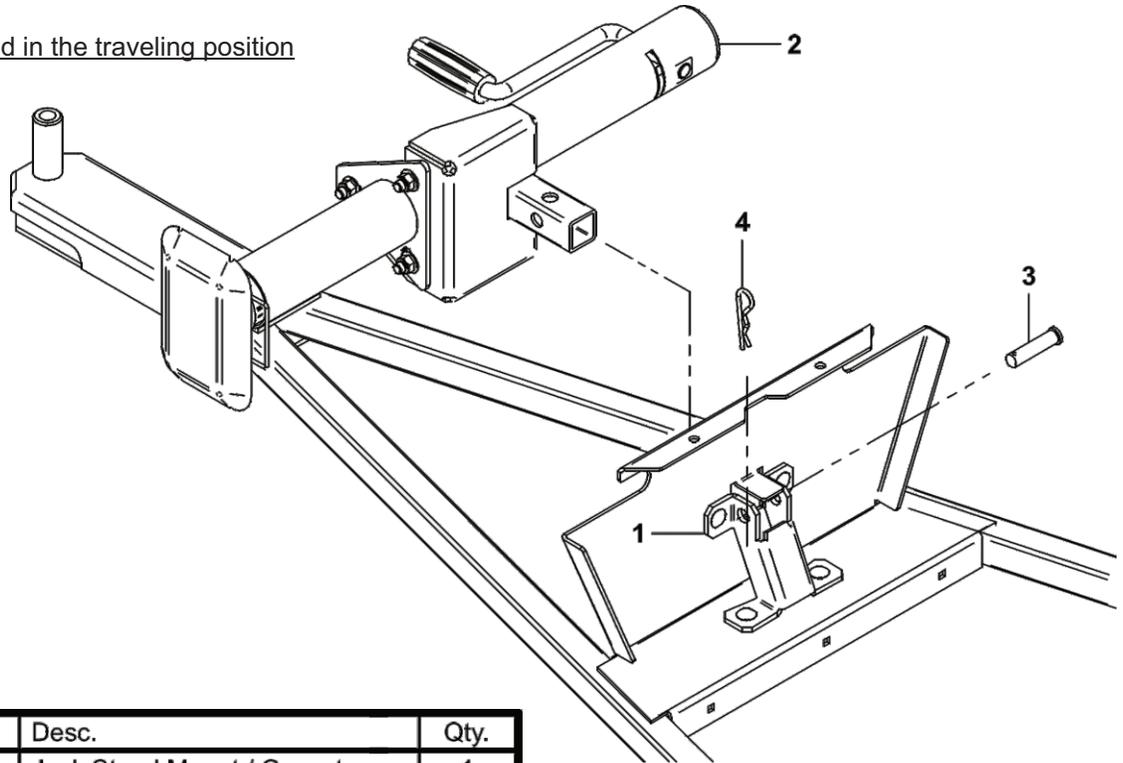


Item #	Part #	Desc.	Qty.
1	B1089	Jack Stand Mount / Gusset	1
2	J0027	A-Frame Jack	1
3	K0082	.50 OD x 2.00 DETENT PIN	1
4	K0086	Hair Pin Clip .125 OD x 2.50	1

Figure C

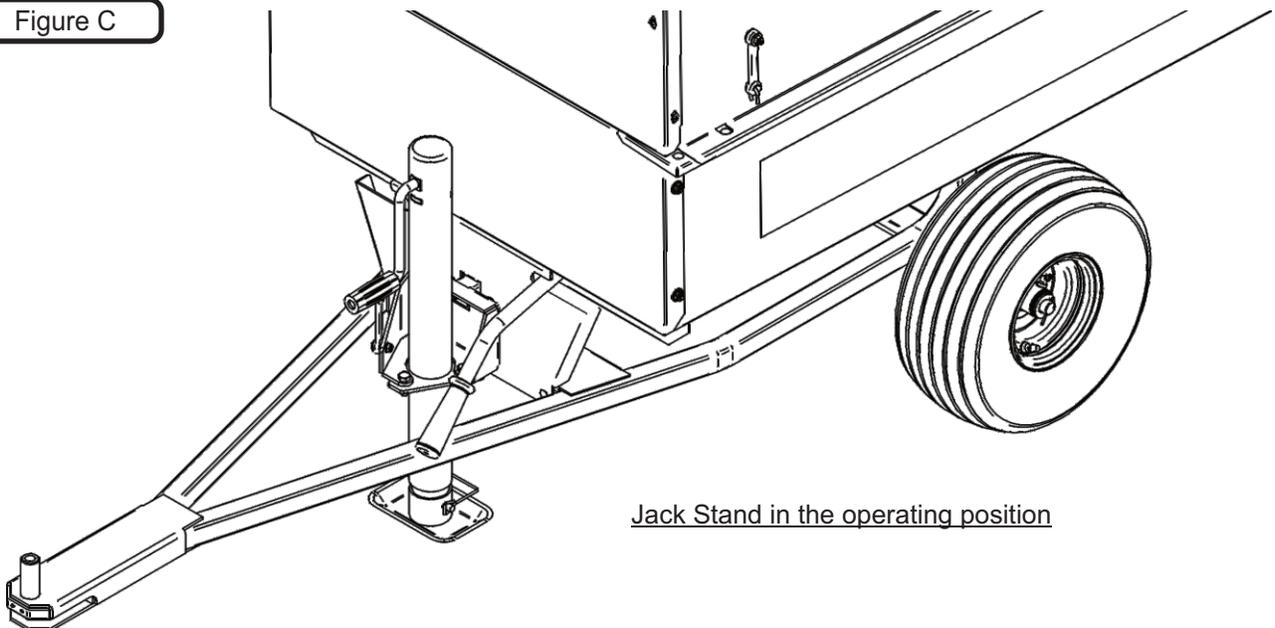

Jack Stand in the operating position


A2433 E-Drive Base Assembly

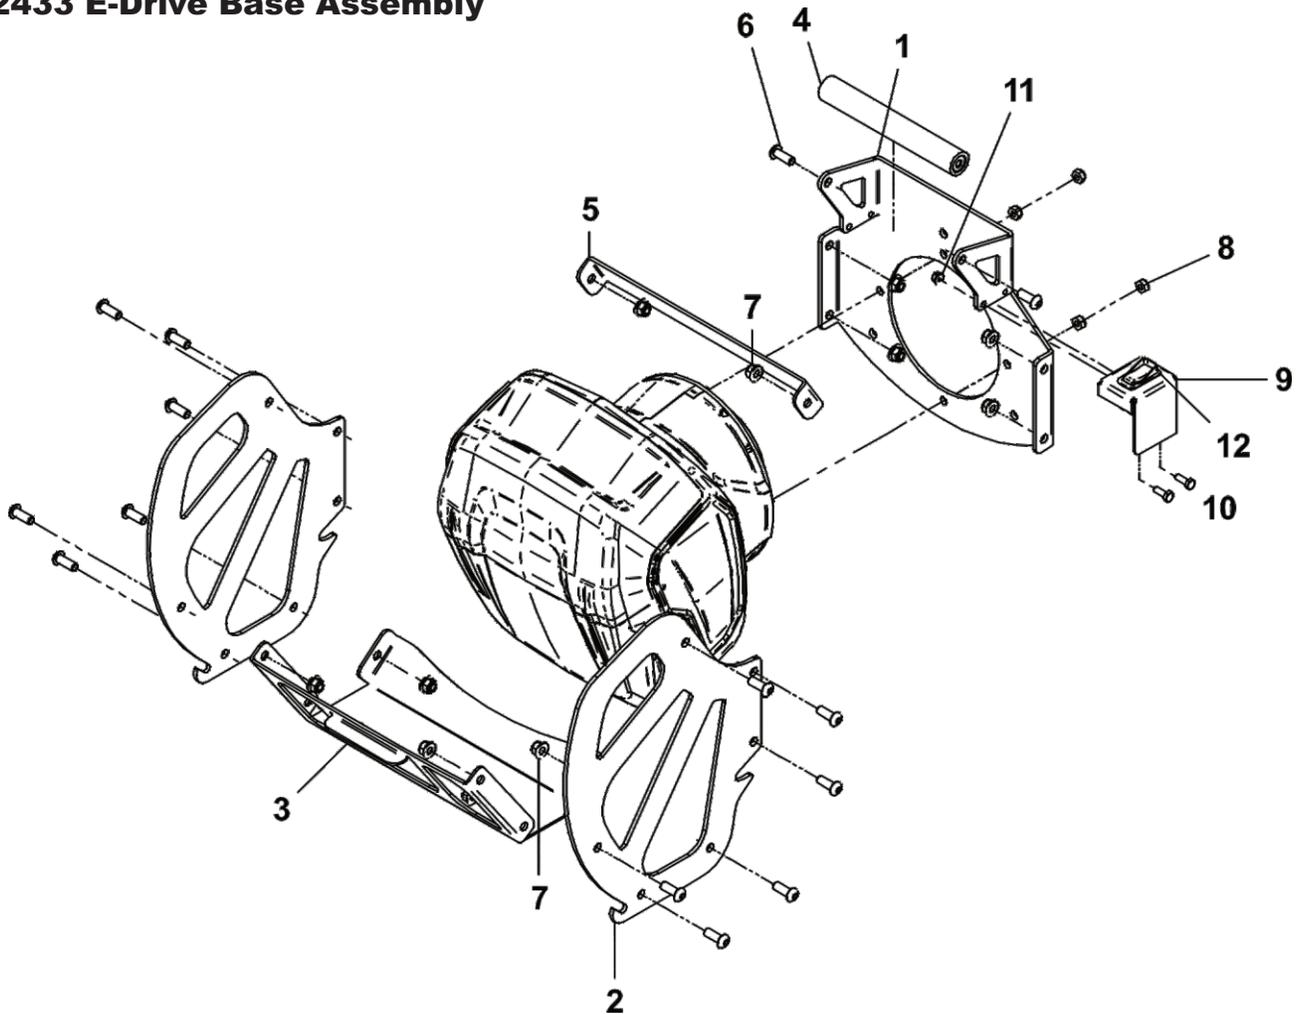


Item #	Part #	Desc.	Qty.
1	B2000	Backing Plate / Drive Assy.	1
2	B2259	Side Plate / Drive Assy.	2
3	B2002	Bottom Plate / Drive Assy.	1
4	A2382	Handle Assy w/ Grip / EDrive	1
5	B2003	Top Plate / Drive Assy.	1
6	K1520	3/8"-16 x 1" Hex Drive Socket Cap Screw / Zinc	14
7	K2038	Ny-Flange Lock Nut 3/8"-16	12
8	K1485	M8-1.25 Nyloc Nut	4
9	B2625	E-Drive Switch Mount	1
10	K1222	1/4"-20 X 3/4" HHCS	2
11	K2014	1/4"-20 Ny-Flange Lock Nut	2
12	P0293	PTO Engagement Rocker Switch	1

A2243 E-Drive Assembly / 5-Blade Impeller

Item #	Part #	Desc.	Qty.
1	E4052F	Blower Hsg Front	1
2	E4053B	Blower Hsg Back	1
3	K1401	1/4"-20 x 1" SHCS / Zinc / GR8	7
4	K1126	Flange Nut 1/4"-20	7
5	V0059	Standard 5-Blade Impeller / Plastic	1
6	S0232	Blade Bushing	1
7	K1520	3/8"-16 x 1" Hex Drive Socket Cap Screw / Zinc	17
8	K2038	Ny-Flange Lock Nut 3/8"-16	15
9	B2203	Washer / Small 5-Blade Impeller	1
10	K0140	Lock Washer 7/16" / High-Collar Helical Spring	1
11	K0117	M10-1.5 / 8.8 x 90 HHCS	1
12	A2432	E-Drive Base Assembly	1

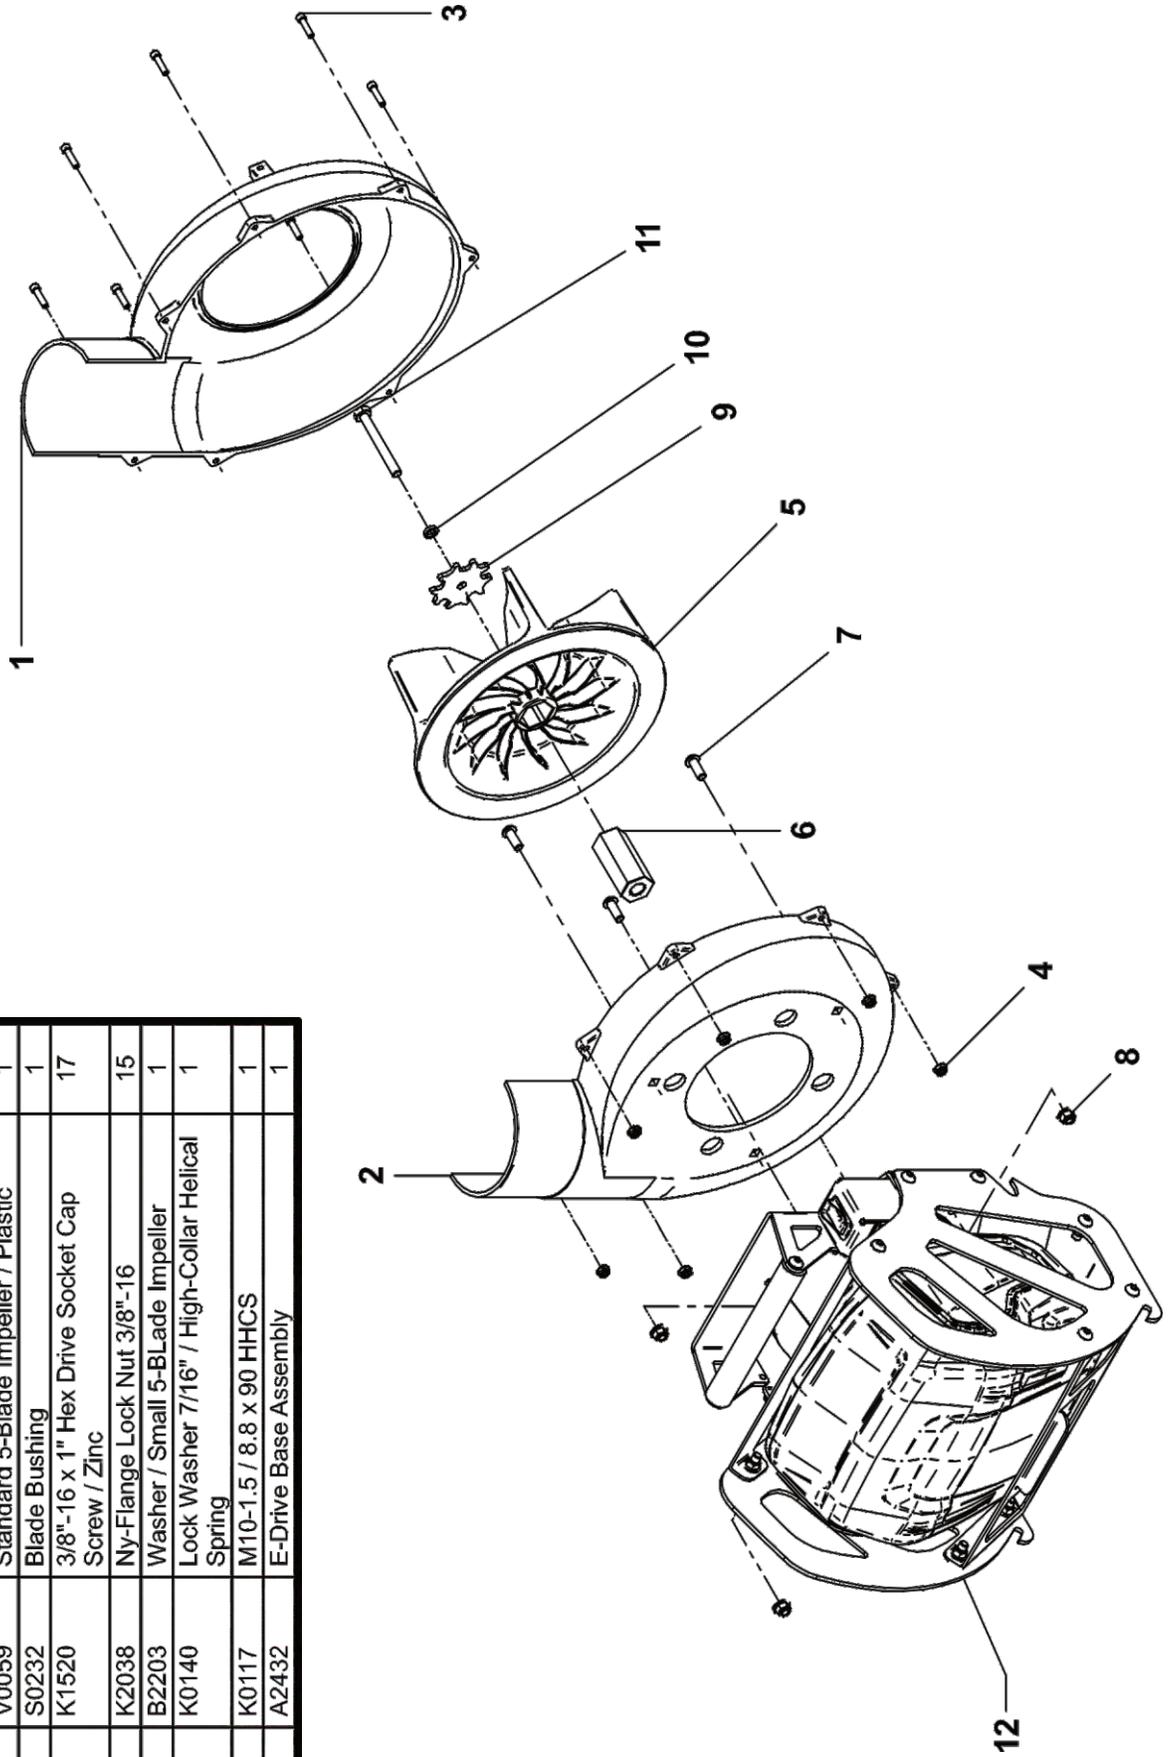


5920E X20 Trailer Vac Explosion

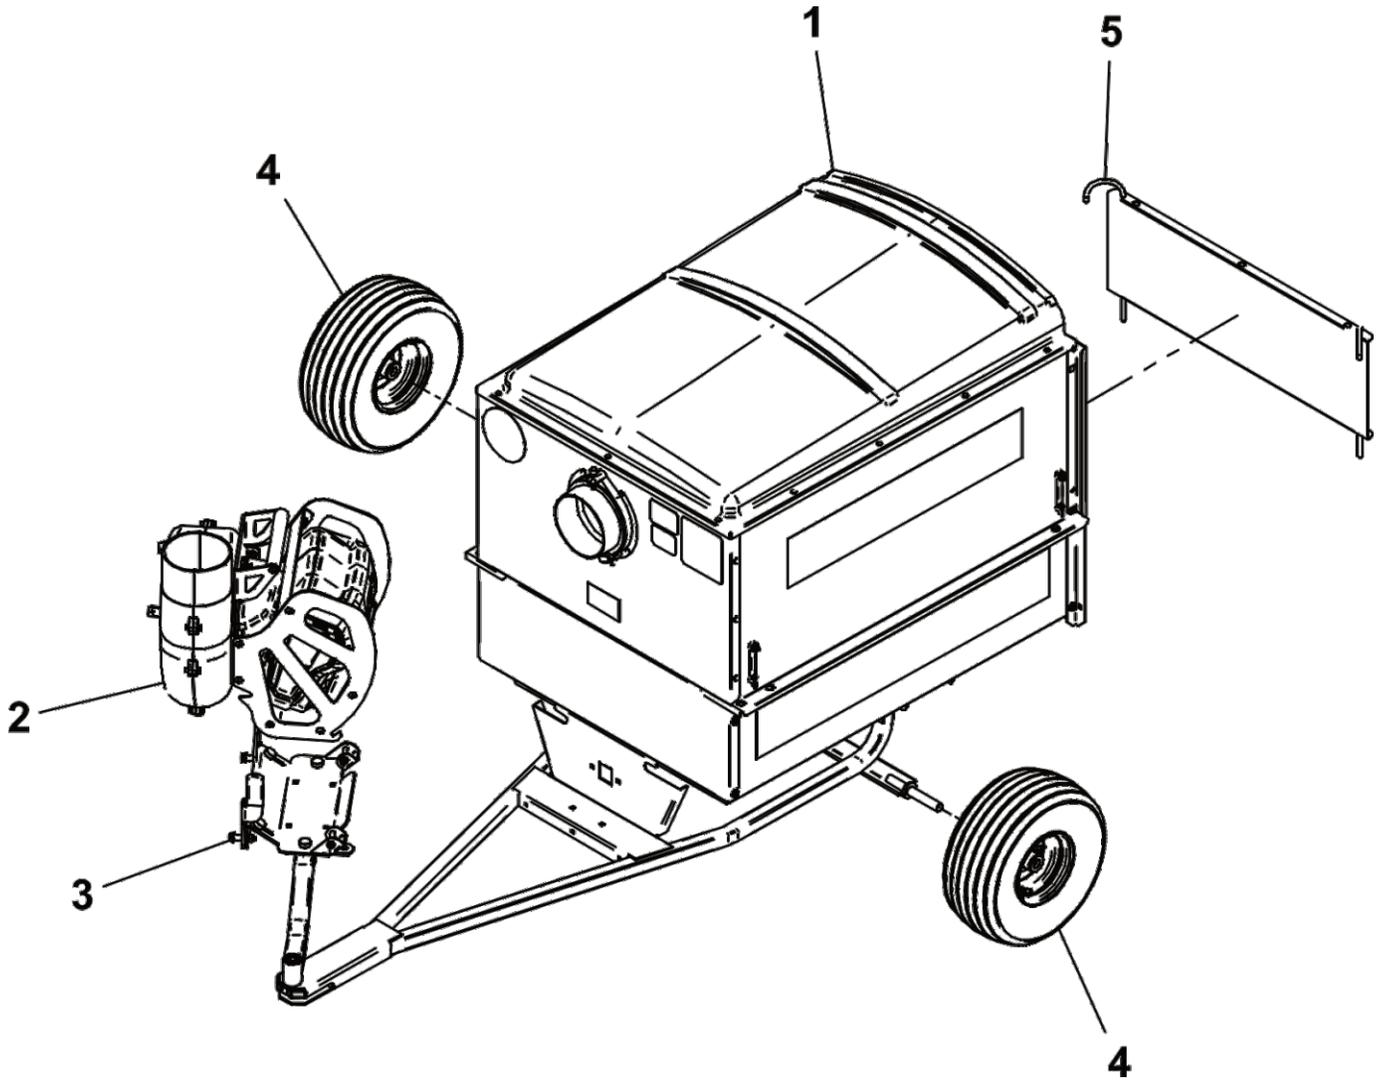


Item #	Part #	Desc.	Qty.
1	A1115	X20 Trailer Sub-Assy	1
2	A2433	EDrive Assy / 5-Blade	1
3	A2380	Universal Mount Base	1
4	H5001	Wheel & Tire Assembly	2
5	A0262	Tail Gate Assembly	1

A1115 X20 Trailer Sub-Assy Explosion

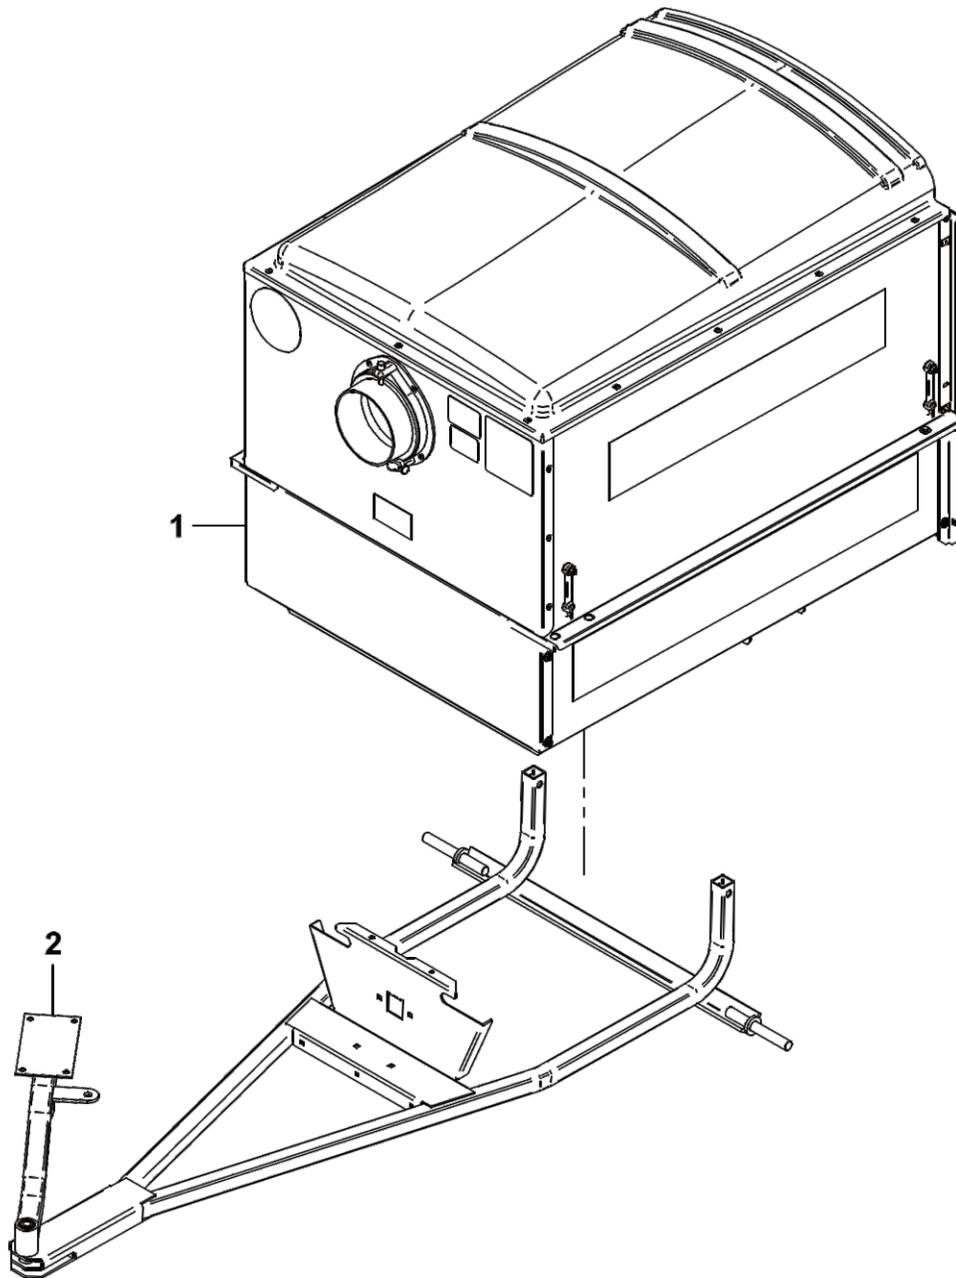


Item #	Part #	Desc.	Qty.
1	A2268	X20 Trailer / Top & Pan Sub-Assy	1
2	A2269	X20 Trailer / Chassis & Engine Mount Sub-Assy	1

A2268 Top & Pan Sub-Assy / X20 Trailer Vac Explosion

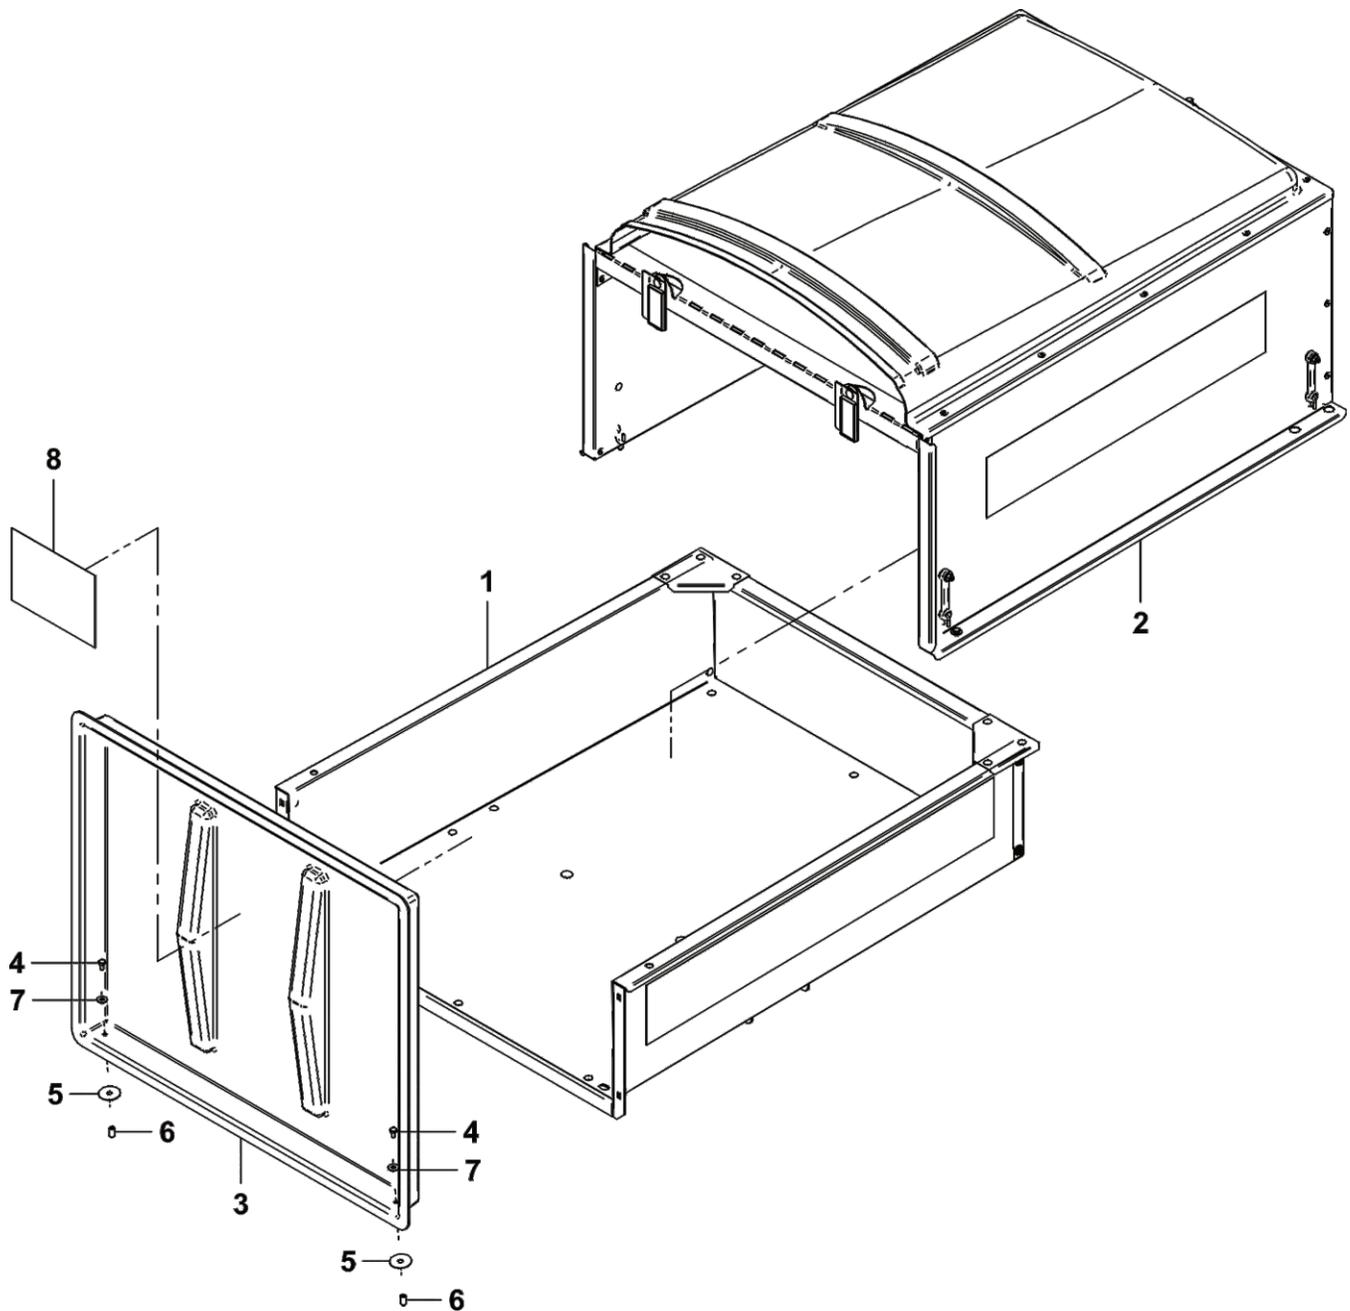

Item #	Part #	Desc.	Qty.
1	A1865	Pan Assembly / X20 Trailer	1
2	A1864	Top Assembly / X20 Trailer	1
3	V0001	Rear Door	1
4	K1105	1/4"-20 x 1/2" HHCS	2
5	K0041	5/16" FENDER WASHER 1.505 OD x .345 ID x .048 T	2
6	B4251	1/4"-20 Locator Pin Nut	2
7	K0037	Flat Washer / 1/4" (.75 OD x .312 ID x .060 T)	2
8	R1070	Decal/ Peco Logo	1


A1864 Top Assy / X20 Trailer Vac Explosion

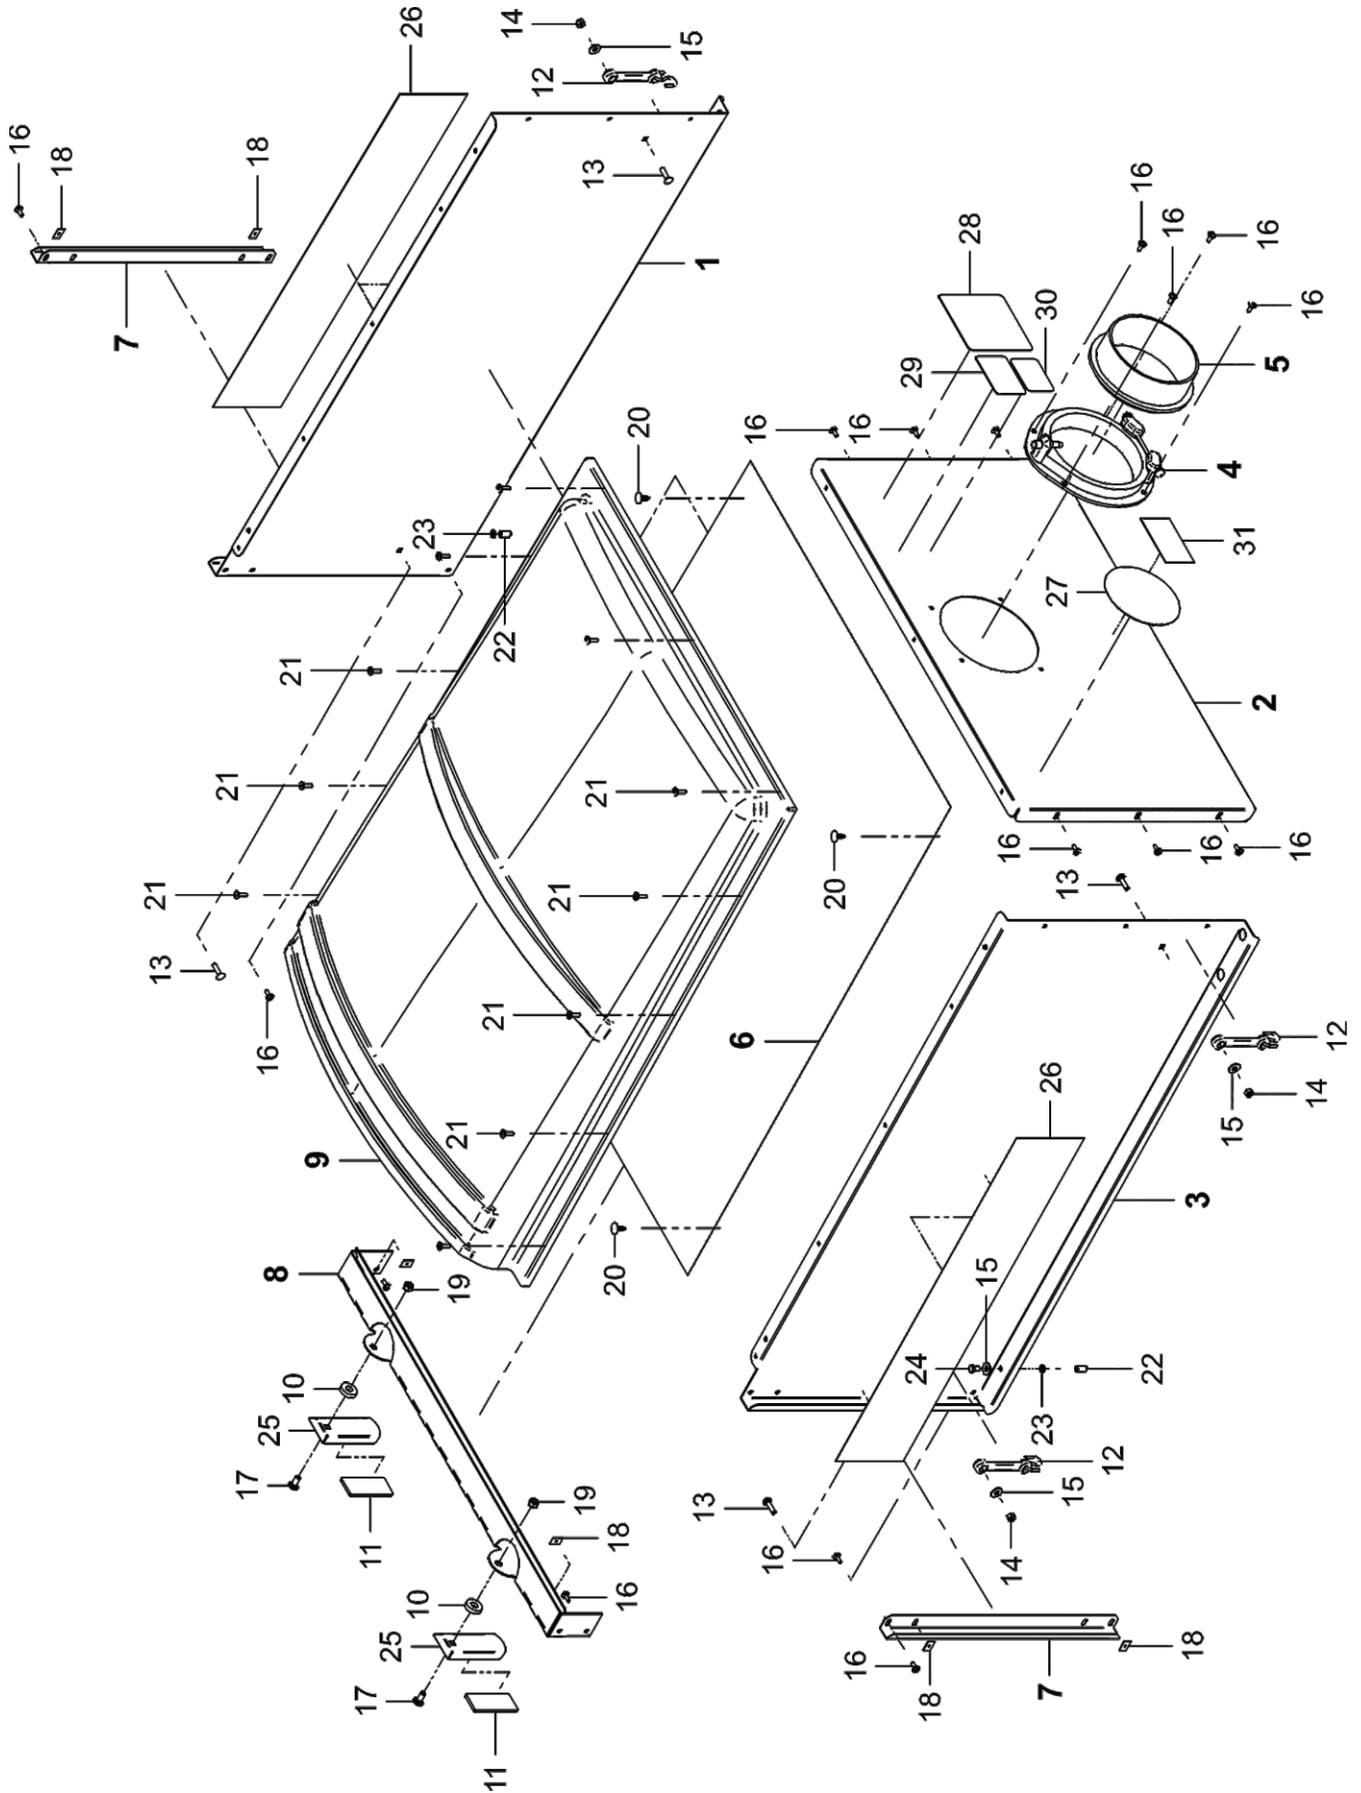

A1864 Top Assy / X20 Trailer Vac Explosion (Continued)

Item #	Part #	Desc.	Qty.
1	C0003	LEFT SIDE PANEL	1
2	C0004	FRONT SIDE PANEL	1
3	C0005	RIGHT SIDE PANEL	1
4	V1052	Inlet Ring w/ Locking Pin	1
5	E8010	6" Inlet Ring	1
6	B8135	FILTER SCREEN	1
7	C2135	SIDE PANEL BRACE	2
8	B0142	HEADER	1
9	V1023	PLASTIC TOP	1
10	K0277	Washer	2
11	J0516	3.25 x 1.44 Red Stick-On Reflector	2
12	J4009	Short Rubber Strap w/ S-Hook	4
13	K1025	1/4"-20 x 1" Carriage Bolt	4
14	K1128	1/4"-20 Nyloc Nut	4
15	K0037	Flat Washer / 1/4" (.75 OD x .312 ID x .060 T)	6
16	K1096	#10-12 x 1/2" Tinnerman Screw	16
17	K1142	5/16"-18 x 3/4" Carriage Bolt	2
18	K0029	#10-12 Flat Tinnerman Nut 3/4" x 1/2"	16
19	K2516	Ny-Flange Lock Nut 5/16"-18	2
20	K1265	Black Panel Retainer	4
21	K0010	#10-12 x 3/4" SHARP TIP SMS	11
22	B4251	1/4"-20 Locator Pin Nut	2
23	K0039	1/4" Lock Washer	2
24	K1105	1/4"-20 x 1/2" HHCS	2
25	C1170_01	Door Latch Bracket	2
26	R1071	X20 Trailer Vac Label / 5" x 23"	2
27	R0022	Decal / Built In The USA / Lg	1
28	R1069	Decal / Warning - Turn Off Blower	1
29	R1054	Decal / Important Check Hoses	1
30	R1051	Decal / Warning - Use Hearing Protection	1
31	R1066	Decal/ Lock - Dump	1


A1865 Pan Assy / X20 Trailer Vac Explosion

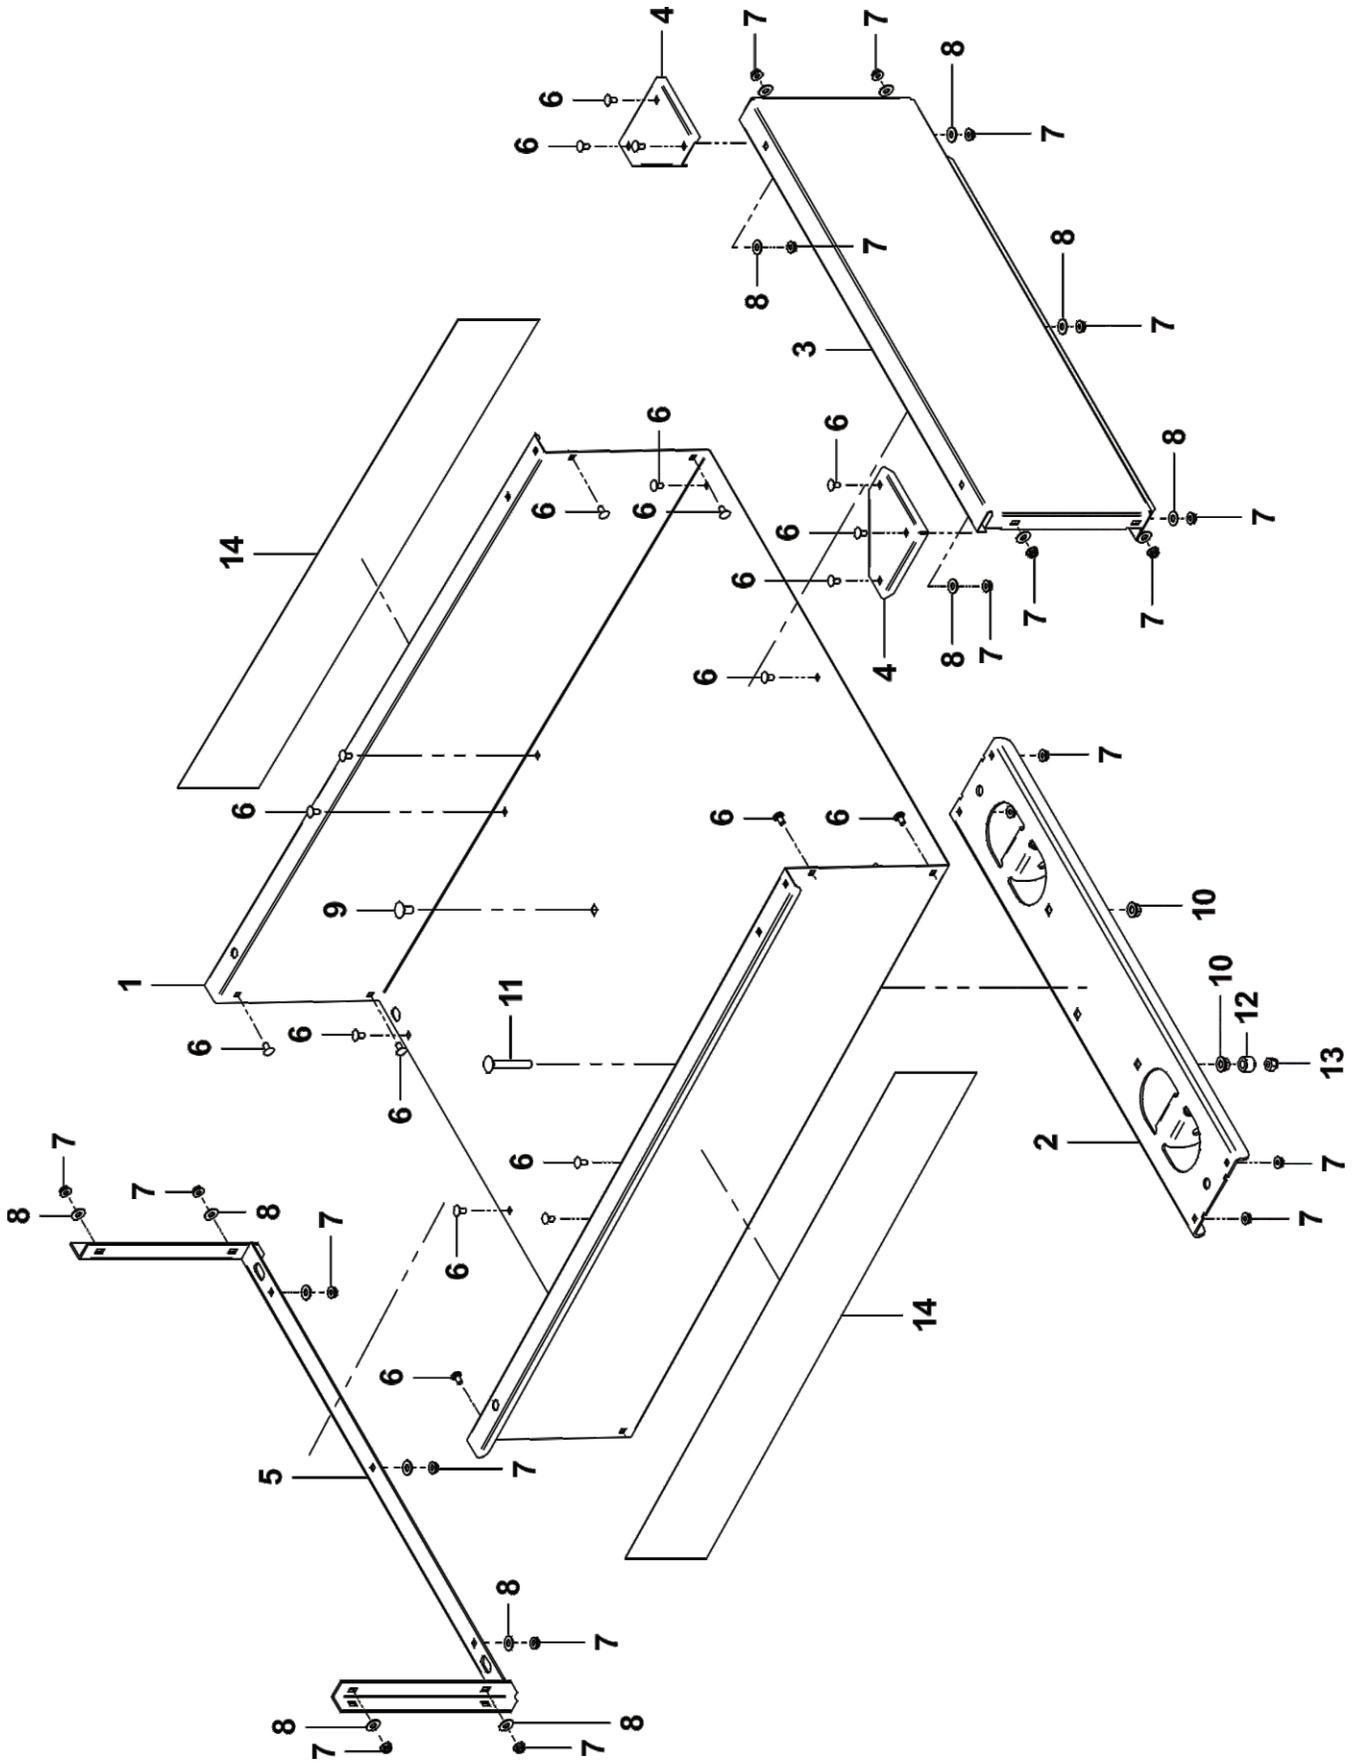

A1865 Pan Assy / X20 Trailer Vac Explosion (Continued)


Item #	Part #	Desc.	Qty.
1	B0134	PAN	1
2	B0136	Pivot Support	1
3	B0133	PAN FRONT	1
4	B0138	Pan Corner Brace	2
5	A0527	TAIL GATE BRACE ASSEMBLY	1
6	K1005	1/4"-20 x 1/2" Carriage Bolt	24
7	K1126	Flange Nut 1/4"-20	24
8	K0037	Flat Washer / 1/4" (.75 OD x .312 ID x .060 T)	20
9	K1181	3/8"-16 x 3/4" CARRIAGE BOLT	1
10	K1215	Flange Nut 3/8"-16	2
11	K1186	3/8"-16 x 2-1/2" CARRIAGE BOLT	1
12	S3143	.75 OD x .406 ID x .50 T SPACER BUSHING	1
13	K1216	Nyloc Nut / 3/8"-16	1
14	R0038	Decal / Peco Stripe / Lg	2

A2269 Chassis & Engine Mount Sub-Assy / X20 Trailer Vac Explosion

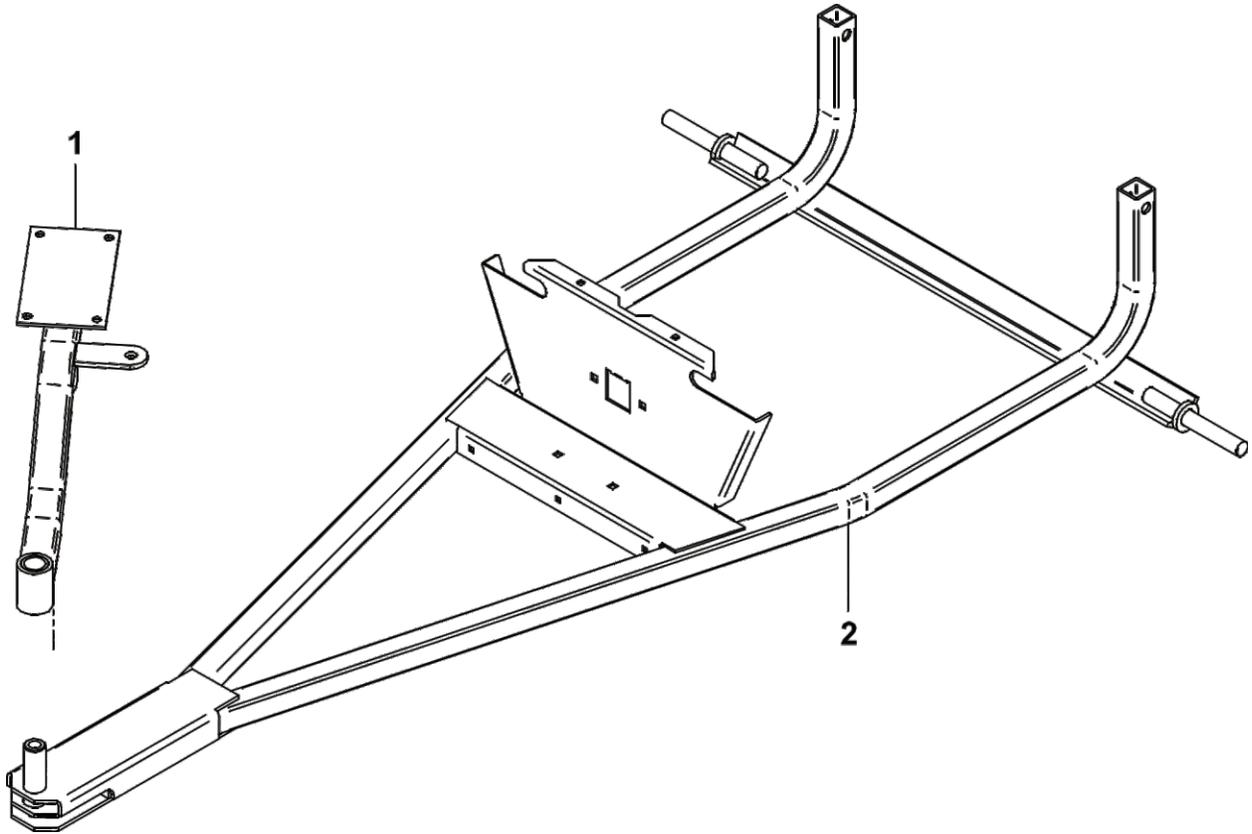


Item #	Part #	Desc.	Qty.
1	A0837	Eng. Mnt. Arm Assy.	1
2	A1866	Chassis Assembly / X20 Trailer	1

A0025 Engine Stay Assembly Kit Explosion

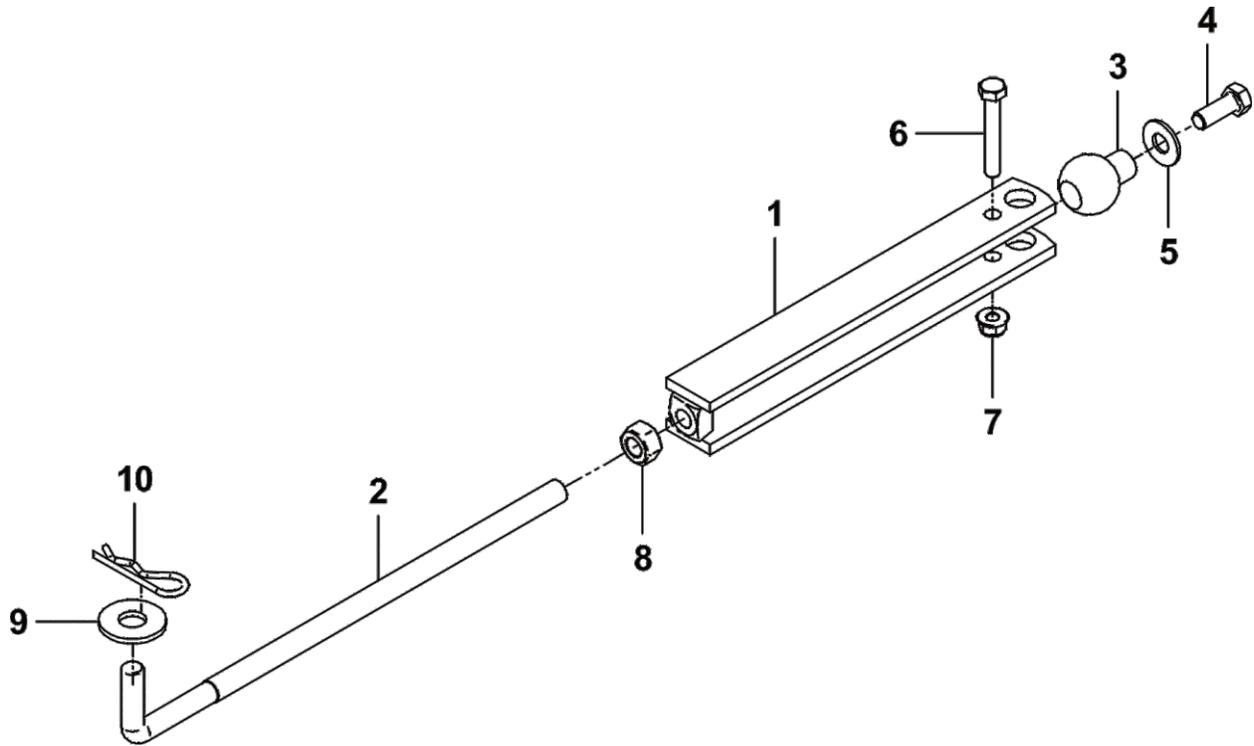


Item #	Part #	Desc.	Qty.
1	A0336	Ball Clevis Clamp Assembly	1
2	B4311	ADJUSTING ROD	1
3	B0132	Ball Clevis	1
4	K1191	HHCS 3/8"-16 x 1" GR5	1
5	K0047	Flat Washer 3/8" / 1.00 OD x .446 ID x .075 T	1
6	K1159	5/16"-18 x 2" All Thread HHCS	1
7	K2516	Ny-Flange Lock Nut 5/16"-18	1
8	K1243	1/2"-13 Hex Nut	1
9	K0055	Flat Washer 1/2" / 1.383 OD x .560 ID x .120 T	1
10	K0086	Hair Pin Clip .125 OD x 2.50	1

7930E X30 Trailer Vac Explosion

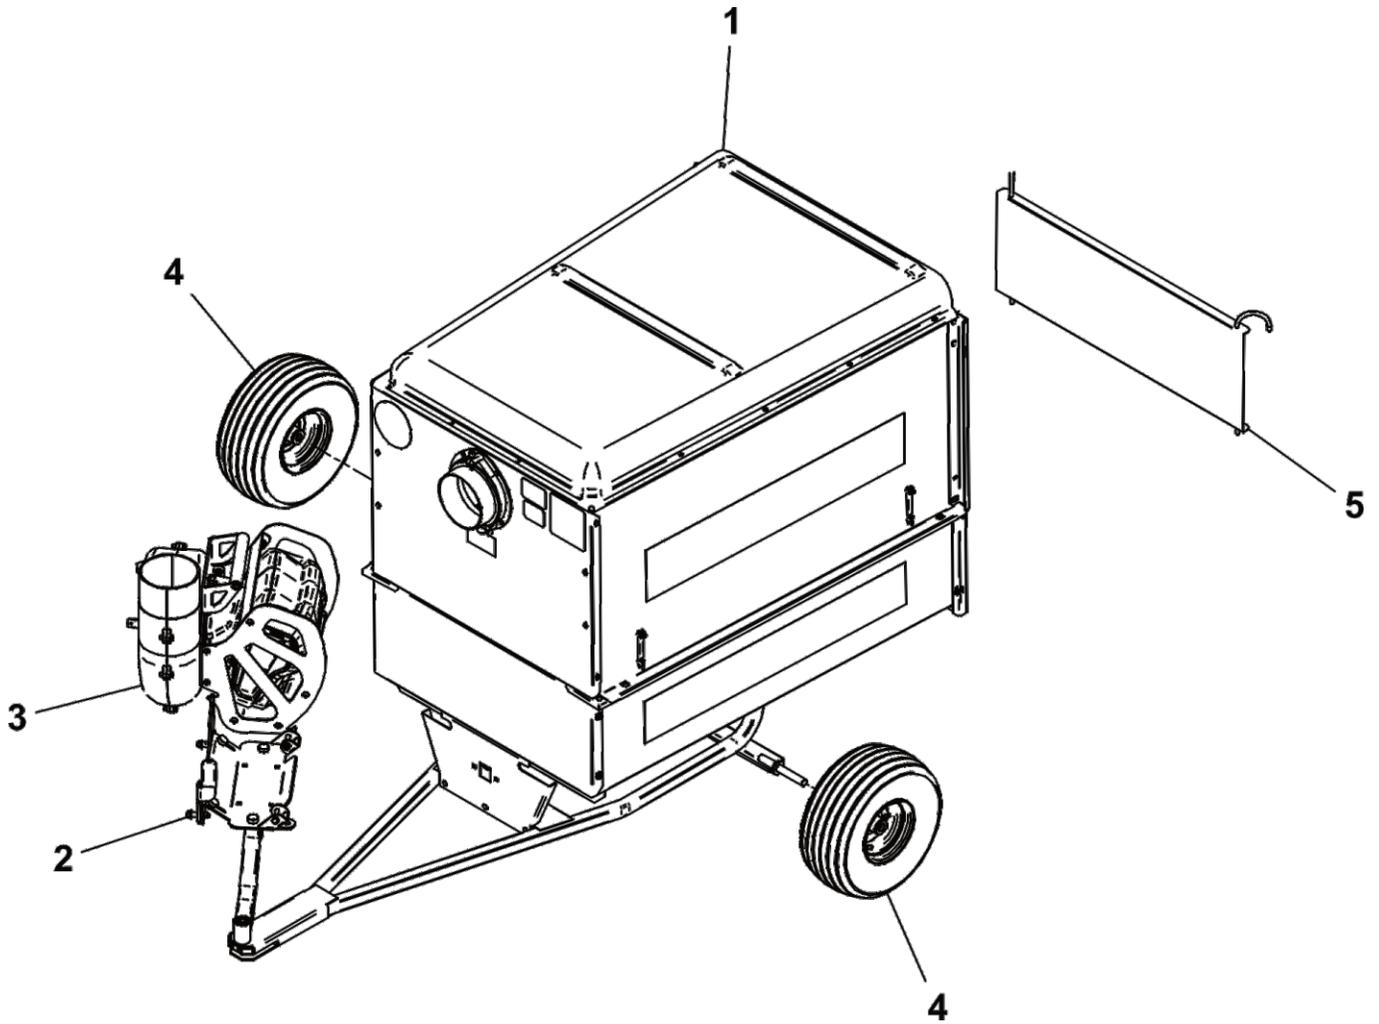


Item #	Part #	Desc.	Qty.
1	A1116	X30 Trailer Vac Sub-Assy	1
2	A2380	Universal Mount Base	1
3	A2433	EDrive Assy / 5-Blade	1
4	H5001	Wheel & Tire Assembly	2
5	A0263	Tail Gate Assembly	1

A1116 X30 Trailer Sub-Assy Explosion

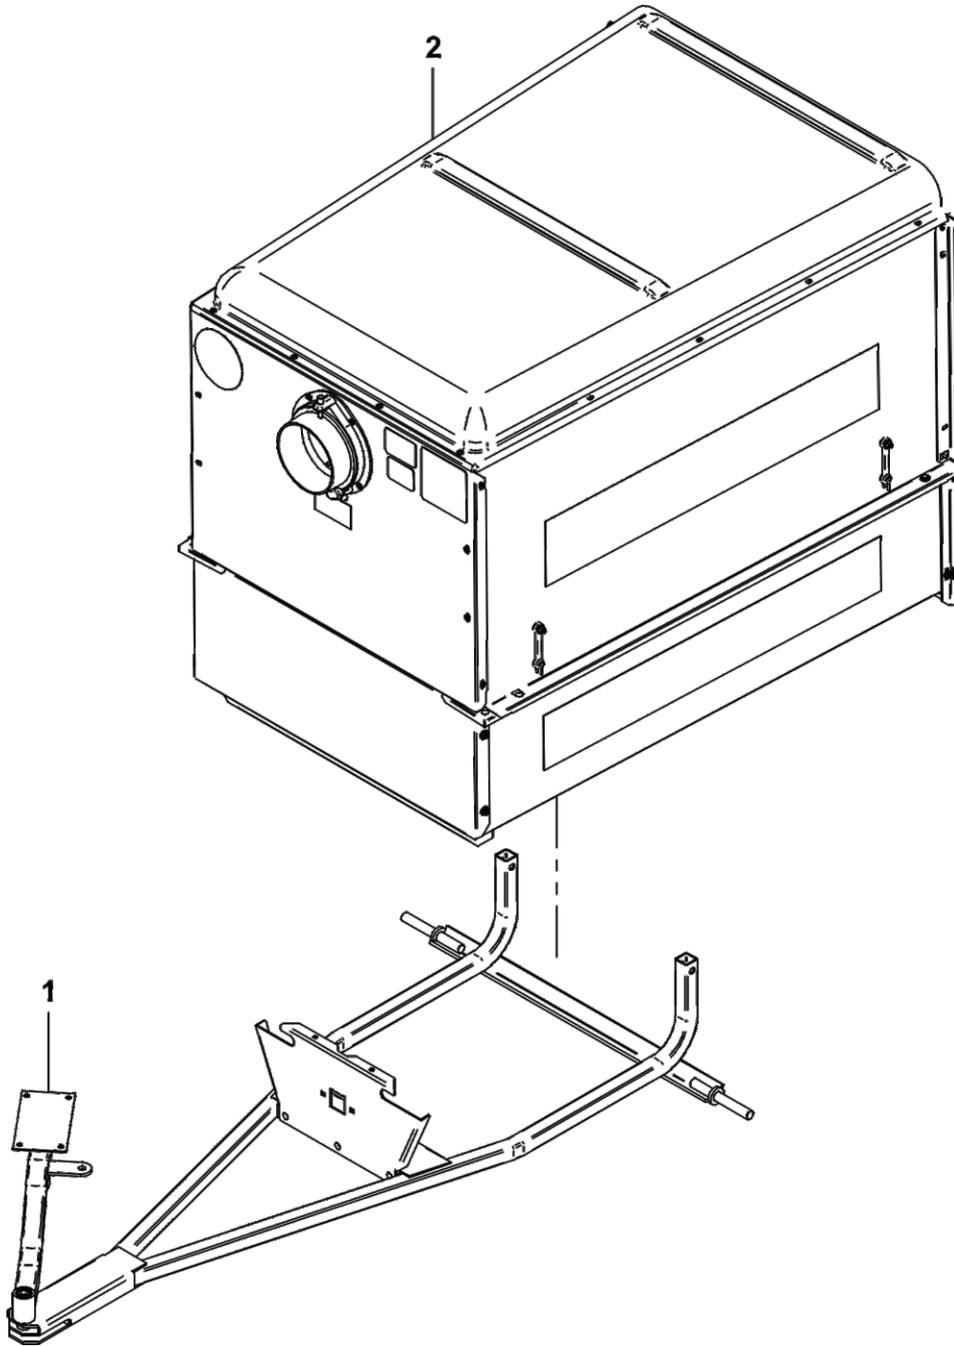


Item #	Part #	Desc.	Qty.
1	A2115	Chassis & Engine Mount Sub-Assy	1
2	A2271	X30 Trailer / Top & Pan Sub-Assy	1

A2271 Top & Pan Sub-Assy / X30 Trailer Explosion

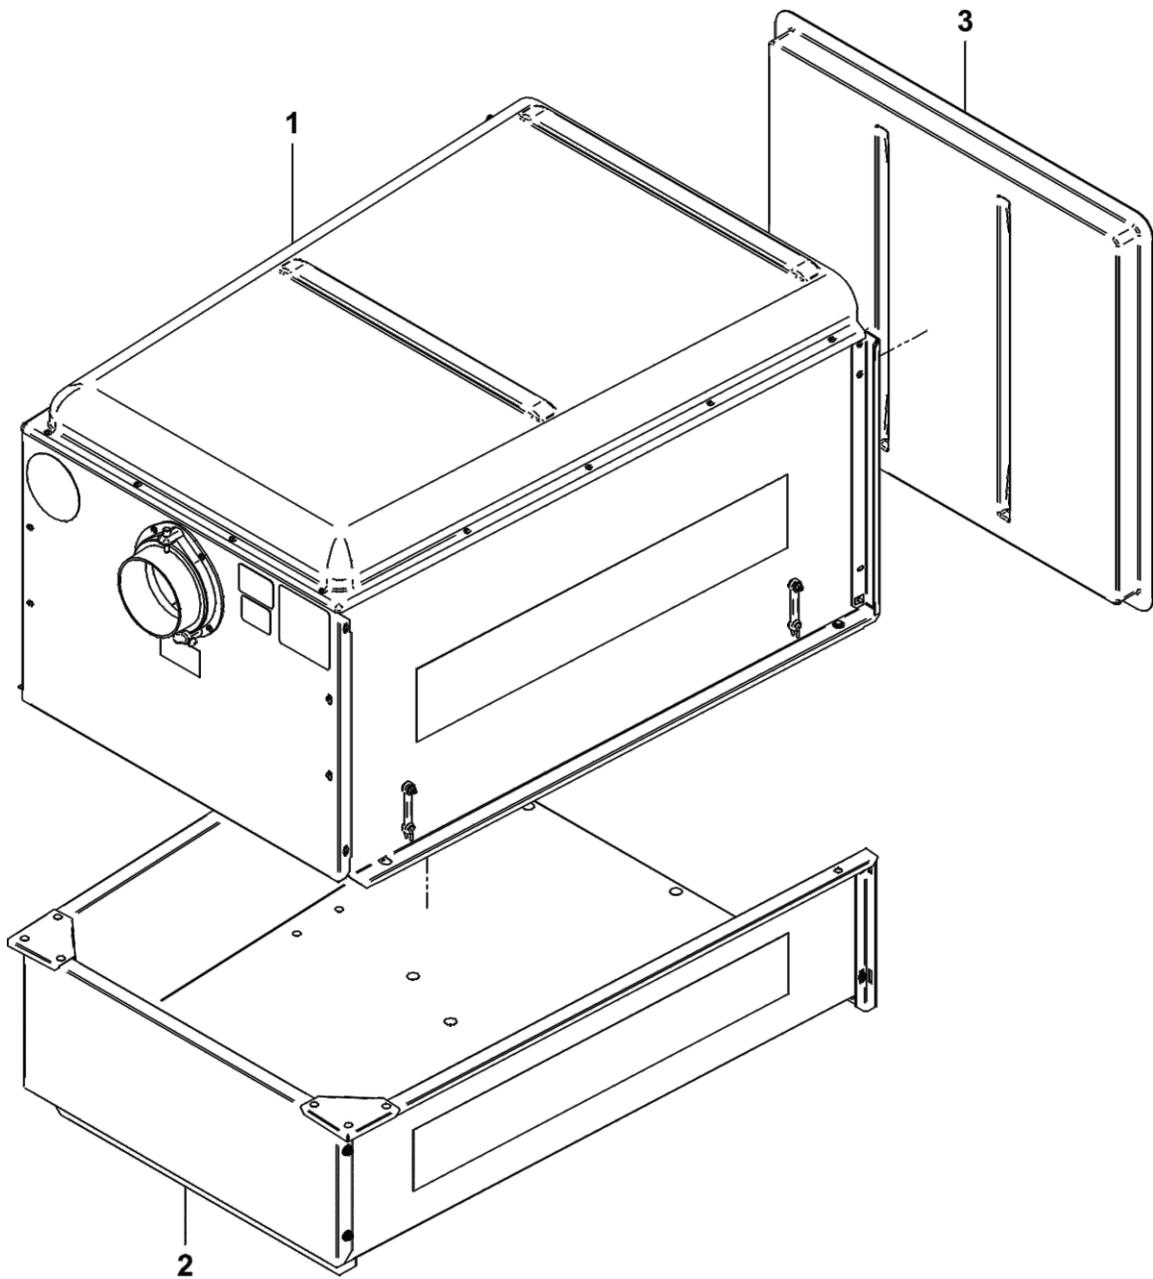

Item #	Part #	Desc.	Qty.
1	A2112	Top Assembly / X30 Trailer	1
2	A2113	Pan Assembly / X30 Trailer	1
3	A2114	Door Assembly / X30 Trailer	1


A2112 Top Assy / X30 Trailer Explosion

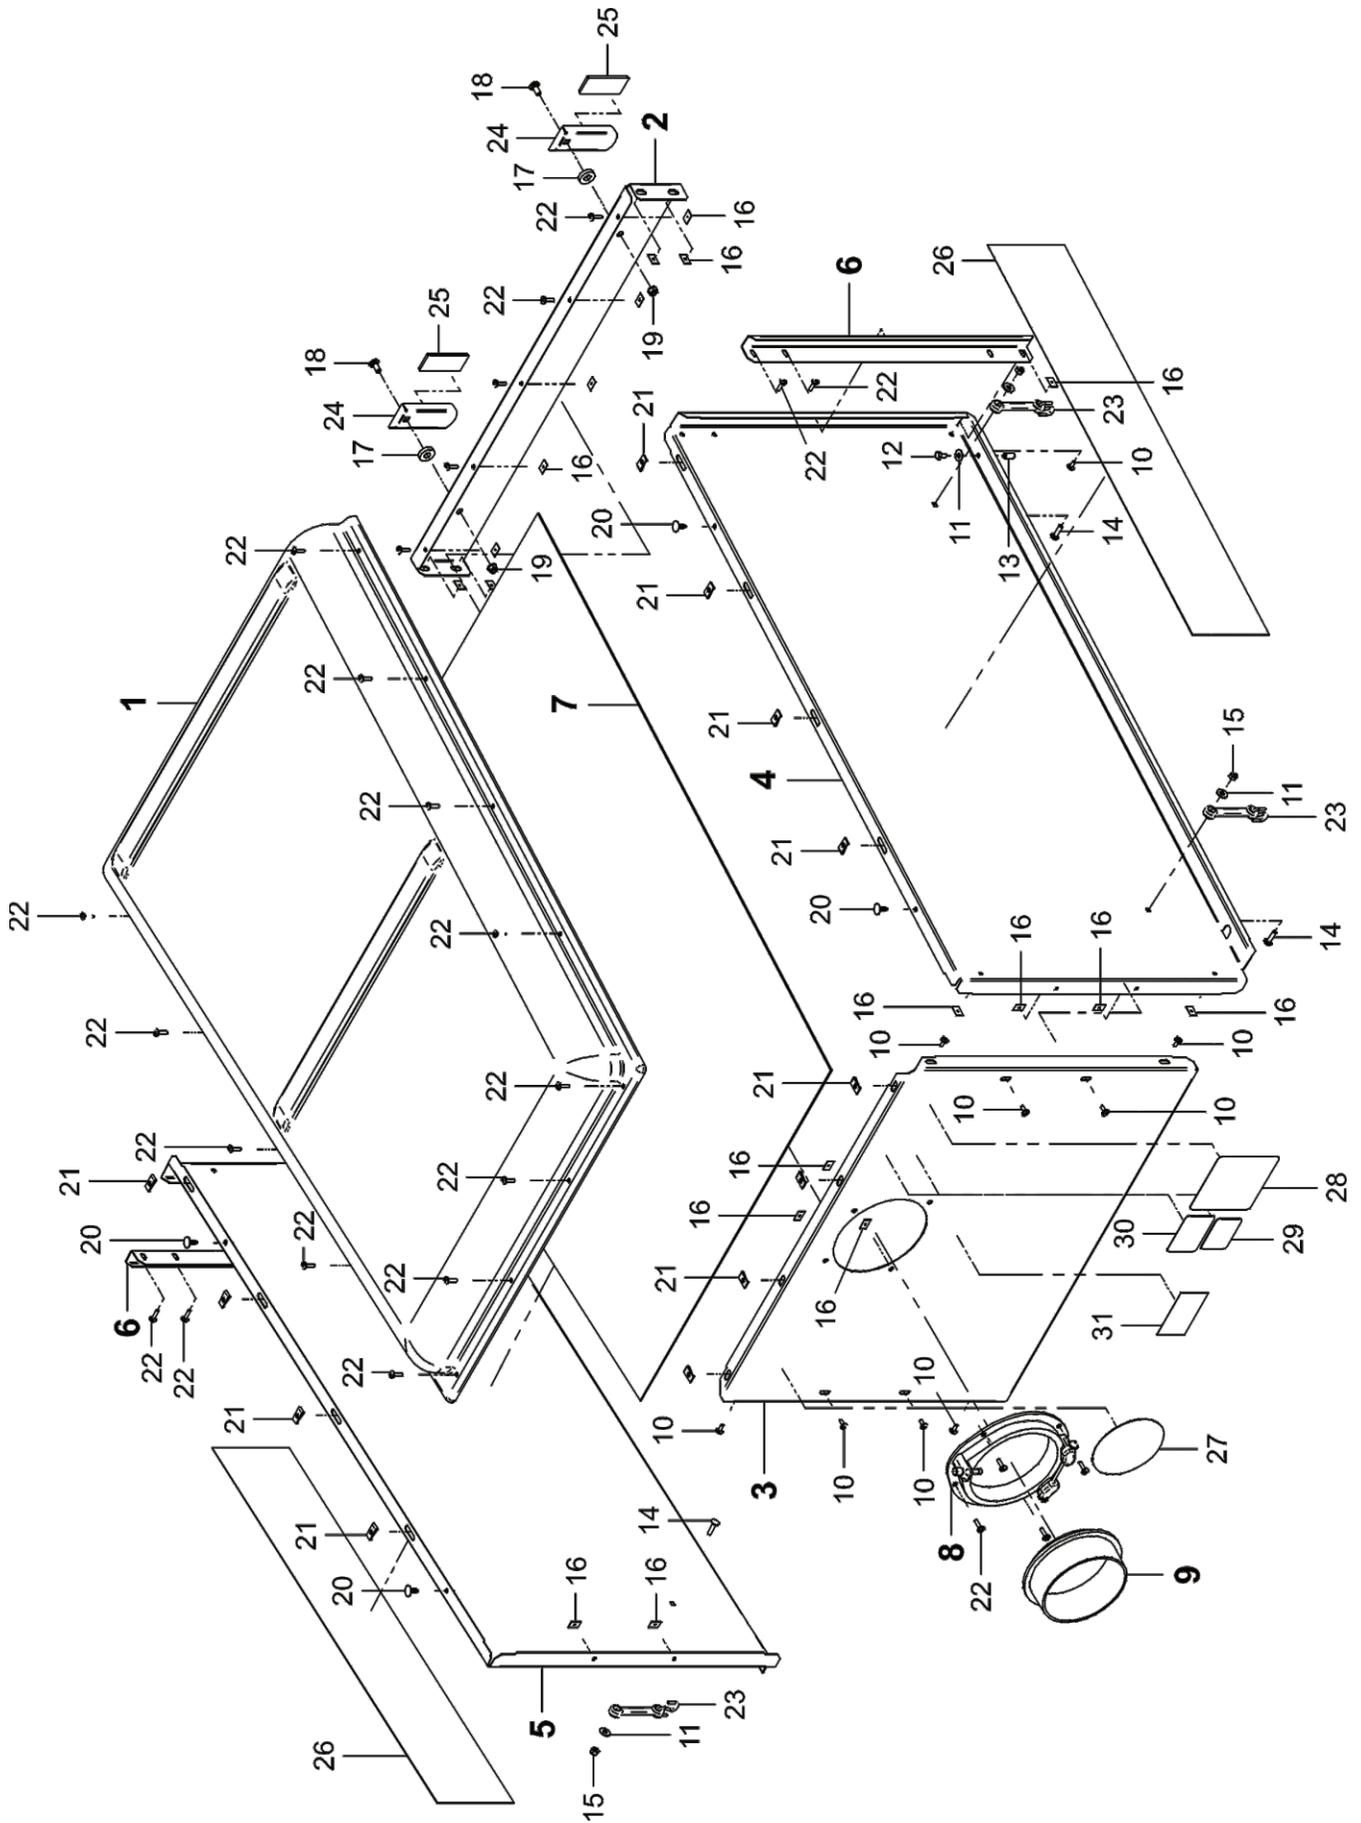

A2112 Top Assy / X30 Trailer BOM


Item #	Part #	Desc.	Qty.
1	V1021	Top	1
2	B1003	Header	1
3	C0082	Front Panel	1
4	C0083	Left Side Panel	1
5	C0084	Right Side Panel	1
6	C0085	Side Panel Brace	2
7	B8136	30 Trailer Screen	1
8	V1052	Inlet Ring w/ Locking Pin	1
9	E8010	6" Inlet Ring	1
10	K1096	#10-12 x 1/2" Tinnerman Screw	10
11	K0037	Flat Washer / 1/4" (.75 OD x .312 ID x .060 T)	6
12	K1105	1/4"-20 x 1/2" HHCS	2
13	B4251	1/4"-20 Locator Pin Nut	2
14	K1025	1/4"-20 x 1" Carriage Bolt	4
15	K1128	1/4"-20 Nyloc Nut	4
16	K0029	#10-12 Flat Tinnerman Nut 3/4" x 1/2"	23
17	K0277	Washer	2
18	K1142	5/16"-18 x 3/4" Carriage Bolt	2
19	K2516	Ny-Flange Lock Nut 5/16"-18	2
20	K1265	Black Panel Retainer	4
21	K0068	Tinnerman Clip / Large	12
22	K1092	#10-12 x 3/4" Blunt Tip SMS	25
23	J4009	Short Rubber Strap w/ S-Hook	4
24	C1170_01	Door Latch Bracket	2
25	J0516	3.25 x 1.44 Red Stick-On Reflector	2
26	R0029	Decal / 30 cu. ft. Trailer Vac	2
27	R0022	Decal / Built In The USA / Lg	1
28	R1069	Decal / Warning - Turn Off Blower	1
29	R1051	Decal / Warning - Use Hearing Protection	1
30	R1054	Decal / Important Check Hoses	1
31	R1066	Decal/ Lock - Dump	1

A2113 Pan Assy / X30 Trailer Explosion

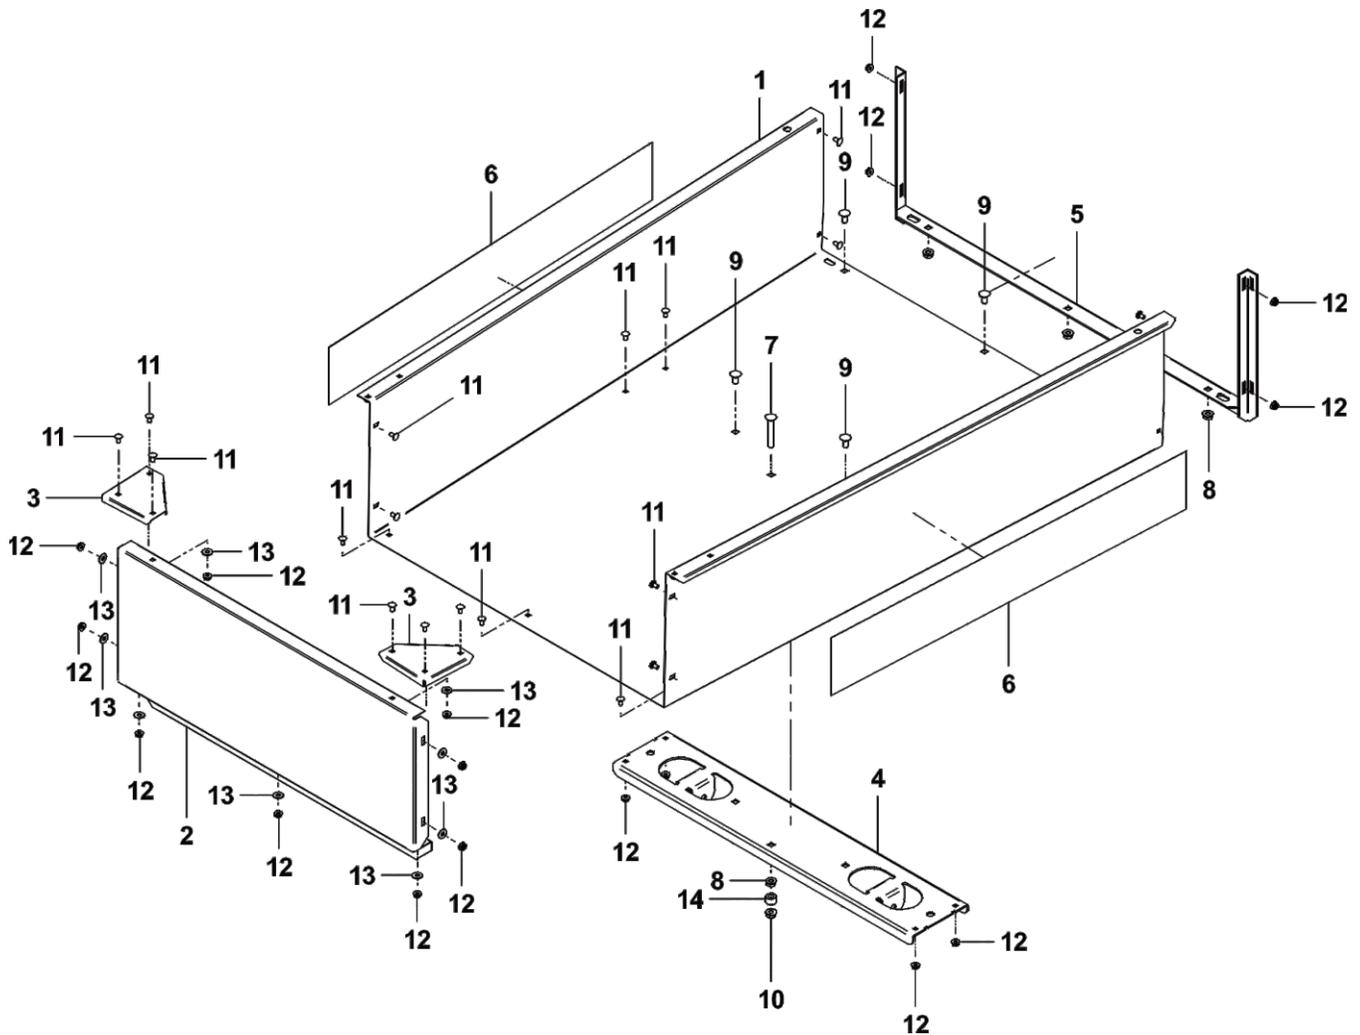


Item #	Part #	Desc.	Qty.
1	B1001	Pan	1
2	B1002	Pan Front	1
3	B0138	Pan Corner Brace	2
4	B0136	Pivot Support	1
5	A2099	Pan Door Brace Weldment	1
6	R0038	Decal / Peco Stripe / Lg	2
7	K1186	3/8"-16 x 2-1/2" CARRIAGE BOLT	1
8	K1215	Flange Nut 3/8"-16	6
9	K1181	3/8"-16 x 3/4" CARRIAGE BOLT	5
10	K2038	Ny-Flange Lock Nut 3/8"-16	1
11	K1005	1/4"-20 x 1/2" Carriage Bolt	21
12	K1126	Flange Nut 1/4"-20	21
13	K0037	Flat Washer / 1/4" (.75 OD x .312 ID x .060 T)	13
14	S3143	.75 OD x .406 ID x .50 T SPACER BUSHING	1

A2114 Door Assy / X30 Trailer Explosion

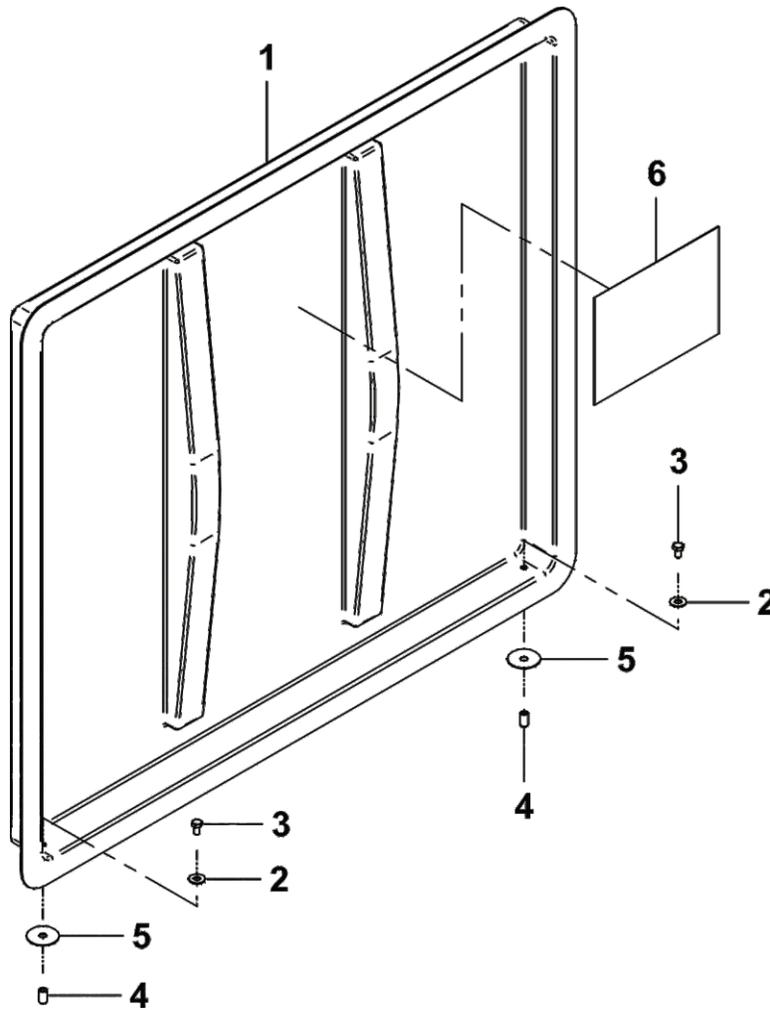


Item #	Part #	Desc.	Qty.
1	V1041	Door	1
2	K0037	Flat Washer / 1/4" (.75 OD x .312 ID x .060 T)	2
3	K1105	1/4"-20 x 1/2" HHCS	2
4	B4251	1/4"-20 Locator Pin Nut	2
5	K0041	5/16" FENDER WASHER 1.505 OD x .345 ID x .048 T	2
6	R1070	Decal/ Peco Logo	1

A2115 Chassis & Engine Mount Sub-Assy / X30 Trailer Explosion

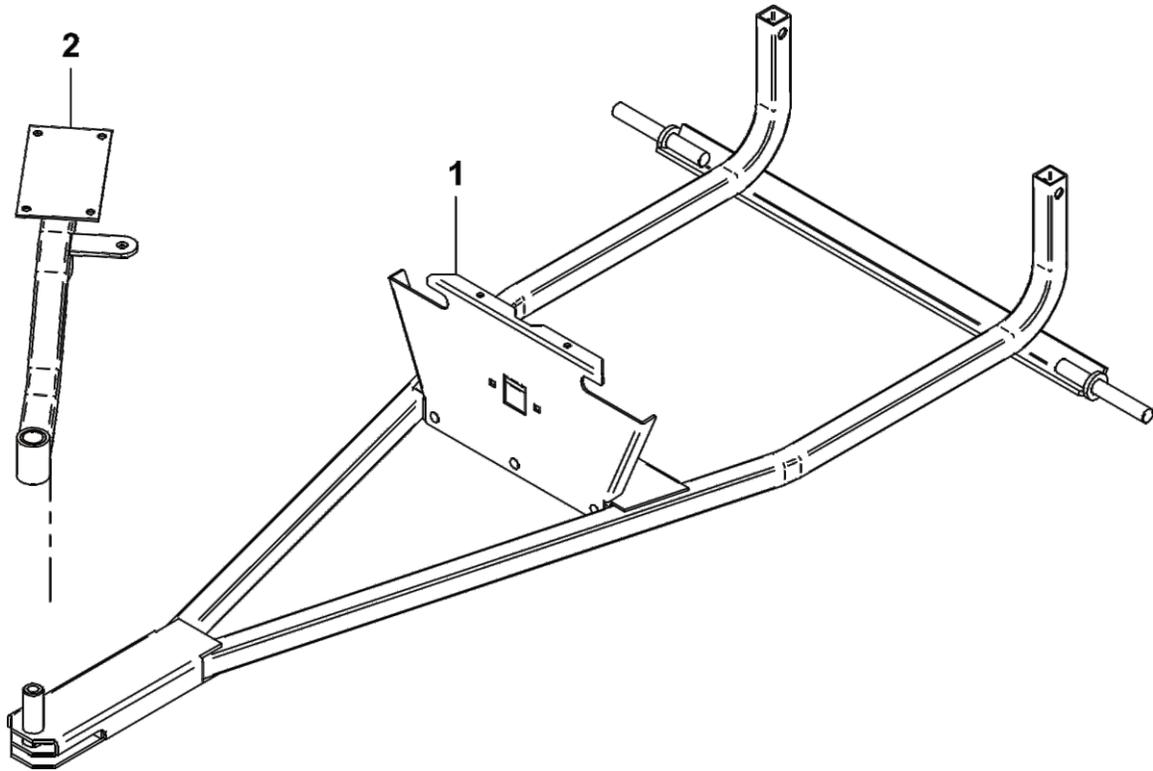


Item #	Part #	Desc.	Qty.
1	A2270	X30 Trailer / Chassis Sub-Assy	1
2	A0837	Eng. Mnt. Arm Assy.	1

A2200 Jack Stand Assembly w/ Jack Foot Explosion

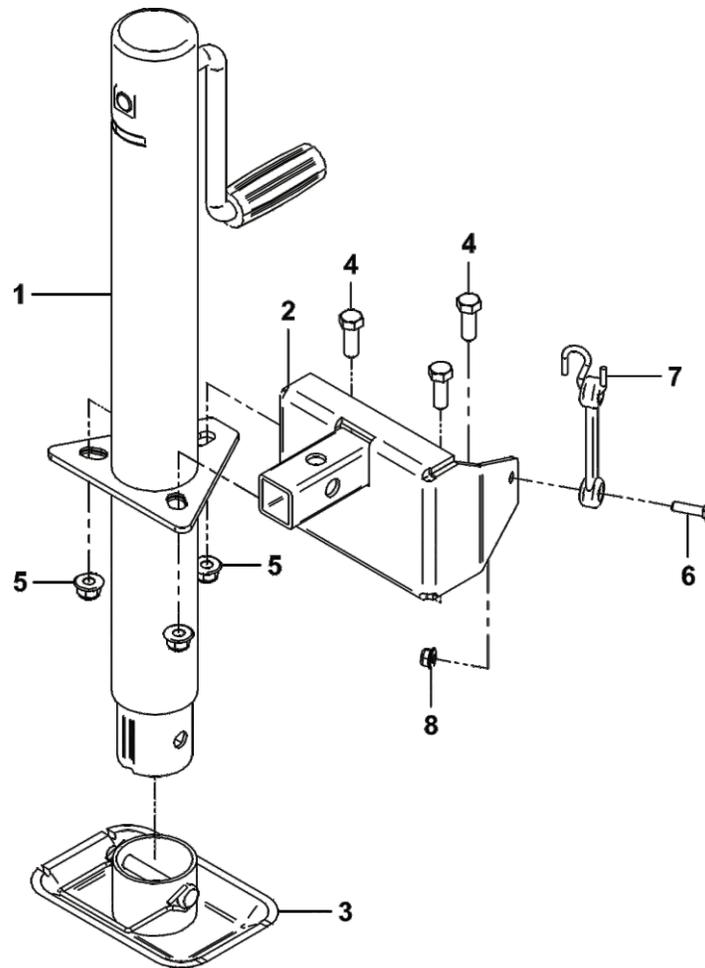

Item #	Part #	Desc.	Qty.
1	J0027	A-Frame Jack	1
2	A2199	Jack Stand Bracket Weldment	1
3	J0025	Jack Foot	1
4	K1191	HHCS 3/8"-16 x 1" GR5	3
5	K2038	Ny-Flange Lock Nut 3/8"-16	3
6	K1025	1/4"-20 x 1" Carriage Bolt	1
7	J4009	Short Rubber Strap w/ S-Hook	1
8	K2014	1/4"-20 Ny-Flange Lock Nut	1

A2201 Jack Stand Assembly w/ Caster Wheel Explosion

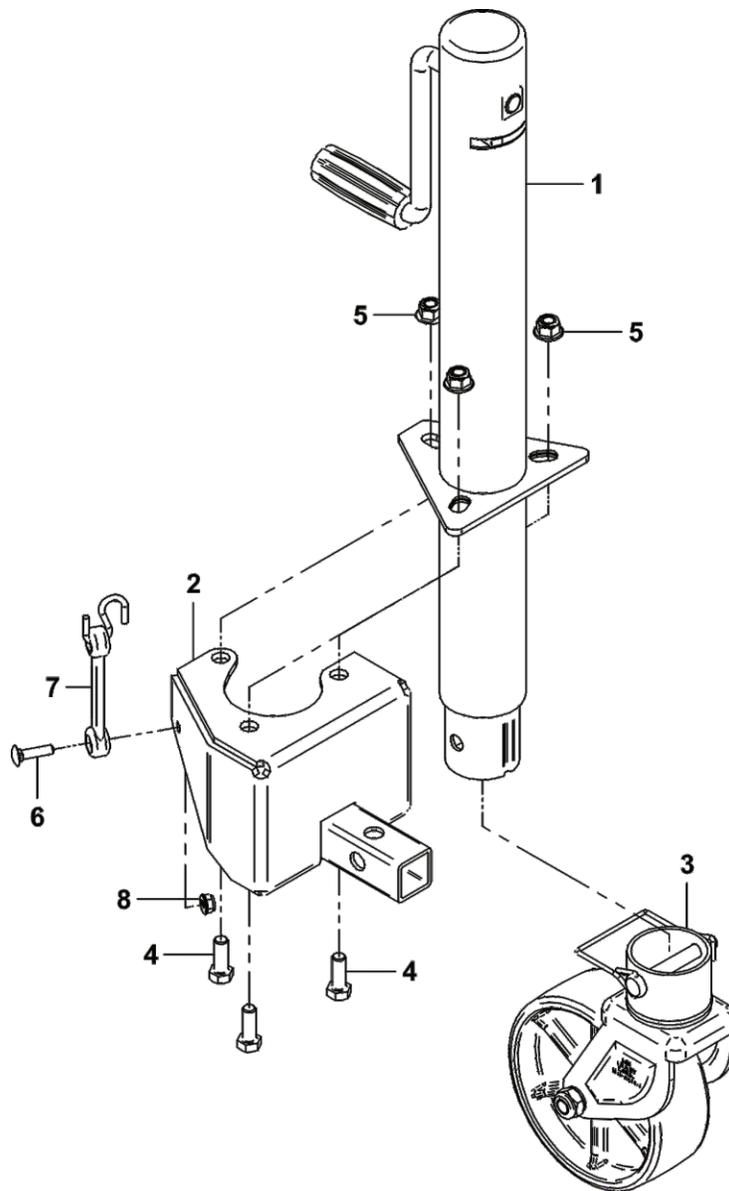

Item #	Part #	Desc.	Qty.
1	J0027	A-Frame Jack	1
2	A2199	Jack Stand Bracket Weldment	1
3	J0026	Jack Caster Wheel Assembly	1
4	K1191	HHCS 3/8"-16 x 1" GR5	3
5	K2038	Ny-Flange Lock Nut 3/8"-16	3
6	K1025	1/4"-20 x 1" Carriage Bolt	1
7	J4009	Short Rubber Strap w/ S-Hook	1
8	K2014	1/4"-20 Ny-Flange Lock Nut	1

SAFETY DECALS

To promote safe operation, New PECO, Inc. supplies safety decals on all products manufactured. Damage can occur to safety decals either through shipment, use or reconditioning. Contact your local Service Center for replacement decals.



Part# R1070
PECO Logo




Part# R0022
Designed & Built
In The USA




Part #: R2007
Danger - Never Use Hands



Part #: R2008
Danger - Rotating Blades

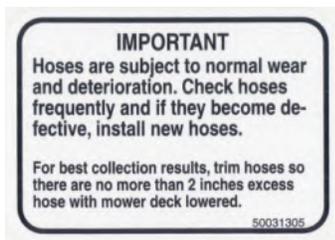

Part #: R1054
Important - Hose Wear

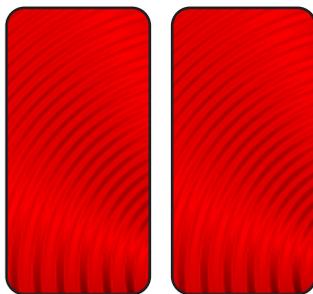

Part #: J0516 - (2)
Red Reflectors



Part #: R1069
Warning - Turn Off Blower



Part # R0024
Danger - Keep Hands
Clear



Part #: R1051
Warning - Hearing Protection



Part # R0025
Danger - Rotating
Blades

Troubleshooting

2017 (v1.0)

Collection System Performance

Problem	Possible Cause	Corrective Action
Abnormal Vibration	<ul style="list-style-type: none">• Cutting blades are bent or unbalanced• Loose blower pulley or pulley assembly• Impeller blade out of balance	<ul style="list-style-type: none">• Install new cutting blade• Tighten the pulley• Contact dealer to replace
Reduced collection system performance	<ul style="list-style-type: none">• Low engine speed• Plugged screen• Loose belt• Full collection bags	<ul style="list-style-type: none">• Always operate collection system at full throttle• Remove debris, leaves, or grass clippings from the screen• Replace/tighten belt• Empty the collection bags
Blower and hoses plugging too frequently	<ul style="list-style-type: none">• Collection bags are too full• Low engine speed• Grass is too wet• Grass is too long• Ground speed is too fast• Worn belt• Loose belt	<ul style="list-style-type: none">• Dump more frequently• Always operate collection system at full throttle• Cut grass when it is dry• Cut the grass several times• Drive slower at full throttle• Replace belt• Adjust the pulley and tighten belts
Debris blowout	<ul style="list-style-type: none">• Collection bags are too full• Plug/clog in the collection system• Ground speed is too fast	<ul style="list-style-type: none">• Dump more frequently• Clean the collection system• Drive more slowly at full throttle
Impeller doesn't rotate freely	<ul style="list-style-type: none">• Plug in the blower housing• Worn impeller blade• Shaft bearings bad/failing	<ul style="list-style-type: none">• Clean the blower housing• Contact dealer to replace• Contact dealer to replace

PECO LIMITED WARRANTY FOR NEW PRODUCTS

New PECO, Inc. extends the following warranties to the ORIGINAL PURCHASER of each New PECO, Inc. consumer product purchased from one of our Dealers or directly from New PECO, Inc., subject to the following limitations:

A. ITEMS COVERED UNDER WARRANTY

1. **PRODUCT WARRANTY** – Any part or parts which are deemed defective in material or workmanship, as delivered to the original purchaser, will either be repaired or replaced, as New PECO, Inc. elects, without charge for parts or labor, if the defect appears within 12 months from the date of purchase of the product to the Original Purchaser.
2. **PARTS REPLACED DURING WARRANTY** – Any New PECO, Inc. part which is furnished in performance of this warranty and is defective in material or workmanship as delivered to the purchaser will be repaired or replaced, as New PECO, Inc. elects, before the expiration of the original warranty period.

B. WARRANTY DISTINCTIONS

1. **RESIDENTIAL** - Products put to a personal use around a single household or residence are considered Residential. Products designated as “Residential” are warranted for 12 months from the date of purchase of the product, to the ORIGINAL PURCHASER with proof of purchase, when used for or in residential applications.
2. **COMMERCIAL** – Products put to any business use (agricultural, commercial or industrial) or used at multiple locations are considered Commercial. Products designated as “Commercial” are warranted for 12 months from the date of purchase of the product, to the ORIGINAL PURCHASER with proof of purchase, when used for or in commercial applications. Products designated as “Residential” are warranted for 90 days from the date of purchase of the product, to the ORIGINAL PURCHASER with proof of purchase, when used for or in Commercial applications.
3. **RENTAL** – Products used for Rental or Lease Purposes are warranted for 45 days from date of purchase of the product, to the ORIGINAL PURCHASER with proof of purchase, when used for or in a rental business.

C. ITEMS NOT COVERED BY NEW PECO WARRANTY

1. **ENGINES & BATTERIES:** Engines and Batteries attached to New PECO, Inc. products are covered under their respective separate manufacturer warranties and those companies must be contacted directly to file a warranty claim. Briggs & Stratton: https://www.briggsandstratton.com/na/en_us/support/warranty.html
2. **UNAPPROVED ALTERATION OR MODIFICATION:** All obligations of New PECO, Inc. under this warranty shall be terminated if products are altered or modified in any way not approved by New PECO, Inc.
3. **ACCIDENTS & NORMAL MAINTENANCE:** This warranty covers ONLY manufacturers defective material and workmanship. It does not cover depreciation or damage caused by normal wear & tear, accident, improper maintenance, misuse or abuse of products. New PECO, Inc. products must be operated and maintained in accordance with the instructions furnished in the manuals. The cost of normal maintenance and normal replacement of service items such as belts, cutting blades, hoses, bags, etc., which are not defective shall be paid for by the purchaser.
4. **NO SERVICE CENTER WARRANTY:** The selling Service Center/Dealer makes no warranty on his own on any item warranted by New PECO, Inc. unless he delivers to purchaser a separate written warranty certificate specifically warranting the item. The Service Center or Dealer has no authority to make any representation or promise on behalf of New PECO, Inc. or to modify the terms of the original warranty in any way.
5. **NO REPRESENTATIONS ADDITIONAL WARRANTIES, DISCLAIMER:** Neither New PECO, Inc. nor any company affiliated with New PECO, Inc. makes any warranties, representations or promises as to the quality of performance of its products other than those set forth herein. Except as described above, New PECO, Inc. makes no other warranties **AND SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY.**
6. **REMEDIED EXCLUSIVE:** The only remedies the purchaser has in connection with the breach or performance of any warranty on New PECO, Inc. consumer products are set forth above. In no event will New PECO, Inc. be liable for special incidental or consequential damages.

Warranty service is available through your local authorized service dealer or distributor. If you do not know the dealer or distributor in your area, search by your zip code on www.lawnvac.com or contact our Sales Department at New PECO, Inc. 800-438-5823 or email Sales@lawnvac.com.

Notes



New PECO, Inc.

10 Walden Dr | Arden, North Carolina 28704

Phone: 1-800-438-5823 | 828-684-1234

Fax: 828-684-0858

Email: peco@lawnvac.com

Website: www.lawnvac.com