



**Unit Model #: 795003 (Yanmar 7 HP) & 795009 (B&S 14 HP)**

**Description:** 50 cu. ft. Estate Series


**Drive Type:** Yanmar 7HP Diesel Engine / Briggs & Stratton 14HP Vanguard

**Mower Type:** Universal


**Vac Type:** Engine Driven Trailer Vac

**Manual:** Q0572

**Revision #:** 7 - Updated Standard Options - BS (May 2026)

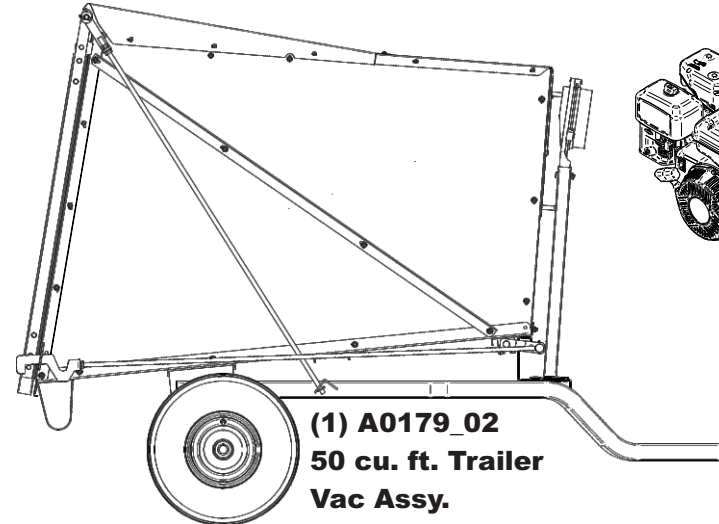


(1) A0179\_02  
50 cu. ft. Trailer  
Vac Assy.

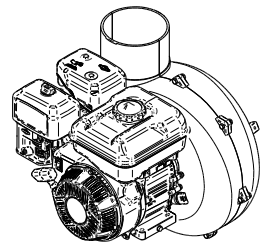


- A620 - Yanmar 7HP Diesel
- A640 - B&S 14HP Vanguard

(1) A0243  
Engine Mount

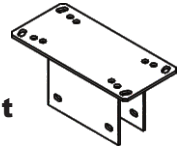

(1) A08185  
Hardware Bag

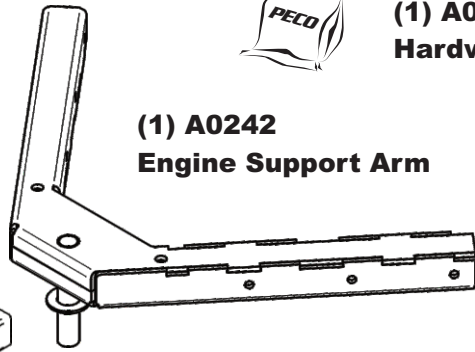


(1) A0242  
Engine Support Arm

**A2326 Universal Battery Kit**





(1) B0945\_01  
Battery Box

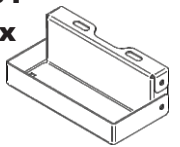


(1) HB0838  
Battery Kit  
HW Bag

(1) C0118  
Battery Clamp

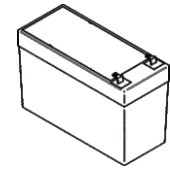


(1) J1201  
12V Sprayer Battery


(2) B2226  
Tongue Mount  
Bracket

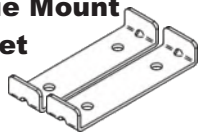

(2) B2230  
Eng Swing Arm  
Lockout Brkt

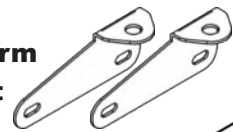

(1) B2225  
Tongue Tube

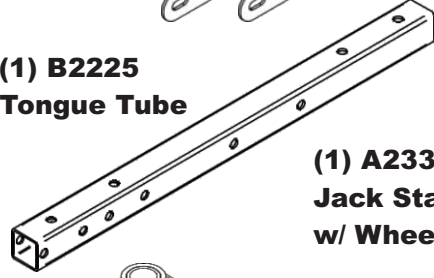


(1) F0070-66  
Upper Hose  
7" x 66"




(2) J0070  
7" Hose Clamps




(1) A2333  
Jack Stand  
w/ Wheel

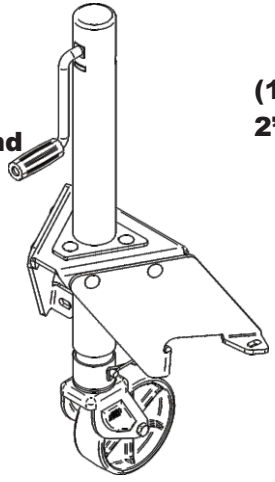

(1) A2403  
Mount Arm  
Swivel Assy

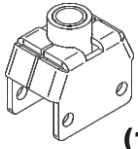

(1) J0033  
2" Trailer Coupler

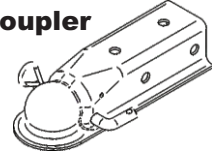


**A2404 Tongue Hitch Assembly**




(1) HB0867  
Tongue Hitch  
Kit HW Bag

(1) B2223  
Tongue Plate  
/ Top

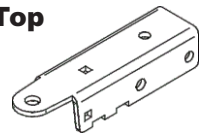

(1) B2224  
Tongue Plate  
/ Bottom



Select the Boot Kit  
That is needed

A2284 Universal Small Boot Kit / Large Hsg

A2283 Universal Large Boot Kit / Large Hsg


Other Boot Kit ( \_\_\_\_\_ )



**Unit Model #: 795003 (Yanmar 7 HP) & 795009 (B&S 14 HP)**

**Additional Options:**


**A2276 Trailer Tow Kit**

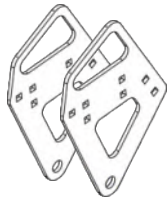

(2) B2015  
Side Plates




(1) B2018  
Handle Base

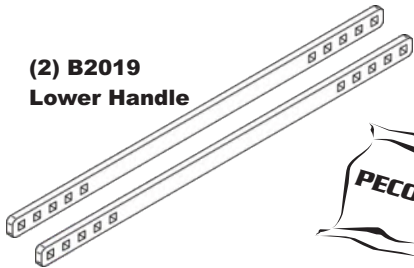

(2) B2019  
Lower Handle




(1) HB0805  
HW Bag /  
Trailer Tow Kit

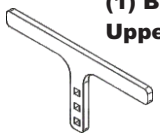


(1) B2020  
Upper Handle


(1) B2017  
Upper Tongue  
Mount

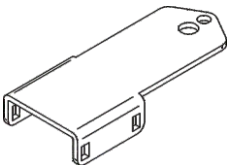

(1) B2016  
Lower Tongue  
Mount

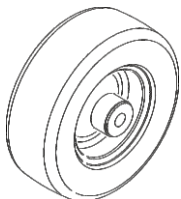

(1) H3408  
Wheel & Tire



**A1861 Wand Kit / Large**

(2) J0060  
6" Hose  
Clamps




(1) B0762  
Lower  
Handle




(1) HB0485  
Wand Kit  
HW Bag



(1) C2120  
6" Nose  
Cone

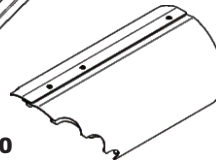

(1) B0755  
Upper  
Handle

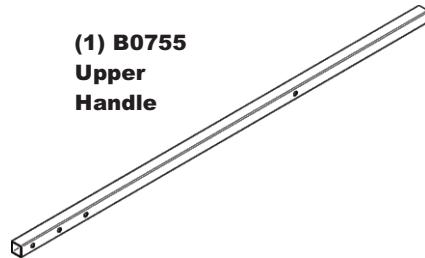

(1) E6005  
6" Blower  
Cone




(1) F0069  
Wand Hose  
6" x 18'



**A2409 Hose Hanger Kit**



(1) HB0872  
Hardware Bag

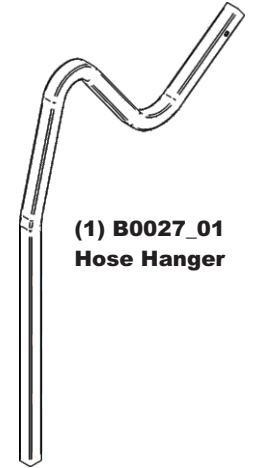

(1) B0027\_01  
Hose Hanger



**Model #A2284**

**Desc:** Universal Small Boot Kit / Large Housing


**Revision #:** 2 - Updated Hose Length BS - May 2026)

**Instruction Sheet:** Q2054

**A2284 Universal Small Boot Kit**



(1)  
F0070-96  
7" x 96"  
Lower Hose

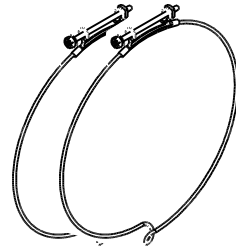


(2)  
J0070  
7" Hose  
Clamps



(1)  
E6007  
7" Blower  
Cone

(1)  
HB0808  
Boot Kit  
HW Bag

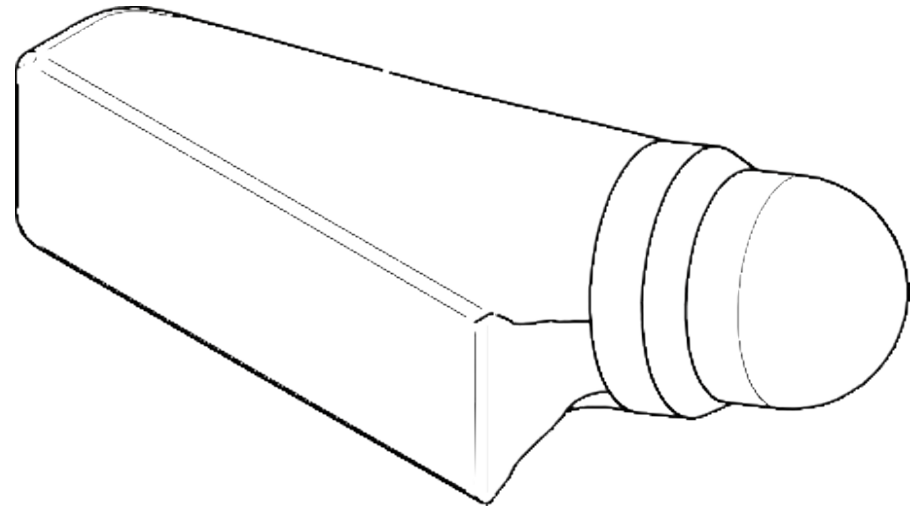

(1)  
V1018  
Universal  
Boot / Small



**Model #A2283**

**Desc:** Universal Large Boot Kit / Large Housing


**Revision #:** 2 - Updated Hose Length (BS - May 2026 )

**Instruction Sheet:** Q2053

**A2283 Universal Large Boot Kit**



(1)  
F0080-96  
8" x 96"  
Lower Hose

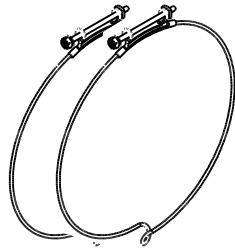


(2)  
J0080  
8" Hose  
Clamps



(1)  
E6008  
8" Blower  
Cone

(1)  
HB0807  
Boot Kit  
HW Bag

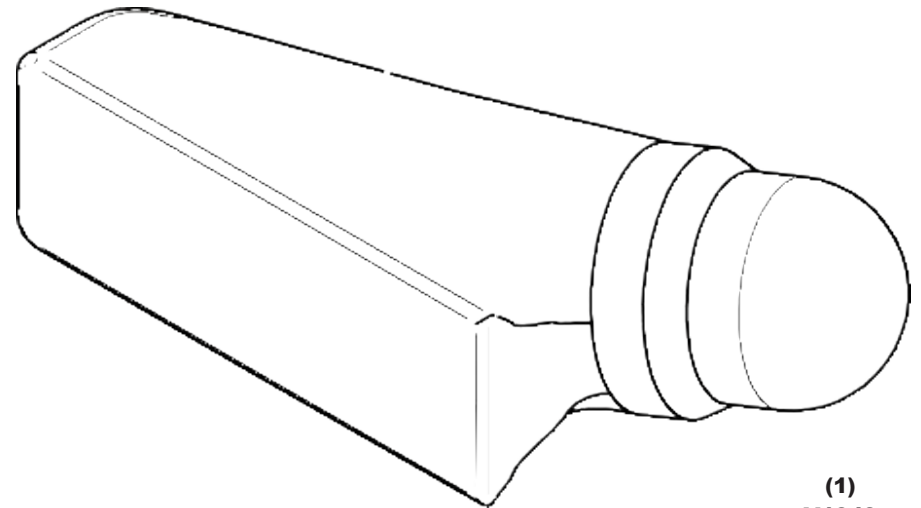

(1)  
V1049  
Universal  
Boot / Large