

PECO OWNERS MANUAL

FOR A DIXIE CHOPPER LX2002 UNIT P# Q0211



CONGRATULATIONS AND THANK YOU FOR BUYING THIS PECO LAWN VACUUM.

Your new PECO Vac has been engineered and manufactured to PECO's high standards for safety, quality, dependability, and ease of operations.

SAVE THIS MANUAL FOR FUTURE REFERENCE

MODEL 38621201 - 02 DIXIE CHOPPER LX2002-01

WARRANTY



PeCo Limited Warranty for New Products

A. WHAT IS WARRANTED?

PeCo extends the following warranties to the original purchaser of each new PeCo consumer product subject to the following limitations.

1. PRODUCT WARRANTY.

Any part of any consumer product, which is defective in material or workmanship as delivered to the purchaser will be repaired or replaced, as PeCo elects, without charge for parts or labor, if the defect appears within 12 months from the date of delivery of the product to the original purchaser. ALL DEFECTIVE PARTS MUST BE **RETURNED TO PeCo FOR INSPECTION TO DETERMINE** VALIDITY OF WARRANTY CLAIMS. Freight and mailing charges will be borne by the customer.

2. PARTS REPLACED DURING WARRANTY.

Any new PeCo part which is furnished in performance of this warranty and is defective in material or workmanship as delivered to the purchaser will be repaired or replaced, as PeCo elects, without charge if the defect appears within 90 days from the date of installation of such part or before the expiration of the original warranty period, whichever is later.

B. SECURING WARRANTY ADJUSTMENTS

Damaged or broken parts other than engines or batteries, must be returned to PeCo, Inc., P.O. Box 1197, Arden, NC 28704 before any warranty adjustment can be authorized. At the time of requesting warranty adjustment, the purchaser must present evidence of the date of delivery of the product. The purchaser shall pay any charge for transporting the product to and from Arden, NC.

C. ITEMS NOT COVERED BY PeCo WARRANTY.

Engines and batteries attached to PeCo products are covered under a separate warranty by the respective manufacturer.

D. UNAPPROVED ALTERATION OR MODIFICATION.

All obligations of PeCo, Inc. under this warranty shall be terminated if products are altered or modified in ways not approved by PeCo, Inc.

E. ACCIDENTS AND NORMAL MAINTENANCE.

The warranty covers only defective material and workmanship. It does not cover depreciation or damage caused by normal wear, accident, improper use or abuse of products. The cost of normal maintenance and normal replacement of service items such as belts, cutting blades, hoses, etc., which are not defective shall be paid for by the purchaser.

F. NO REPRESENTATIONS ADDITIONAL WARRANTIES, DISCLAIMER.

Neither PeCo, Inc. nor any company affiliated with it makes any warranties, representations or promises as to the quality of performance of its products other than those set forth herein. Except as described above, PeCo, Inc. makes no other warranties AND SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY.

G. ANY MACHINE USED FOR RENTAL OR COMMERCIAL PURPOSES ARE GUARANTEED FOR 45 DAYS FROM DATE OF ORIGINAL SALE ONLY.

H. REMEDIED EXCLUSIVE.

The only remedies the purchaser has in connection with the breach or performance of any warranty on PeCo, Inc. consumer products are set forth above. In no event will PeCo be liable for special incidental or consequential damages.

I. NO SERVICE CENTER WARRANTY.

The selling Service Center makes no warranty on his own on any item warranted by PeCo, Inc. unless he delivers to purchaser a separate written warranty certificate specifically warranting the item. The dealer has no authority to make any representation or promise on behalf of PeCo or to modify the terms of limitations of this warranty in any way.

DIXIE CHOPPER LX2002





Outdoor Power Equipment Institute Recommendations

WARNING TO PURCHASERS OF INTERNAL COMBUSTION ENGINE EQUIPPED MACHINERY OR DEVICES IN THE STATE OF CALIFORNIA:

The equipment which you have purchased does not have a spark arrester muffler. If this equipment is to be used on any forest covered and brush covered land or grass covered unimproved land in the state of California, the law requires that a spark arrester muffler be installed and be in effective working order. The spark arrester must be attached to the exhaust system and comply with Section 4442 of the California Public Resources Code.

1. Read the owner's manual carefully and familiarize yourself with the proper use of your attachment. Do not allow anyone who is not acquainted with the Safety Instructions to use your attachment.

2. Know the controls and how to stop quickly. READ THE OWNER'S MANUAL!

3. Do not allow children to operate the vehicle. Do not allow adults to operate it without proper instruction.

4. Be especially watchful of children and pets darting into the area while operating.

5. Keep your eyes and mind on your tractor while mowing or operating your attachment. Don't let others distract you.

6. Do not attempt to operate your tractor or mower when not in the driver's seat.

7. Always stop Vac engine when emptying the container.

8. Stop tractor and vac engines and remove spark plug wire before removing or replacing hose, boot, blower cone or performing any maintenance.

9. Mow up and down the face of slopes (not steeper than 10 degrees); never across the face of the slope. 10. It is recommended that the container be kept only half full when negotiating any slopes. Start mowing on slopes when the container is empty.

11. Inspect your lawn and remove any foreign objects before mowing. Never deliberately run mower across any foreign object.

12. Wear ear protection if noise level is offensive.

WARNING!

NEVER operate the mower unless the discharge guard and either the deflector assembly or the vacuum collector adapter are fastened securely in place.

WARNING!

To avoid serious injury, perform maintenance on the vacuum collector ONLY AFTER STOPPING THE TRACTOR ENGINE AND WAITING FOR ALL MOV-ING PARTS TO COME TO A COMPLETE STOP. Set the parking brake. Always remove the ignition key before beginning the maintenance

WARNING!

Do not work around the mower deck boot or the blower area until you are certain that the mower blades and the blower fan have stopped rotating.

WARNING!

For your personal safety, ALWAYS mow UP and DOWN the face of slopes and NEVER across the face. NEVER attempt to mow excessively steep slopes and use caution when turning on any slope.

MODEL 38621201 - 02 DIXIE CHOPPER LX2002-01

ASSEMBLY

STEP 1:

Losen air filter, and hose. Replace existing hose with the one provided(A), hose may have to be rotated to clear obstacles. Tighten air filter and hose. Next using the fuel line provided extend it and the fuel filter (B) to the main frame of the mower, use the two quick ties provided to attach. Next attach the exhaust adaptor (j0251) to the mowers engine's exhaust. Point exhaust adaptor openin behind the mower. Next secure using the exhaust clamp kit provided (x1046).

STEP 2:

Weight is very heavy and will require more than one person to lift into place. Remove cover (A) and place weight brackets onto the bars that is under the cover. Secure the weight using (4) $3/8 \times 21/4 \times 31/4'$ u-bolts (k1215) and (8) 3/8 flange nuts. Replace the cover over the weight.

STEP 3:

Place main frame on rear end of mower. Use (4) 3/8 x 2 3/4' x 2 u-bolts (K1436) and (8) 3/8 flange nuts (K1215). U-bolts will wrap around side tubes on the mower.









ASSEMBLY



STEP 4:

Slide the outer engine mount tube (A) under the rear rear of the mower. Fasten using (2) 3/8 x 2 3/4 x 4 5/8 u—bolts (K1099) and (2) engine mount brackets (b2583) (4) 3/8 flange nuts (K1215). Then slide the motor mount arm assy. (B) into the outer engine mount. Insert detent pin (J0248).





STEP 5:

Place engine onto the motor mount arm and fasten using $(4) 5/16-18 \times 1-1/2$ hex bolts (K1157) and (4) 5/16 flange nuts Make sure to tighten nuts and bolts to decrease vibration.



STEP 6:

First bolt on the boot plate to the boot by using (2) 3/8 x 1' carriage bolts (K1182) and (2) 3/8' flange nuts (K1215). Bolt the deck boot mount onto the deck, then hook the boot plate onto the boot mount as shown in the picture. Be sure the boot plate is adjusted forward to prevent gaps



MODEL 38621201 - 02 DIXIE

DIXIE CHOPPER LX2002-01


PARTS LIST



REF. NO.	PART NO.	DESCRIPTION	QTV.
$ \begin{array}{c} 1 \\ 2 \\ 3 \\ 4 \\ 5 \\ 6 \\ \end{array} $ $ \begin{array}{c} 7 \\ 8 \\ 9 \\ 10 \\ 11 \\ 12 \\ 13 \\ 14 \\ 15 \\ 17 \\ 18 \\ 19 \\ 20 \\ 21 \\ 22 \\ 23 \\ 24 \\ 25 \\ 26 \\ 27 \\ 28 \\ 29 \\ 30 \\ 31 \\ 32 \\ \end{array} $	B1696 B1719 E1121 J6006 ****** E6009 ****** E4052A D1016 A0914 D4002 A0645 J6011 ****** V1054 HB0049 A0794 A0113 A1029 B1117 A0223 B1668 C0023 C0025 B8113 C0029 C1184 B3379 J0522 J0176 B2213 A0973 B2526 K1422 K1418 B3388 C0024	BOOT PLATE DECK BOOT MOUNT BOOT 7"-8" HOSE CLAMPS 8" $ u 29"$ LOWER HOSE 8" BLOWER CONE ENGINE/BLOWER/BLADE ASSEMBLY BLOWER HOUSING 6HP KOHLER ENGINE 4 BLADE IMPELLER W/ S4302 BUSHING W/ 1" SHAFT 5.5HP BRIGGS & STRATTON ENGINE 4 BLADE IMPELLER W/ S4311 BUSHING W/ 3/4" SHAFT 5"-6" HOSE CLAMPS 6" $ u$ 31" UPPER HOSE INLET HARDWARE BAG 12 CUBIC FOOT BOX ASSEMBLY MAIN FRAME ASSEMBLY ENGINE MOUNT ASSEMBLY OUTER ENGINE MOUNT WEIGHT ASSEMBLY INLET CLAMP ALUMINUM BOX BACK & SIDES ALUMINUM BOX TOP SCREEN SCREEN SUPPORT FILL GUAGE DUMP HANDLE HANDLE GRIP LATCH SPRING LATCH ROD ADJUSTING SCREW ASSEMBLY LINKAGE PIN LATCH BRACKET ALUMINUM BOX BOTTOM	
33 34 35 36 37 38	A0938 V1131 B3688 B3387 B2590 A0738	BOX / DOOR FRAME ASSEMBLY PLASTIC DOOR UPPER DOOR MEMBER BOX SUPPORT / HINGE ASSEMBLY BOTTOM MOUNT PLATE DOOR FRAME ASSEMBLY	1 1 1 1 1


PARTS DIAGRAM



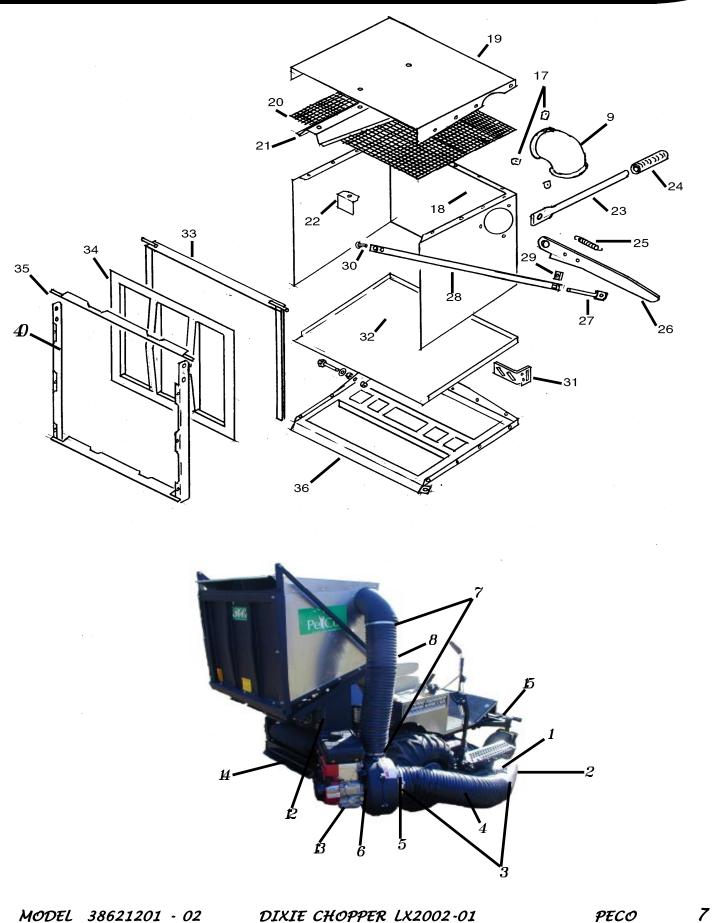

ASSEMBLY



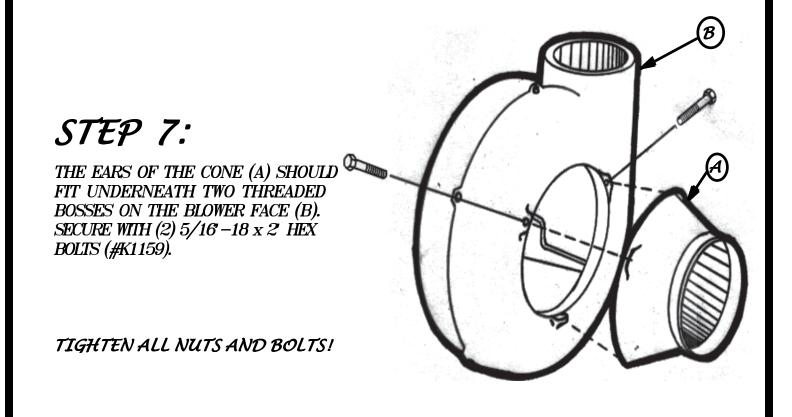

IMPELLER BLADE REPLACEMENT


TO REMOVE: REMOVE HEX BOLTS FROM HUB THEN SCREW THE BOLTS INTO THREADED HOLES TO REMOVE OLD BLADE. (THIS WILL PUSH IMPELLER OFF THE HUB.) IF THE IMPELLER IS STUCK ON HIT THE BASE OF THE IMP- ELLER BETWEEN EACH VEIN WITH A HAMMER THEN TRY THE BOLTS AGAIN. TO REPLACE: PLACE TAPERED BUSHING (A) INTO HUB (B) AND ALIGN NON-THREADED HOLES IN THE HUB. SECURE WITH (2) 1/4' x 1' HEX BOLTS. TORQUE TO 15 FT. IBS	






STEP 8:

PLACE CLAMPS OVER EACH END OF THE 6' HOSE (A). ATTACH ONE END OF THE HOSE ONTO THE BLOWER HOUSING (B). ATTACH FREE END OF HOSE OVER INLET (C). TIGHTEN CLAMPS.

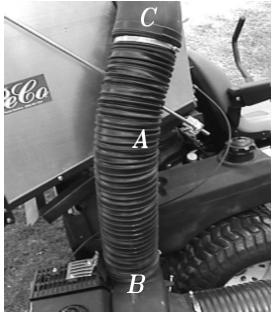

STEP 9:

PLACE CLAMP OVER EACH END OF THE LOWER HOSE (D). ATTACH ONE END OF HOSE OVER THE BLOWER CONE (E). SLIDE FREE END OF HOSE OVER BOOT (F) AND TIGHTEN CLAMPS.

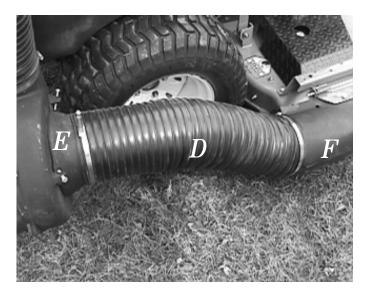

TIGHTEN CLAMPS BEFORE EACH USE!

MODEL 38621201 · 02 DIXIE CHOPPER LX2002-01

9

MAINTENANCE



Your Lawn Vac was designed and built to provide years of service with only minor care. Certain tasks however must be performed to keep it in good operating condition and to avoid costly repairs. This section describes and provides procedures for the necessary care of the Lawn Vac.

SCHEDULED CARE		
Before Each Use	Check engine oil. Check all hose connections.	
After Each Use	Clean Collector Box, hoses and engine of all grass and dirt.	
Every 10 Hours	Check to be sure all screws, nuts, bolts, pins, etc. are present and secure.	

Storage

Never store your Lawn Vac with a full or partially filled container; decaying grass and leaves may constitute a fire hazard if left too long. Never leave your vac exposed to the elements. While the metal parts are protected with a quality paint, the engine and other unprotected parts may deteriorate if left exposed to rain or snow.

Emptying The Lawn Vac

When the collector becomes full, the blower tone will change. In order to empty the container - Release the back door by moving the

dump handle on the left hand side of the container. Release the door, push back on the container and the debris falls out. When empty, pull the box forward; move the dump handle in to properly close the rear door.

Service

PeCo Lawn Vac Owners should record the name and telephone number of their Service Center Your Service Center will be happy to supply replacement parts, accessories and do any service or repairs to your lawn vac. If for some reason your Service Center is unable to service your lawn vac or supply replacement parts, contact PeCo and include the following information:

Tractor Model:	Year of Mfg.	
Deck Size:		
PeCo Vac Model:		
Vac Serial Number:		
Date of Purchase: / /		
Service Center's Name:		
Service Center's City:	State:	Zip:
Service Center's Phone Number:		
O MODEL 38621201 - 02 DIXIE CHOPPER	LX2002	PECO

TROUBLE SHOOTING



Diagnostic Procedures

Trouble shooting procedures are provided in the chart below. To use these procedures, first locate the problem description that best describes the trouble that you have encountered. Check the possible causes one at a time in the list. Correct any problems that are found and operate the vacuum collector again to verify that you have eliminated the problem. DO NOT attempt any major repairs without first contacting your dealer.

PROBLEM	CAUSE	SOLUTION
Leaves and Grass not being picked up completely.	 Engine speed too slow Ground speed too fast. Hose plugged. 	A. Run at full throttle. B. Use lower gear C. Check and tighten all hoses. D. Unplug hose.
Hoses plug easily.	 Grass or leaves too wet. Grass too high. Container full. Grass buildup in boot or under mower deck. 	A. Wait for drier conditions. B. Reduce ground speed/raise deck C. Empty container D. Clean thoroughly.
Vacuum Collector blower vibrates excessively.	1. Buildup on blower blades. 2. Bent or chipped blade.	A. Remove cone and clean blades. B. Contact your dealer or PeCo.
Unit fails to fill box.	 Engine speed too slow. Buildup on inlet or screen Grass is too wet or long. 	A. Run at full throttle. B. Clean thoroughly. C. Wait for dryer conditions.

The Serial Number Plate is located on the aluminum box near the dump handle.

OUTDOOR POWER EQUIPMENT
Model Number
Serial Number
Arden, North Carolina 28704





P.O BOX 1197 ARDEN, NORTH CAROLINA 28704 1-800-438-5823 OR (828) 684-1234 FAX-(828) 684-0858 E-MAIL: PECO@IOA.COM

REVISED: 12/4/00

MODEL 38621201 - 02

DIXIE CHOPPER LX2002